



POWERFRESH[®] LIFT-OFF[®]
2 IN 1 STEAM MOP

1544 SERIES

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR STEAM MOP.

When using an electrical appliance, basic precautions should be observed, including the following:
Always connect to a polarized outlet (left slot is wider than right). Unplug from outlet when not in use and before conducting maintenance.

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » Children should be supervised to ensure that they do not play with the appliance
- » If the cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
- » Use extra care when cleaning on stairs
- » Do not use with damaged cord or plug
- » Do not use outdoors
- » Always turn off this appliance before connecting or disconnecting the nozzle. Do not direct steam at people, animals, or at electrical outlets.
- » Do not expose to rain.
- » Store indoors.
- » Unplug from outlet when not in use and before conducting maintenance or troubleshooting.

- » Do not leave steam cleaner unattended.
- » Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- » Do not service steam cleaner when it is plugged in.
- » Do not handle steam cleaner with wet hands.
- » Do not use steam cleaner if it has been dropped, damaged, left outdoors or dropped into water, return it to a service center.
- » Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, or expose cord to heated surfaces.
- » Do not unplug by pulling on cord.
- » Do not use appliance in an enclosed space filled with vapor given off by oil-base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- » Do not allow to be used as a toy.
- » Do not use on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.
- » Do not immerse in water or liquid.
- » Not for space heating purposes
- » Do not use for any purpose other than described in this User's Guide.
- » Use only manufacturer's recommended attachments - use of attachments not provided or sold by BISSELL may cause fire, electric shock or injury.
- » Never put descaling, aromatic, alcoholic, vinegar, or detergent products into the steam cleaner, as this may damage it or make it unsafe for use.
- » Unplug by grasping the plug, not the cord.
- » Close attention is necessary when used by or near children.
- » When using the steam pod, never leave it standing upright, unattended.

SAVE THESE INSTRUCTIONS FOR FUTURE USE

This model is for household use only.

THIS APPLIANCE HAS A POLARIZED PLUG

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

 
Thanks for buying a BISSELL hard floor cleaner

We're glad you purchased a BISSELL hard floor cleaner. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL hard floor cleaner is well made, and we back it with a limited two-year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL hard floor cleaner.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
Chairman & CEO


Safety Instructions.....	2
Product View.....	4
Assembly.....	5
Operations.....	5-8
Maintenance & Care.....	9
Troubleshooting.....	10
Warranty.....	11
Service.....	11
Consumer Care.....	12

Product View

- 1 Handle
- 2 Cord Clip
- 3 25' Power Cord
- 4 Water Cup
- 5 Easy Touch Digital Controls™ - LQ/Hi Steam
- 6 Water Tank with Easy Fill Opening
- 7 EasyScrubber™

These tools vary by model

 - 8 Microfiber Mop Pads*
- 9 Carpet Glider*
- 10 Scent Discs*
- 11 Extension Hose*
- 12 Window Squeegee*
- 13 Flat Surface Tool
- 14 Brass Bristle Brush*
- 15 Fabric Tool*
- 16 Kitchen Brush - Green*
- 17 Bathroom Brushes - Red/Black*
- 18 Tool Connector
- 19 Angle Concentrator*
- 20 Grout Brush*
- 21 Flat Scraping Tool*

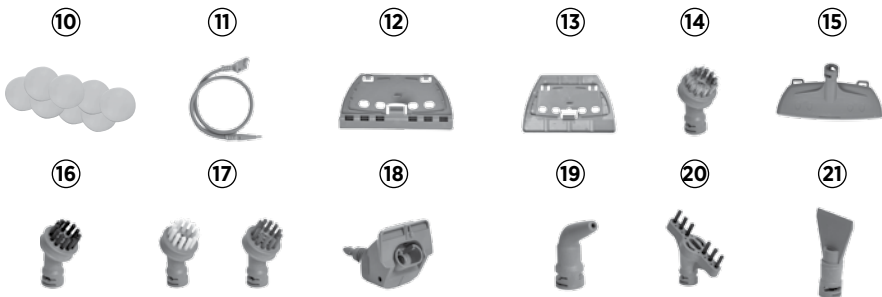

* varies by model

⚠ WARNING
Plastic film can be dangerous. To avoid danger of suffocation, keep away from babies and children.

 
⚠ WARNING
Do not plug in your hard floor cleaner until you are familiar with all instructions and operating procedures.

⚠ WARNING
To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

Assembly

To assemble the unit

1. Insert the body into the foot until you hear the locking tab click.
2. Insert handle into the top of the body.
3. In the middle hole on the left side on the unit insert the provided screw and tighten.

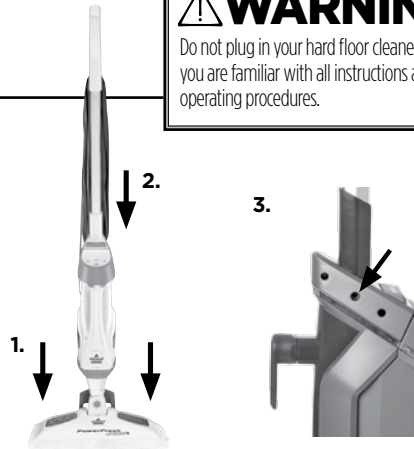

WARNING

Do not plug in your hard floor cleaner until you are familiar with all instructions and operating procedures.

Operations

Special Features

Easy Touch Digital Controls™

The fingertip power controls are located on the front of the LiftOFF Pod. Settings include:

(ON/OFF) Allows you to turn on or shut down the steam. Select the ON/OFF button before choosing the Hi or Lo steam setting.

High steam Use for durable floors or on sticky messes. To turn steam on, press once. Click again to turn steam off.

Low Steam Use on delicate floors or for light, everyday cleaning. To turn steam on, click once. Click again to turn steam off.

Microfiber Mop Pads

Reusable microfiber mop pads are machine washable and safe for virtually all hard floor surfaces. The white microfiber pad is best for everyday use on delicate flooring like sealed hardwoods and laminate. The gray and white striped pad can be used for scrubbing heavily soiled floors and cleaning tougher messes.

Removable Easy Scrubber

Quickly clean sticky messes by pressing the Easy Scrubber with your foot and locking it into position. Clean grout and crevices easily with this effective tool.

WARNING

Exercise extreme care when using your steam mop on hardwood floors. Prolonged application of steam in one area increases the risk of damage to the surface treatment on timber floors. Test steam mop in an inconspicuous area before mopping a large area. The steam mop generates hot steam, so move the unit continuously when depressing the trigger. Regular foot traffic and direct sunlight will wear down wood floor surface treatment, making it more susceptible to steam damage. Check with your timber floor treatment and application specialist prior to steam mop operation.

Tip

» Do not attempt to use your hard floor cleaner on the steam setting without water in the tank. You may hear a knocking sound indicating there is no water.

Operations

Getting Ready

The mop pad may have already come attached to the foot of the unit. If not, follow step 1 below.

1. Attach mop pad by setting the foot of the unit in the mop pad, making sure the quick-grip release tab is located in the back.

2. Fill the water tank.

a. On the side of the unit, open the Easy Fill opening of the water tank and use the included water cup to fill the water tank with water. Don't overfill or water may spill from the tank. For best results, water should be at room temperature.

b. Close the Easy Fill opening.

c. The water tank holds 13 oz. and will last up to 23 minutes depending on the setting selected.

NOTE: Do not use chemicals in the water tank of your Lift-Off Steam Mop.

3. Pull and twist the Quick Release™ cord wrap clockwise to unwrap the power cord completely and plug into an outlet as described on the Important Safety Instructions on page 2.

NOTE: Upon the first use of your steam mop or first use after refilling the water tank, the pump may make a 'knocking' sound. This is normal and will diminish after 30 seconds.

4. **Add Scent Disc:** Remove disc from plastic packaging. Control the amount of fragrance by either placing the entire disc in the pocket of the pad OR break the disc in half inside the packaging then remove and place half of disc in pad for less fragrance. Pull pad on steam mop and clean according to the manufacturer's directions. Not intended for use on carpet.



WARNING

Tinted plates on foot may get hot while steam mop is in use. Do not touch while hot.

WARNING

Never put descaling, alcoholic, vinegar, or detergent products into the steam cleaner, as this may damage it or make it unsafe for use.

Tip

» Use of distilled or demineralized water is recommended to prolong the life of your hard floor cleaner. To add a fresh scent as you clean, try BISSELL demineralized waters in various scents like Citrus, Eucalyptus Mint and Spring Breeze.

Operations

Using Your Steam Mop

The hard floor cleaner can be used either on hard floors or above the floor using the specialized tools. For best results, vacuum the floor first to clear dust and small debris before using your steam mop.

Your hard floor cleaner is designed to clean hard flooring, such as ceramic tile, marble, stone and sealed hard wood floors. Use on waxed or some unwaxed floors may result in a diminished glossiness. The hard floor cleaner is not for use on unsealed wood floors. For best results, test in an inconspicuous area and check the care instructions from your flooring manufacturer.

1. Plug the unit in and wait 30 seconds for it to heat up. When the Steam Ready light illuminates, press the ON/OFF button to turn the unit ON then choose the level of steam to clean your floor:

HI (for durable floors or sticky messes) or
LO (for delicate floors or every day cleaning).

2. Once the level is selected the steam will start.

3. Begin cleaning by slowly moving the unit over the floor surface. Moisture on the floor is normal when cleaning.

 
4. When the hard floor cleaner stops emitting steam and you hear a “knocking” sound, turn the unit off and unplug. Then open the easy fill opening on the water tank and use the water cup to add water to the tank after lying the unit down per another side.

NOTE: To be sure to sanitize an area of your floor, use the microfiber cloth pads and slowly and evenly stroke your steam mop back and forth at least three times over the area using continuous steam. For best results, remove the pad and wash after use.

1.



Steam Ready Light

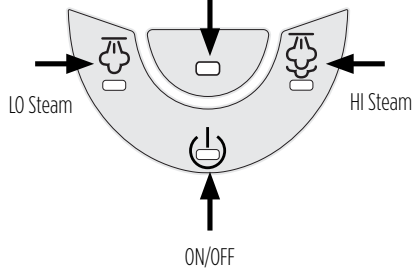

ON/OFF

Operations

Using the Lift-Off Pod








1. Before releasing the steam pod, first hit the "On/Off" button to turn off steam and wait 10 seconds.
2. Release the pod by pressing the Lift-OFF button on top of the body and pulling the pod out.
3. If using a specialized tool to clean, first attach the tool connector (image to the right) then attach the appropriate tool by sliding on the tool to the the tool connector and locking into place by turning the tool.
4. The matrix below identifies each tool and what the tool can be used for:



CAUTION

When removing the steam pod, built up steam may be released. To avoid possible contact with steam, wait 10 seconds after turning unit off before removing the pod or tools.

NOTE: When using the Lift-OFF pod, lay down the pod horizontally to avoid the pod falling over when leaving it on a table top or flat surface.

Tool	Function	Image
Flat Surface	Steam counter tops and other smaller areas	
Fabric Steamer	Refresh your clothes and other fabrics	
Round, Detail Brush	Clean around sinks and appliances	
Grout Brush	Clean Grout	
Flat Scraping	Scrape food, toothpaste, or other stuck on messes	
Angle Concentrator	Shoot steam into crevices or small areas and wipe clean	
Window Squeegee	Cleaning windows and doors	

Maintenance & Care

Removing All Mop Pads

1. Unplug hard floor cleaner from electrical outlet.
2. Carefully remove mop pad from the foot of the unit using the Quick Release™ Tab. The mop pad and tray may be hot.
3. The mop pad can be machine washed in warm water. Use only liquid detergents. Do not use fabric softeners or bleach. For best results, air dry.



WARNING

To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

CAUTION

Upright storage of the cleaner with a wet mop pad may result in the formation of white marks on your floor. To remove the white marks, clean area with vinegar.

Troubleshooting

WARNING

To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

Problem	Possible causes	Remedies
Reduced steam or no steam	Water tank empty	Fill tank
	Steam level not selected	Select steam level by pushing steam level button
	ON/OFF button not pressed	Select by pushing the ON/OFF button once Ready Light illuminates
	Pod not assembled into pocket correctly	Make sure Lift-Off pod is securely pushed into place
No Steam to Lift-Off	Tool or Hose connector is not installed	Install Tool or Hose connector and tool to use

Please do not return this product to the store.

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

For any questions or concerns, BISSELL is happy to be of service. Contact us directly at 1-800-237-7691.

Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by Email, telephone, or regular mail as described below.

Limited Two-Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for two years any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE TWO YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you.

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.

Service

If your BISSELL product should require service:

Visit BISSELL.com or contact BISSELL Consumer Care to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Care.

Website or Email:

www.BISSELL.com

Or Call:

BISSELL Consumer Care
1-800-237-7691

Monday - Friday 8am - 10pm ET

Saturday 9am - 8pm ET

Sunday 10am - 7pm ET

Register your product today!

Registering is quick, easy and offers you benefits over the lifetime of your product.

You'll receive:

BISSELL Rewards Points

Automatically earn points for discounts and free shipping on future purchases.

Faster Service

Supplying your information now saves you time should you need to contact us with questions regarding your product.

Product Support Reminders and Alerts

We'll contact you with any important product maintenance reminders and alerts.

Special Promotions

Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit www.BISSELL.com/registration!

BISSELL Consumer Care

For information about repairs or replacement parts, or questions about your warranty:

Call:

BISSELL Consumer Care
1-800-237-7691

Monday - Friday 8 am - 10 pm ET
Saturday 9 am - 8 pm ET
Sunday 10am - 7pm ET

Email:

www.BISSELL.com/email-us

Visit the BISSELL website: www.BISSELL.com

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____

Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 11 for details.

Parts & Supplies

For Parts & Supplies, go to BISSELL.com and enter your model number in the search field.



©2017 BISSELL Homecare, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 161-1632 01/17 RevA
Visit our website at: www.BISSELL.com