


**3M**17086S
command.com**To Apply**


1
CLEAN surface with isopropyl rubbing alcohol, wipe gently, let dry. Do not use household cleaners. SEPARATE strips.




2
REMOVE RED liner. PRESS adhesive to hook.

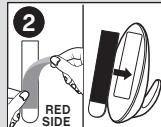


3
REMOVE BLACK liner.

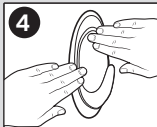


4
PRESS to surface for 10 seconds.

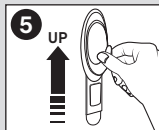

5
UP
IMPORTANT: For maximum holding strength slide hook off.

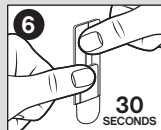


6
And press base FIRMLY for 30 seconds.

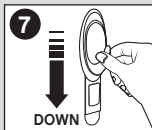

7
DOWN
Slide hook ON.



8
Wait 1 hour before use.

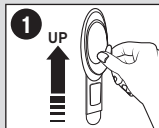To Remove


1
UP
Slide hook up to remove from mounting base.



2
NEVER pull strip towards you.



3
SLOWLY
STRAIGHT DOWN
Hold base gently to prevent base from snapping fingers. DO NOT press base against wall.

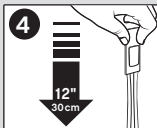

4
STRETCH STRAIGHT DOWN ALONG WALL AT LEAST 12 INCHES (30 cm) until base and strip release.

IMPORTANT: Failure to follow instructions carefully may cause damage!
SAVE INSTRUCTIONS for damage-free removal or visit command.com

For questions, ideas and special offers go to command.com

CAUTION:

DO NOT use with wallpaper. May not adhere well to vinyl surfaces. DO NOT use for antiques, heirlooms, or other valuable or irreplaceable items. DO NOT hang items over beds. Use only one hook per item hung.

NOTE:

Apply to surfaces above 50°F (10°C). Adhesive could lose adhesion above 105°F (40°C).

Not intended for picture hanging. Instead use Command® Picture Hanging Strips, Sawtooth or Wire-Backed Hangers.

Hooks can be reused with Command® Medium Strips.

The following statements only apply to products distributed in the USA.

Limited Warranty:

This 3M product will be free from defects in material and manufacture. If this product is defective, your exclusive remedy shall be, at 3M's option, replacement of the product or refund of the purchase price.

Limitation of Liability:

3M will not be liable for any loss or damage arising from this product, whether direct, indirect, special, incidental or consequential.