



## Occupancy & Vacancy Sensors

**SAVANT** INC, MLV  
Sensor Dimmer OS106D1, VS106D1 Single-Pole

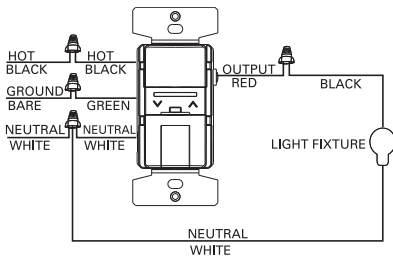


**Standard Series** INC, FLR  
Sensor 6105 Single-Pole

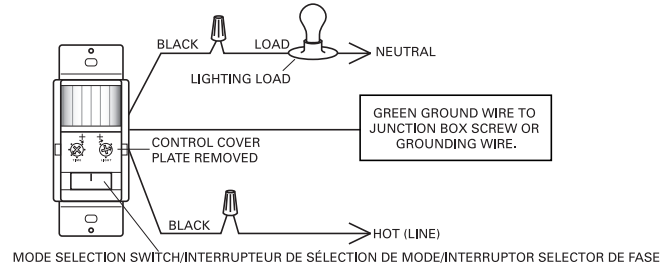


**Standard Series** INC, FLR  
Sensor 6107 Single-Pole


FOR SINGLE SWITCH INSTALLATIONS, CONNECT THE WALL SWITCH AS SHOWN HERE.

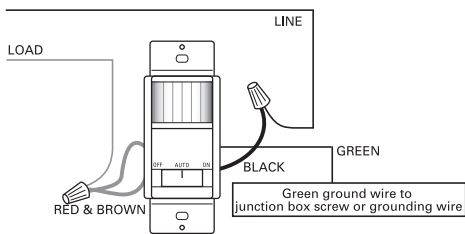


**Standard Series** INC, FLR  
Sensor 6107 3-Way

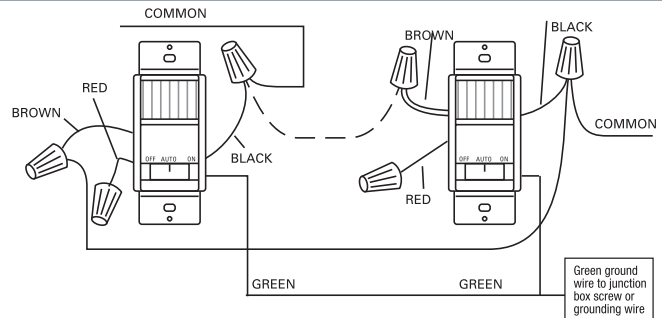

**Standard Series** INC, FLR  
Sensor VSIR04 Single-Pole

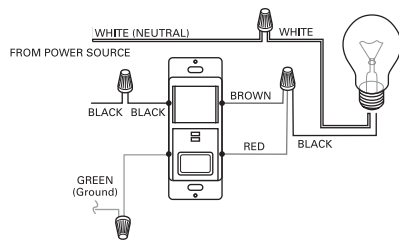

**Standard Series** INC, FLR  
Sensor VSIR04 3-Way

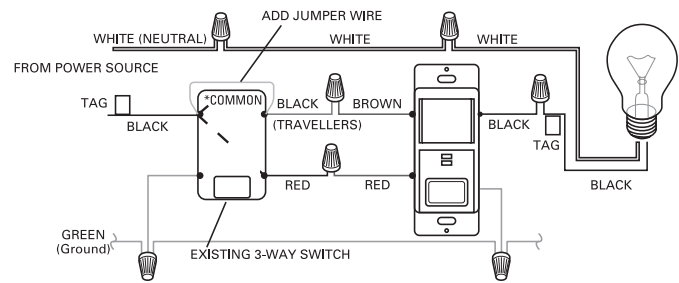

## Timers

**ASPIRE, ACCEL** INC, FLR, C FLR, LED, MLV, ELV  
Timers 9590, 9591, PT18M, PT18H Single-Pole

