




# GOOD GRIPS

## Multi-Grater

Use Multi-Grater on a cutting board or plate. Non-slip feet keep it firmly in place, even when wet.

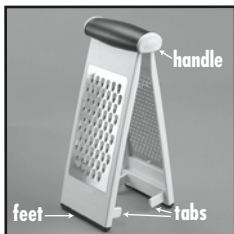


Multi-Grater has a soft rubber handle that reduces pressure on your hands, and is non-slip, even when wet.

Use Multi-Grater with any bowl. Hook the tabs on the outside edge of a bowl, while resting the rubber foot on the inside of the bowl.



Multi-Grater secures at the perfect angle for grating. Use large holes for coarse grating and small holes for fine.

Grater comes apart for easy cleaning. To disassemble, gently slide one grater panel at a time out of the handle. To reassemble, slide the panels back in.

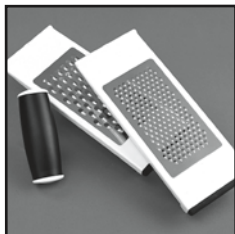

All pieces are dishwasher safe, top or bottom rack. Multi-Grater folds compactly for easy storage.