

24846 - LA-ARCHL-4/12 Operating instructions and Precautions 04192102

Please Note: Disconnect the “Try Me” button and leads by pulling the small white plug out of the battery pack and discard. Replace the “Try Me” plug with the small port cover plug included in a small bag.

Operation: Repeatedly press the power button on the battery pack to cycle between high and low brightness modes, white flashing mode and off.

Battery Replacement: Pull back on the battery compartment cover latch and remove the cover. Remove the batteries and replace them with 3 AAA alkaline batteries following the diagram inside. Replace the cover and push down until it snaps into place.

Caution: Replace all batteries at the same time. Do not install batteries backwards, charge or put in fire. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) Batteries. This may cause batteries to leak or explode. Old or discharged batteries must be recycled or disposed of properly, according to local regulations.

Warning! To prevent serious injury, including temporary or permanent loss of sight do not stare into the light, shine light into eyes or focus the beam using an additional lens. Keep away from infants and toddlers as this product contains small parts.

This product is not a toy! Use this light only as it is intended. Inspect before every use. Do not use if parts are damaged, loose or missing.

Save these safety precautions!