 
 




## FCC Statements



A900



A900i

**Note:** Changes and modifications not expressly approved by the party responsible could void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

**NOTE:** This device complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this device does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



[www.moultriefeeders.com](http://www.moultriefeeders.com)

PRADCO Outdoor Brands • 3280 Highway 31, Ste. B • Calera, AL 35040

11062019 / MCG-14001 • MCG-14002



 
## MOULTRIE® A900 SERIES GAME CAMERA INSTRUCTIONS

THANK YOU for your purchase of an A-Series Digital Game Camera. Please read this booklet before using the unit. If you have any questions about this product or any other Moultrie product, please contact us using the information provided on page 7 of this booklet.

### MOULTRIE®

#### Table of Contents

|                      |   |
|----------------------|---|
| Easy Setup.....      | 2 |
| Important Notes..... | 2 |
| Mounting Camera..... | 3 |
| Setup Mode .....     | 4 |
| Time & Date .....    | 5 |
| Detection Delay..... | 5 |
| Capture .....        | 5 |
| Camera ID .....      | 6 |
| Erasing Images.....  | 6 |

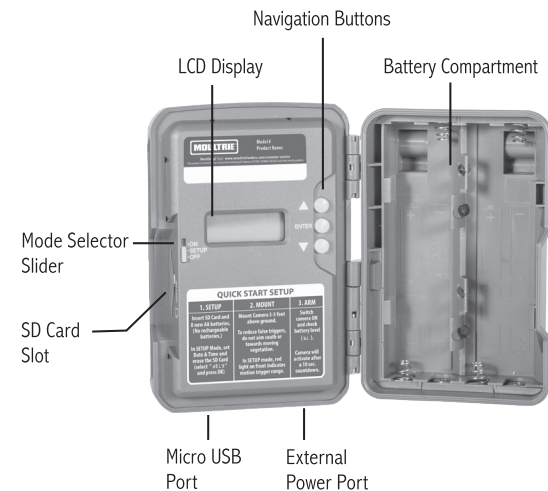

Please register your camera at [www.moultriefeeders.com/warranty](http://www.moultriefeeders.com/warranty) to activate your warranty.



## EASY SETUP INSTRUCTIONS



Open the camera cover and install eight (8) AA batteries in the battery compartment. Follow the + and - polarities as indicated.



Insert the SD Card into the SD Card slot as shown. You will hear an audible click when the card is fully inserted.



Slide the Mode switch to the SETUP position, press the ENTER button to begin editing the time. Use the ^ (UP) / v (DOWN) buttons to adjust the hour digits. Press ENTER to select. Repeat to set minutes, press ENTER to set correct time. Select AM/PM, press ENTER to continue.



Slide the Mode switch to the ON position. The battery level will appear on the LCD screen and the camera is ready for use.



### Important Notes:

- We recommend the use of SDHC Class 10 SD cards up to 32 GB; camera will not operate without an SD card installed.
- If you have a 12V power source plugged into bottom of unit, leave batteries installed. They will act as a backup if power is lost.
- If the camera detects the battery level is 15% or below, the Low Battery screen (bL:LO) will show on display and the unit will turn off.
- Do not mix old and new batteries. See important battery info on page 7.

### Important Battery Information

- Only use Alkaline or Lithium batteries. We recommend the use of Energizer™ or Moultrie batteries.
- Do not mix old and new batteries. Do not mix alkaline, lithium, or rechargeable batteries. Always replace ALL the batteries at the same time.
- When the camera is not in use, please remove the batteries.

### Moultrie Limited Warranty

This product has been thoroughly tested and inspected before shipment. It is guaranteed from defects in material and workmanship from the date of purchase for 1 year. The warranty is extended to 2 years if the product is registered within 60 days of purchase. Under this limited guarantee we agree to replace or repair free of charge any parts which have been found to be defective in original material or workmanship. Should you require in-warranty service, contact us at

[www.moultriefeeders.com/support](http://www.moultriefeeders.com/support).

You must register your camera at [www.moultriefeeders.com/warranty](http://www.moultriefeeders.com/warranty) to activate your 2-year warranty.

### Troubleshooting

Please visit [www.moultriefeeders.com/support](http://www.moultriefeeders.com/support) for troubleshooting and helpful tips.

### Returns and Repairs

Please visit [www.moultriefeeders.com/return-policy](http://www.moultriefeeders.com/return-policy) and complete the form or our Service Department will gladly answer any questions you have.

### Moultrie Mobile® Compatibility

Your camera is compatible with our Moultrie Mobile® cellular service when combined with the Moultrie® Field Modem.

Please visit [www.moultriemobile.com](http://www.moultriemobile.com) for more information.



### 3. CAMERA OPTIONS SETUP (cont.)



#### CAMERA ID

Use the **▲ (UP)** / **▼ (DOWN)** buttons to choose between 1-9 to set a camera ID number. Images captured via your camera will display the camera ID number. Press **ENTER** to lock in your selection.



#### Erasing Images/Resetting Picture Count

Use the **▲ (UP)** / **▼ (DOWN)** buttons to change the display to "dELY" (Delete Yes). When the display shows "dELY" pressing **ENTER** will reformat and delete all images stored on the SD card.



#### MANAGED MEMORY

Select "ON" or "OFF". Selecting "ON" will cause the oldest files to be overwritten with new images when the SD card reaches full capacity. Selecting "OFF" will disable the camera from saving images once SD Card capacity is full.



6

### MOUNTING CAMERA

#### Mounting with Strap

 
 
Thread mounting strap through slots on back of camera case. Mount camera to a tree or pole approximately three (3) feet from ground. May need to adjust for uneven terrain.



3 ft.

#### Tips:

Face the camera North or South to avoid overexposure from the sun. Clear brush away from the front of the camera to avoid false-movement triggers. When covering a game trail, face camera looking down the trail instead of directly at it (see graphics below).

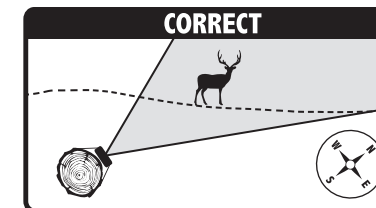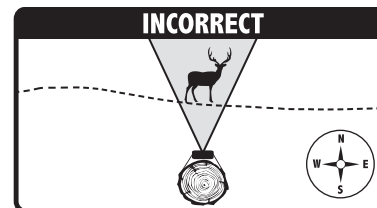

3

## 1. CAMERA OPTIONS SETUP



### POWER ON

Slide the Mode Switch to the **ON** position. The battery level (bL) will appear on the LCD screen for two seconds then the camera will display a countdown. When the countdown reaches 00:00 the display will turn off and the camera will be in Capture Mode.



### SETUP MODE

Slide the Mode Switch to the **SETUP** position.

**NOTE:** While in **SETUP** mode, the camera will turn on the **STATUS LED** for one second when motion is detected. You can use this feature to ensure the camera is properly aimed to detect movement in the desired target area.

#### Setup Mode Menu Guide

**SET TIME** 00:00 Hour :00 Minute AM/PM Time Set  
**SET DATE** 00:00 Month :00 Day 0000 Year Date Set  
**OPTIONS** Detection Delay Capture Mode Camera ID Erase Images

 
 
4

## 2. CAMERA OPTIONS SETUP (cont.)



### TIME AND DATE

Once time is displayed, press the **ENTER** button to begin editing time. Use the **Λ (UP) / V (DOWN)** buttons to adjust the hour digits. Press **ENTER** to select. Repeat to set minutes, press **ENTER** to set time entered. Select AM/PM, press **ENTER** to continue. Repeat to set the month, day and year.



### DETECTION DELAY

Next, set the amount of time between pictures when motion is detected. Use the **Λ (UP) / V (DOWN)** buttons to choose between 0, 15, or 30 seconds and 1 or 5 minutes. Press **ENTER** to lock selection and continue setup.



### CAPTURE MODE

Use the **Λ (UP) / V (DOWN)** buttons to change the camera capture mode. Press **ENTER** to lock selection and continue to Camera ID setup.

#### Capture Mode Options

|    |   |                           |
|----|---|---------------------------|
| Lo | 1 | 1 Photo, Low Resolution   |
| Hi | 1 | 1 Photo, High Resolution  |
| Lo | 3 | 3 Photos, Low Resolution  |
| Hi | 3 | 3 Photos, High Resolution |
| Hi |   | High Resolution Video     |
| Lo |   | Low Resolution Video      |

5