

200cc EXTRACTION & FILL PUMP

Stock Number W54173

OWNER'S MANUAL



INSTRUCTIONS:

To use as an extractor or fill pump.

1. Insert one end of the clear hoses into the Quick Grip hose coupler on the front of the extractor.
2. Determine if the additional length of hose is needed, remove cap and insert hose coupler.
3. Remove cap and insert the other end into the liquid needing to be extracted.
4. Once the desired amount of liquid is drawn re-cap the tube to prevent leakage.

NOTE:

After siphoning brake fluid, or flammable liquids, it's very important to disassemble and clean the pump. Flammable liquids will dry out the O-ring seals and cause the pump not to function properly.

Cleaning Instructions:

Usually flushing the pump and hoses with hot water is all that is needed for cleaning. For a more thorough cleaning, the pump can be disassembled, without the use of tools. Mild soap and water works well, or something that cuts grease and oils.

▲WARNING!

READ, UNDERSTAND AND FOLLOW ALL INSTRUCTIONS AND WARNINGS BEFORE OPERATING THIS TOOL. FAILURE TO DO SO MAY RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

PT

Performance Tool

Performance Tool®