Did You Know?





Eraser Daddy's white PowErase® side works best to spot clean hard surfaces such as shoes, walls, doors and baseboards. Test on a small area with light pressure first.*



Just Add Water

To activate the PowErase® material, dampen with water and squeeze out excess before use.



Use Less Chemicals

Eraser Daddy removes dirt, soap scum and scuffs with just water—no need to add household cleaners. Avoid use with bleach.



Color-Coded Cleaning

Multiple colors help reduce the chance of accidental cross-contamination.



FlexTexture®

Warm water creates a **soft** and compressible scrubber, perfect for accessing tight areas. When the cleaning gets tough use **cool** water to **firm** up the FlexTexture[®] side.



Scratch Free Side

Eraser Daddy's scrubby FlexTexture® side safely removes surface debris on more than a dozen different applications around your home (visit scrubdaddy.com/faqs/ for the complete list)!



Eraser Daddy will wear down as you use it.
To extend the service life, remove the majority of the debris with the FlexTexture® side and use the soft PowErase® sparingly to finish.

*Warning

Avoid accidental damage or personal injury! Do not use on your body or skin, which will cause abrasions. Keep out of reach of children and pets to prevent ingestion. Always test a small inconspicuous area first. Eraser material can scratch or mar some surfaces. Not for use on soft plastics, non-stick coatings, finished or unfinished wood, automobile finishes, stainless steel, copper, leather, or bare skin. Do not use with chlorine bleach or household cleaners. After using on a surface that may contact food, rinse that surface thoroughly to remove any residue.









