

WARNING

Turn off electrical current to the unit before attempting any service work. If you are unfamiliar with methods of installing electrical wiring, secure services of a qualified electrician. All electrical connections must be in accordance with local codes, ordinances or national electrical codes.

WIRING INSTRUCTIONS


1. Disconnect the power to the unit.
2. Remove the thermostat cover.
3. Remove the box.
4. Mount the new box to the rafter using wood screws to attach.
5. Connect one black wire from the thermostat to the black wire of the incoming power supply.
6. Connect the other black wire from the thermostat to the black motor wire.
7. Connect the white wire from the power supply to the white motor wire.
8. Attach the ground from the incoming power supply to the ground screw.

Ventamatic, Ltd.

FOR ASSISTANCE PLEASE CALL
800.433.1626

XXADJTSTAT (415 THERMOSTAT)

WIRING DIAGRAM

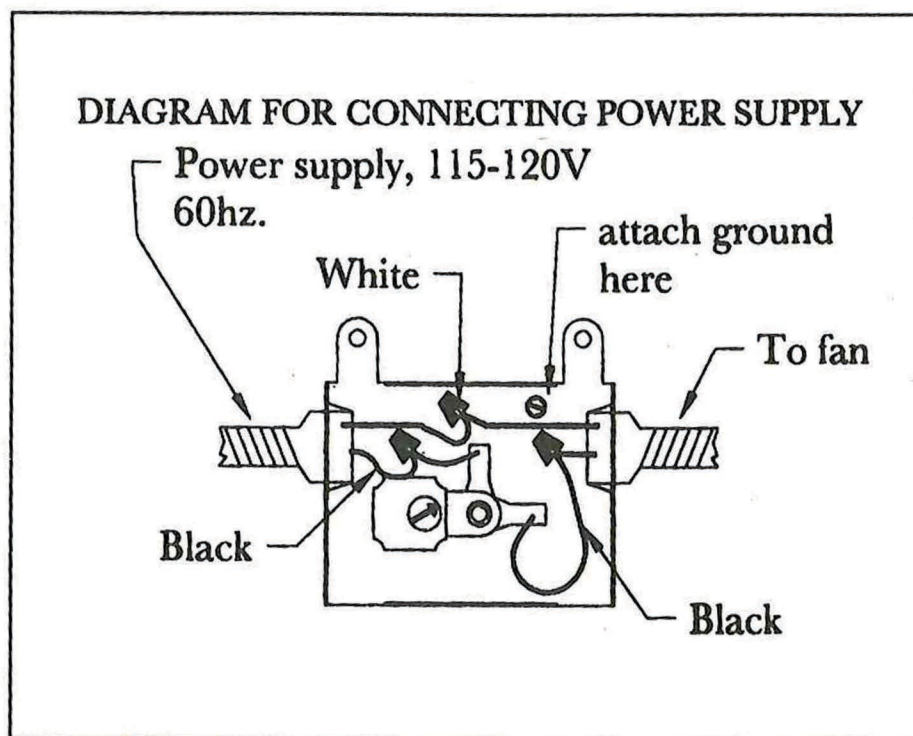

LIMITED WARRANTY

XXADJTSTAT (415 THERMOSTAT)

Ventamatic, Ltd. extends this warranty to the original retail purchaser of its model or, if this unit is purchased and installed by a new home builder, then to the original owner of the home. No subsequent purchaser of the unit or of a home in which it is installed is entitled to any of the benefits of this warranty.

1. This product is warranted against defects in materials and workmanship for a period of two (2) years from the date of original retail purchase. No other components or parts are warranted. There is no warranty for defects caused by abuse, faulty installation, or the like. Repairs or replacement parts supplied under this warranty are warranted only for the period of this warranty; that is, two (2) years from the date of the original retail purchase of the unit.
2. In the event of a defect or malfunction, we will replace or repair the defective part or component only and return the new or repaired part to you freight prepaid. You must bear all other expenses incurred in obtaining repairs, including labor required for field repair or replacement and the cost of shipping the defective part or component to us. You must also bear the cost of repair to or replacement of any part or component and the shipping charges incurred for the repair or replacement and return to you of any part or component not covered by this warranty, including parts or components damaged by you.
3. The company reserves the right to demand and receive written evidence of the date of purchase before undertaking to perform its obligations under this warranty. You should, therefore, retain your sales slip and attach a copy of it to the warranty claim.
4. In order to obtain the repair or replacement of parts or components, you must select one of the following methods:
 - A. Return to factory.
Return postage prepaid only the part of component which you believe to be defective to the following address:

Ventamatic, Ltd.
100 Washington Street
Mineral Wells, Texas 76067

Complete and enclose a written claim and attach a copy of your sales slip or other proof of purchase.
 - B. Return to retail dealer.
If the retail dealer from whom you purchased this unit stocks replacement parts or components, you may return a part or component which you believe to be defective to that dealer for replacement.

Caution: Only a limited number of our retail dealers stock replacement parts. If your dealer does not, you must return the part to the factory following the procedure described in paragraph "A" above.
5. There is no informal dispute settling mechanism available in the event of a controversy involving this warranty.
6. Any and all implied warranties which may exist terminate upon the expiration of this written warranty, two (2) years from the date of the original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you.
7. Ventamatic, Ltd. is not liable to you for incidental or consequential damages arising out of a defect or malfunction of a unit or its installation or out of any alleged breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you.
8. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.