

LOCKWASHER INSTRUCTION



A Pentair Company

Hoffman Enclosures Inc.

2100 Hoffman Way
Anoka, MN 55303-1745
(763) 422-2211 Tel
www.hoffmanonline.com

1. Install the enclosed external toothed lockwasher under one of the nuts securing the panel to ensure bonding between the panel and enclosure

HUB INSTALLATION INSTRUCTION

1. Use only CSA approved, watertight, rigid conduit hubs that are designed to fit into standard conduit openings.
2. Conduit entry can be made in the top or bottom end or through the side walls of this enclosure.
3. Use a hole saw or greenlee-type punch to cut the required holes.
(see the table below for the hole size and flat surface area required)

Trade Size of Conduit	Recommended Diameter of Opening	Recommended Minimum Diameter of Flat Surface
1/2	7/8	1 3/16
3/4	1 3/32	1 1/2
1	1 23/64	1 7/8
1 1/4	1 23/32	2 3/8
1 1/2	1 31/32	2 5/8
2	2 15/32	3 1/4
2 1/2	3	3 3/4
3	3 41/64	4 7/16
3 1/2	4 5/32	4 15/16
4	4 11/16	5 7/16
5	5 25/32	6 3/8
6	6 29/32	8

4. Install the hub according to the hub manufacturer's instructions.