

Operating Instructions

Self-Test/Self-Diagnostic Electronics

All TG Series models with the **Spectron®** self-test/self-diagnostic electronics option provide:

- Visual indication of AC power status
- Visual indication of all self-diagnostic test cycles
- Visual indication of unit malfunctions including:
 - Battery fault
 - Charger fault
 - Transfer fault
 - Lamp fault
- User initiated test cycles of 1, 5, 30 or 60 minutes
- Temperature compensated charger for longer battery life
- 15 minute retransfer delay

LED Indicators

Two status indicators, one red and one green are provided on the control panel of all models equipped with the Spectron option.

Red Service Alert LED

Under normal operating conditions, the Service Alert LED indicator will remain off. In the event the unit Controller detects a malfunction, the Service Alert LED will blink at a 1 Hz. rate based on the following table:

SERVICE ALERT CODES	
●	= battery disconnected
● - ●	= battery fault
● - ● - ●	= charger fault
● - ● - ● - ●	= transfer fault
● - ● - ● - ● - ●	= lamp fault

Red Status LED Code	Description
One blink ON/pause	Battery not connected
Two blinks ON/pause	Battery fault
Three blinks ON/pause	Charger fault
Four blinks ON/pause	Transfer circuit fault
Five blinks ON/pause	Emergency Lamp fault

Green Operating Status LED

The green Operating Status LED serves as both an AC power and a self-test indicator. During normal operation, the Operating Status LED will be illuminated indicating the presence of AC power. During all automatic or manual self-test cycles, the Operating Status LED will blink at a 1 Hz. rate.

operating status
on = ready
off = ac off
blinking = test in process

Manual Tests

Using the unit test switch, users can initiate different duration test cycles based on the following table:

Initiating Action	Test Cycle
Press test switch once	1 minute
Press test switch twice	5 minute
Press test switch 3 times	30 minute
Press test switch 4 times	60 minute

Note: Pressing test switch at any time after a test cycle has begun cancels remainder of test and returns unit to normal operation.

Lamp Sensing Adjustment

Models TBW50I, TG15I

These models are shipped without remote fixture capacity: the lamp sensing circuitry is factory-set. No further adjustments required.

All other TG Series Spectron Models


Remote capacity models provide sufficient battery power to operate the unit's two integral lighting heads plus one or more remote lighting fixtures. In order for the electronics module to detect a lamp failure in any of the connected fixtures, the lamp sensing circuit must be adjusted.

Procedure:

1. With a small screwdriver, turn the Lamp Sense Adjust potentiometer fully **clockwise**.

Refer to Fig. 1, below.

Fig. 1 Charger Board

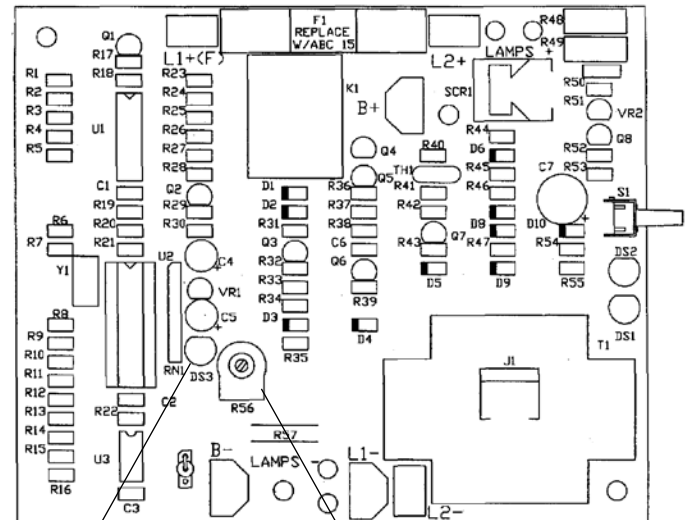

“Lamp Fail” LED

Lamp Sense Adjust Potentiometer

2. Press the unit test switch once. The emergency lamps will illuminate and a 1 minute self-test will begin. The green “Operating Status” LED on the unit’s control panel will also begin to flash. The “Lamp Fail” LED located on the charger board (See Fig. 1) should not be illuminated at this time.



Operating Instructions

3. Slowly turn the “Lamp Sense Adjust” potentiometer **counterclockwise** until the “Lamp Fail” LED on the charger board (See Fig. 1) illuminates. Then turn the adjustment pot back clockwise **just slightly beyond** the point where the “Lamp Fail” LED turns off to avoid false failure indications. At this point, the red “Service Alert” LED on the unit’s control panel will begin a repetitive cycle of flashing 5 times followed by a pause (“lamp fault” service alert).

4. While the self-test is still in progress, disconnect one of the emergency lamp wires from the charger board. The “Lamp Fail” LED on the charger board (See Fig. 1) should turn on. Reconnect the lamp wire and observe that the “Lamp Fail” LED goes out. If “Lamp Fail” LED remains illuminated, turn the “Lamp Sense Adjust” potentiometer fully clockwise and repeat step 3.

5. Allow the 1 minute self-test to end (or press the test switch again to cancel self-test cycle).

6. Press the test switch again. Verify that the “Lamp Fail” LED and the “Service Alert” LED are not illuminated.

Operation

Self-Test/Self-Diagnostic operation on models supplied with Spectron circuitry is fully automatic. Accidental discharge of the unit battery prior to energization is prevented by an AC lockout circuit. The unit’s green “Operating Status” LED, located on the unit display panel, illuminates to indicate the presence of AC power. The unit’s red “Service Alert” LED will blink after application of AC power if the battery connection is not completed. During normal operation, the unit’s charging circuit maintains the battery at full capacity and the unit Controller constantly monitors charger performance. Should the terminal voltage vary from design parameter values, the unit’s red “Service Alert” LED will blink, indicating a malfunction of the battery or charger. Upon interruption of normal AC power, or brownout condition, the unit Controller automatically switches the emergency lighting load to the battery. Emergency power will be provided for a minimum of 90 minutes. During emergency operation, the battery is protected from deep discharge by a low voltage battery disconnect circuit. Upon return of normal AC power, a 15 minute retransfer delay holds the unit in emergency operation mode, allowing utility voltage to stabilize prior to reconnection. The charger will then begin a recharge cycle. A temperature compensated float voltage type charger is provided in all models. This charger is designed to adjust charging voltage with changes in ambient temperature to maximize the life and performance of the unit’s batteries. The charger will bring the battery to full capacity within acceptable U.L time standards. The unit Controller automatically initiates a one minute discharge/diagnostic test every 28 days \pm 3.5 hours and a 30-minute discharge/diagnostic test every 6 months \pm 1 day. The TBW50I model also initiates a 90 minute test every 12 months. These tests exercise the unit’s battery to optimize its capacity and allows the unit Controller to analyze emergency operation performance. Any malfunction of the unit’s transfer circuit or emergency lamps will cause the red “Service Alert” LED on the unit’s display panel to blink. During normal operation, all red “Service Alert” LED blinking indications of unit malfunction remain latched until corrected and retested. A manual test switch allows a user programmable 1, 5, 30 or 60-minute diagnostic/discharge test at any time. During all automatic and user initiated self-tests, the unit’s green “Operating Status” LED will blink to indicate a diagnostic cycle in process.