



Powering Business Worldwide


Power Defense™

Circuit Breaker Accessory

For PDG1 Frame

PDG1 Padlockable Handle Lock Hasp  
Cat. No. PDG1XPLKTOFF  
Style No. 66A1597G11  
Quantity - 1

Package contents:  
1 Hasplock Plate  
1 Hasplock Base  
2 Machine Screws

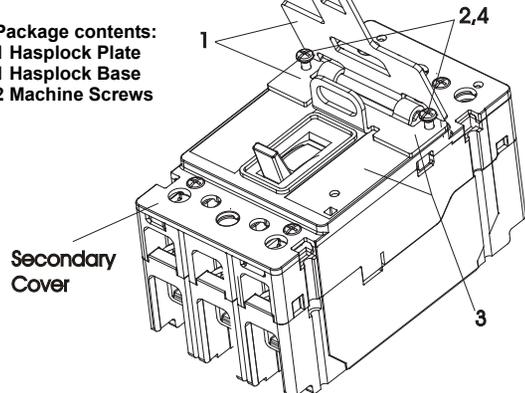

Secondary Cover



786679584590

- 1) Assemble the Hasplock Plate to the Hasplock Base.
- 2) Remove (2) Secondary Cover Screws.
- 3) Align Hasplock assembly with the holes on Secondary Cover.
- 4) Pivot Hasplock Plate up. Replace (2) Secondary Cover Screws with (2) Machine Screws (provided). Torque them to 6 — 8 Lb-In.

IL012226EN H01



Powering Business Worldwide


Power Defense™

Circuit Breaker Accessory

For PDG1 Frame

PDG1 Padlockable Handle Lock Hasp  
Cat. No. PDG1XPLKTOFF  
Style No. 66A1597G11  
Quantity - 1

Package contents:  
1 Hasplock Plate  
1 Hasplock Base  
2 Machine Screws

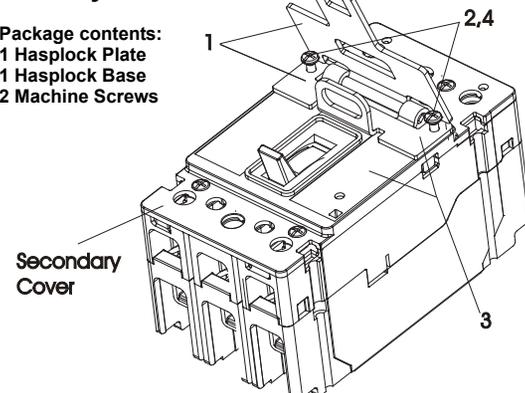

Secondary Cover



786679584590

- 1) Assemble the Hasplock Plate to the Hasplock Base.
- 2) Remove (2) Secondary Cover Screws.
- 3) Align Hasplock assembly with the holes on Secondary Cover.
- 4) Pivot Hasplock Plate up. Replace (2) Secondary Cover Screws with (2) Machine Screws (provided). Torque them to 6 — 8 Lb-In.

IL012226EN H01



Powering Business Worldwide


Power Defense™

Circuit Breaker Accessory

For PDG1 Frame

PDG1 Padlockable Handle Lock Hasp  
Cat. No. PDG1XPLKTOFF  
Style No. 66A1597G11  
Quantity - 1

Package contents:  
1 Hasplock Plate  
1 Hasplock Base  
2 Machine Screws

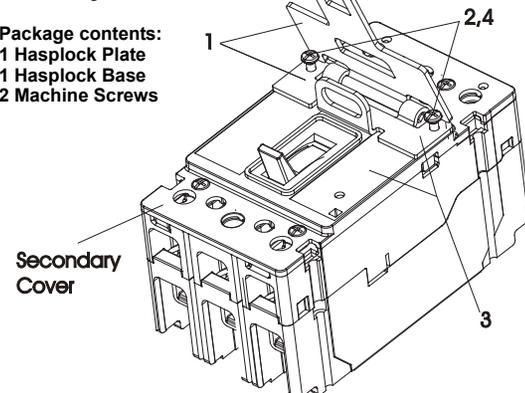

Secondary Cover



786679584590

- 1) Assemble the Hasplock Plate to the Hasplock Base.
- 2) Remove (2) Secondary Cover Screws.
- 3) Align Hasplock assembly with the holes on Secondary Cover.
- 4) Pivot Hasplock Plate up. Replace (2) Secondary Cover Screws with (2) Machine Screws (provided). Torque them to 6 — 8 Lb-In.

IL012226EN H01



Powering Business Worldwide


Power Defense™

Circuit Breaker Accessory


For PDG1 Frame

PDG1 Padlockable Handle Lock Hasp  
Cat. No. PDG1XPLKTOFF  
Style No. 66A1597G11  
Quantity - 1

Package contents:  
1 Hasplock Plate  
1 Hasplock Base  
2 Machine Screws

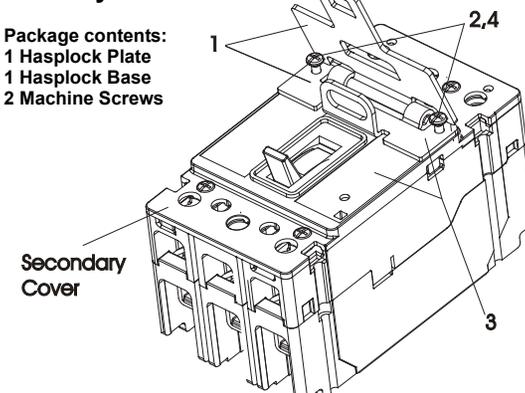

Secondary Cover

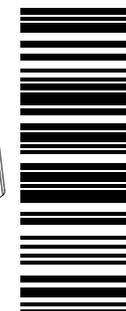

786679584590

- 1) Assemble the Hasplock Plate to the Hasplock Base.
- 2) Remove (2) Secondary Cover Screws.
- 3) Align Hasplock assembly with the holes on Secondary Cover.
- 4) Pivot Hasplock Plate up. Replace (2) Secondary Cover Screws with (2) Machine Screws (provided). Torque them to 6 — 8 Lb-In.

IL012226EN H01