



On-Q Home Systems Remote 1060

INTRODUCTION

Thank you for purchasing an On-Q universal remote control. Your remote lets you control up to 8 devices with one easy-to-use, compact unit. Out of the box, your remote is ready to control On-Q systems from any mode. After installing batteries, you can program the On-Q universal remote control to control your TV, VCR or DVD, Cable or Satellite Receivers, Amplifier or Tuner, and Auxiliary device. To do so, follow the instructions in "Programming a Device". For best results, please read and follow all the remaining instructions. Also, keep this guide for future reference.

INSTALLING BATTERIES

Your On-Q universal remote control requires 2 AA batteries.

Battery Use And Safety

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

If you do not plan to use the remote for an extended period, remove the battery. It can leak chemicals that can destroy electronic parts.

WARNING: Dispose of old batteries promptly and properly. Do not burn or bury them.

To Install Batteries:

1. Open the battery compartment cover (located on the back of the remote).
2. Place the AA batteries in the compartment and match the + and - polarity symbols inside.
3. Replace the cover.

NOTE: When the battery voltage is low, the feedback LED will blink 5 times after a keypress.

A QUICK LOOK AT THE ON-Q CONTROLS

Press this key...	To...
	Select a device.
	Turn the selected device on or off.
	Used for product setup
	Select the next or previous channel. Select next or previous chapter on some models of DVD players. Press LAST to recall the last-viewed channel.
	Raise or lower the sound level. Press MUTE to turn the sound off or on.
	Move the cursor in the menu screens. Press OK to choose the highlighted menu option.
	Skip backward, rewind, fast forward, skip forward, stop, pause, or play tracks on the current disc.
	View the current channel and program information.
	Display the menu for the selected device.
	Exit the selected device's menu, guide, or program without making a menu selection.
	Display the program guide for the selected device.
	Directly enter channels (for example, 09 or 31). Press Enter to send channel number entries on some TV models.

lyriQ control in On-Q mode:
L - Local source select
< > - lyriQ source select up & down
1 - lyriQ digital music source
whole house - puts lyriQ into whole house mode
room - places lyriQ into room mode
mute - turns lyriQ sound on or off when in room mode or all in whole house mode
vol/+vol- - adjusts the volume of lyriQ

On-Q LCD/TV Display Interface Control in lyriQ Mode:
VOL/+/- - controls the volume
MUTE - turns off the device volume
Compass/OK - compass LEFT/RIGHT places images into sequence. UP/DOWN changes the sequence speed
1-4 - will select video input 1-4
R,G,Y,B - will select video input 1-4 as well
Power Button (shown at left) will power the LCD

PROGRAMMING A DEVICE

NOTE: Device button ON/OFF can NOT be programmed. To program this remote to control home theater devices, follow the steps below. Before proceeding, find the codes for the devices you want to program in "Manufacturer's Codes" on the right side of this page and write them down or highlight them.

1. Turn on the device (for example, DVD player) and, if needed, load media (for example, a DVD).

2. Press a device key on the remote that you wish to program (TV, VCR/DVD, CBL/SAT, etc.).

3. Press and hold SETUP until the red LED blinks twice, then release.

4. Enter the first five-digit code for the device and brand that you wish to program. The LED blinks once as each digit is entered. If the code is valid, the LED blinks twice.

NOTE: If the LED does not blink twice, repeat steps 2 to 4 and try entering the code again.

5. Aim the remote at the device and press Power Off. The device should turn off. If it does not, repeat steps 3-5, trying each code for your brand until you find one that works. If you cannot find a code that works, see "Searching for Your Code".

6. Repeat steps 1 to 5 for the other devices you want to control. For future reference, write down each working device code in the following chart: CBL/SAT Code:



AUD Code:



DVD Code:



AUX1 Code:



SEARCHING FOR YOUR CODE

If your device does not respond to the remote after trying all codes listed for your brand, or if your brand is not listed, try searching for your code:

1. Turn the device you wish to control on.

2. Press a device key once.

3. Press and hold SETUP until the red LED blinks twice, then release.

4. Enter **9 9 1**, then the device group number (see table below). The LED blinks twice.

Code	Device Group
0	Cable (Cable Converters, Video Accessories, Satellite Receivers)
1	TV (TVs)
2	VCR (VCRs, DVD players)
3	Audio (Audio Amplifiers, Audio Amp/Tuners, CD players)

5. Aim the remote at the device and press Power Off. The remote sends IR codes from its library to the selected device, starting with the most popular code first. If the device responds, go to step 7.

6. If the device does not respond, press CH+ and the remote will test the next code for that device type. Continue to press CH+ until the device turns off.

Note: Press CH- to try the previous code.

7. Now that you have found the correct code, press SETUP to save the code that worked for your device. The LED will blink twice to indicate that the code has been saved. To search for other device codes, repeat steps 1 to 5.

CHECKING THE CODES

If you have set up the remote using the procedure in "Searching for Your Code", you may need to find out which five-digit code is operating your equipment. For example, to find out which code is assigned to your TV:

1. Press TV once.

2. Press and hold SETUP until the red LED blinks twice, then release.

3. Enter **9 9 0**. The LED blinks twice.

4. To view the code for the first digit, press 1. Count the LED blinks (for example, three blinks = 3), and write down the number in the appropriate code listing at the top of this column.

Note: If a code digit is 0, the LED does not blink.

5. Repeat step 4 for the four remaining digits, using 2 for the second digit, 3 for the third digit, 4 for the fourth digit, and 5 for the fifth.

6. To check for other device codes, repeat steps 1-5, substituting the device key the desired mode you would like to check.

USING LEARNING

This universal remote control includes a Learning feature (some models may not include Learning) so you can add functions that are unique to your home entertainment devices (e.g., VCR Tracking Up or Down). However, there are some considerations:

Learning Precautions

Your original remote controls must be in working order for learning to work properly.

Learning keys are mode-specific, so each one can store a unique function for each mode.

Do not use the following keys for learning: Device Keys, SETUP, or Record (+).

Learning capacity is approximately 42 to 75 keys, depending on the code being learned.

Certain device functions are not learnable including multi-frequency types, some high frequency ones, and other unusual formats.

For optimum learning, avoid high levels of ambient light such as natural sunlight or energy-efficient fluorescent lights.

Note: Please have your original remote controls handy before programming learning.

PROGRAMMING A LEARNED KEY

Note: If more than 10 seconds pass between key presses, the remote exits programming.

1. Press and hold SETUP until the red LED blinks twice, then release.

2. Press **9 7 8**. The LED blinks twice.

3. Press the key you wish to assign a macro on.

4. Enter the series of commands you want the macro to execute (up to 15 commands).

5. Press and hold SETUP until the red LED blinks twice, then release.

Now, when you press the preset macro key, the remote sends the series of commands you have entered, regardless of what mode you are in. For example, you could program a macro key to turn on both your TV and cable box and select a particular channel.

To clear the macro, repeat steps 1-5 above, but do not enter a series of commands at step 4.

PROGRAMMING A MODE-INDEPENDENT MACRO

1. Press and hold SETUP until the red LED blinks twice, then release.

2. Press **9 9 5**. The LED blinks twice.

3. Press the key you wish to assign a macro on.

4. Enter the series of commands you want the macro to execute (up to 15 commands).

5. Press and hold SETUP until the red LED blinks twice, then release.

Now, when you press the preset macro key, the remote sends the series of commands you have entered, regardless of what mode you are in. For example, you could program the macro key to turn on both your TV and cable box and select a particular channel, but only if you are in TV mode. If you are in DVD mode, this key does not execute the macro you set up in TV mode.

To clear the macro, repeat steps 1-5 above, but do not enter a series of commands at step 5.

Note: If the LED displays one long flash instead, either your batteries are low, or the On-Q remote has a memory fault. In either case, the remote cannot learn a new key.

4. Press the key on the remote you wish to learn onto. The feedback LED will blink rapidly for three seconds, suggesting the remote is ready to learn.

5. On the original remote, press and hold the key to be learned. Continue holding the key on the original remote until the On-Q remote's LED blinks twice.

Note: If the LED displays one long blink, a learning error has occurred. Try repeating this step again until a successful capture occurs. If the function is still not captured, press and hold SETUP to exit programming and review the "Learnings Precautions". If needed, also see "Troubleshooting" below. After review, start programming again at step 1.

6. Repeat steps 4 through 5 for another key you would like to learn onto.

Once you have completed learning all keys, press and hold SETUP until the LED blinks twice to save all data learned.

RETURN REMOTE PROGRAMMING TO ON-Q FACTORY SETTINGS

1. Press and hold in the SETUP key the red LED blinks twice, then release.

2. Enter **9 7 7**. The LED will blink four times.

TROUBLESHOOTING

PROBLEM: LED does not blink when you press a key.

SOLUTION: Try pressing different keys. Replace the batteries with 2 new AA batteries.

PROBLEM: LED blinks when you press a key, but device does not respond.

SOLUTION: Make sure the remote is aimed at your device and is not more than 40 feet away.

PROBLEM: LED blinks one long blink while in SETUP mode.

SOLUTION: An entry error has occurred (for example, wrong key). Try entering the sequence again.

PROBLEM: Remote does not control devices or commands are not working properly.

SOLUTION: Try all listed codes for the device. Make sure the device operates with an infrared remote control.

PROBLEM: CH+, CH-, and LAST do not work for your RCA TV.

SOLUTION: Due to RCA design from 1983 to 1987, only the original remote control will operate these functions.

PROBLEM: No volume on a device.

SOLUTION: See "Changing Volume Lock" and make sure the volume is not locked to a different mode already.

PROBLEM: Channels do not change properly when directly entering digits to change channels.

SOLUTION: If the original remote control required you to press Enter to change channels, press Enter on this remote after entering the channel number.

MANUFACTURER'S CODES

Setup Codes for Home Systems

On-Q/Legrand 31804, 3

