

# MODEL 500XL & 500

## 1-1/4", 1-1/2", 2", 2-1/2", 3"



Item No.	Description	1-1/4"	1-1/2"	2"	2-1/2"	3"	500XL	500XLLPC	500XLLPV	500XLHT	500XLHR	500XLHLR	500XLS	500XLSW	510XL
1	MAIN CAP	604-3XL-010F	604-3XL-010F	606-3XL-010F	507-3XL-010F	508-3XL-010F	●	●	●	●	●	●	●	●	●
2	CAP WASHER	604A-12	604A-12	606A-12	507A-12	508A-12	●	●	●	●	●	●	●	●	★
3	SPRING	604-33LPVS	605-33LPVS	606-33LPVS	507-33LPVS	508-33LPVS		●	●			●			
4	BOLT	604B-11	606B-11	606B-11	606B-11	959-11	●	●	●	●	●	●	●	●	●
5	WASHER	604C-12	606C-12	606C-12	606C-12	508C-12	●	●	●	●	●	●	●	●	★
6	PLUNGER	604-34XL	605-34XL-010F	606-34XL-010F	507-34AXL-010F	508-34XL-010F	●	●	●	●	●	●	●		●
	PLUNGER	604-34XLCH	605-34XLCH	606-34XLCH	507-34AXLCH	508-34XLCH								●	
7	SEAT WASHER	604-12	605-12	506-12	507-12	508-12	●	●	●	●	●	●	●	●	★
8	WASHER	504-14	505-14	606-14	507-14	508-14	●	●	●	●	●	●	●	●	★
9	SEAT	604-18	605-18	606-18	507-18	508-18	●	●	●	●	●	●	●	●	●
10	SEAT GASKET	504A-13	505A-13	506A-13	507A-13	508A-13	●	●	●	●	●	●	●	●	●
11	UNION GASKET	604-13	605-13	606-13	—	—	●	●	●	●	●	●	●	●	★
12	TAILPIECE NPT (FEM)	604-19XL-010F	605-19XL-010F	606-19XL-010F	—	—	●	●	●	●	●	●	●	●	●
	TAILPIECE COPPER (FEM)	604C-19	605C-19	606C-19	—	—	●	●	●	●	●	●	●	●	●
13	UNION NUT	604-9-010F	605-9-010F	606-9-010F	—	—	●	●	●	●	●	●	●	●	●
14	GASKET	—	—	—	—	508A-13	●	●	●	●	●	●	●	●	●
15	SLEEVE	—	—	—	—	508-2XL-010F	●	●	●	●	●	●	●	●	●
16	O-RING	110N	115N	115N	222N	333N	●	●	●	●	●	●	●	●	★
17	STEM	604-5XL	606-5XL-010F	606-5XL-010F	507-5BXL-010F	508-5XL-010F	●	●	●	●	●	●	●	●	★
	STEM	604-5XLCH	606-5XLCH	606-5XLCH	507-5BXLCH	508-5XLCH								●	★
18	TEFLON DIAPHRAGM	504-43HT	505-43HT	606-43HT	507-43HT	507-43HT		●	●						★
19	DIAPHRAGM	504-43	505-43	606-43	507-43	507-43	●	●	●	●	●	●	●	●	★
	DIAPHRAGM	514-43	515-43	606-43	507-43	507-43									● ★
20	DIAPHRAGM DISC	604-80	505-80BR	505-80BR	505-80BR	505-80BR	●	●	●	●	●	●	●	●	★
21	WASHER	—	605A-14	—	—	—	●	●	●	●	●	●	●	●	★
22	BOLT	503-11	505-11	505-11	505-11	505-11	●	●	●	●	●	●	●	●	★
	BOLT	503-11BR	3004B-11	3004B-11	3004B-11	3004B-11								●	★
23	SPRING	604-33	605-33B	606-33	507-33B	507-33B	●	●	●	●			●	●	★
	SPRING	1005-33	605-33HR	606-33HR	507-33HR	507-33HR					●	●			● ★
24	SPRING DISC	602A-80	505A-80	505A-80	505A-80	505A-80	●	●	●	●			●		
	SPRING DISC	604A-80	—	—	—	—					●	●			● ★
	SPRING DISC	602A-80	505A-80BR	505A-80BR	505A-80BR	505A-80BR								●	◇
	SPRING DISC	—	505A-80	507A-80	505A-80	505A-80					●	●			●
25	FRICITION RING	604B-12	505B-12	—	—	—	●	●	●	●	●	●	●	●	★
26	WASHER	606C-12	508C-12	508C-12	508C-12	508C-12								●	
27	LOCKNUT	501B-9	505B-9A	505B-9A	505B-9A	505B-9A	●	●	●	●	●	●			●
	LOCKNUT SS	501B-9SS	505B-9ASS	505B-9ASS	505B-9ASS	505B-9ASS								●	●
28	ADJUSTMENT BOLT	62A-11	605A-11A	605A-11A	507A-11A	507A-11A	●	●	●	●	●	●			●
	ADJUSTMENT BOLT	62A-11SS	605A-11ASS	507A-11	507A-11	507A-11								●	●

- Item included in specified Model
- ★ Repair kit items (all ★ items in kit)
- ◇ Repair kit items (all ◇ items in kit), 1-1/4" ONLY

# MODEL 500XL & 500

## Parts Drawing

