 


NOTE: A plastic strip is used to prevent battery drain during shipping. Pull gently to remove before use. There is also a cling over the digital display, remove before use.


OPTIMAL TEMPERATURES

	SAFE ZONES	DANGER ZONES
REFRIGERATOR	32°F-40°F	42°F +
FREEZER	-20°F-0°F	10°F +

TEMPERATURE RANGE: -4°F TO 140°F / -20°C TO 60°C

Keeping your appliances at the proper settings will help with energy usage and food spoilage. Pre-programmed with "Danger Zone" temperatures - when the appliance goes out of range,  will light up.

HOW TO USE:

1. Press the "F/°C" button the back of the thermometer to choose unit of measure.
2. Press and hold "F/°C" to switch from FRIDGE to FREEZER setting.
3. Press the "MIN/MAX" button once to read the max temp in memory, press again to read the min temp in memory and a third time to return to the current temperature.
4. Hang or attach the thermometer inside the fridge or freezer using the clip or magnet.
5. Alert icon  will blink indicating FRIDGE temperatures exceed 40°F and FREEZER temperatures exceed 0°F. The warning will blink until temperatures come back into range. Food safety may be jeopardized if temperatures reach "Danger Zones" 42°F (FRIDGE) and 10°F (FREEZER).

CLEANING AND CARE:

Handwash only. Do not immerse in water or put in dishwasher.

ONE (1) YEAR WARRANTY
(EXCLUDING BATTERIES)

 CR2025
BATTERY
INCLUDED

 MERCURY FREE
BATTERY



Made in China