



HOW TO USE:

1. Turn knob clockwise past the 50 minute mark to activate the long ring mechanism.
2. Turn knob back to the desired time.
3. The alarm will ring when the knob reaches the "0" mark.

CLEANING AND CARE:

Handwash only. Do not immerse in water or put in dishwasher.

ONE (1) YEAR WARRANTY



MODEL 5870
©2017 Taylor Precision Products
Seattle, WA 98134

Made in China

For warranty information please call 1.866.843.3905
or visit us online at: SHOPTAYLORUSA.COM



5870_01.25.17

Place
Sticker
Here



BACK