Use and Care Guide

ProVent™

Exhaust Cap

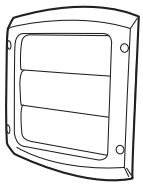

DUNDAS·JAFINE

TOOLS REQUIRED



Caulking gun



Phillips screwdriver

HARDWARE REQUIRED (NOT INCLUDED)

Screws (4)



Latex caulking

Installation

1 CUTTING A HOLE THROUGH THE WALL

- Cut a hole through the wall ¼ in. in diameter larger than the pipe. For example, to accommodate a 4 in. pipe cut a hole 4 ¼ in. in diameter

NOTICE: Ensure the appropriate tool is used to cut the hole in the wall according to the type of wall material.

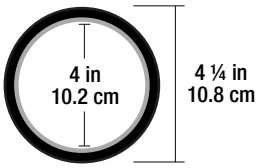

2 INSTALLING THE EXHAUST CAP

- From the outside, pass the collar through the hole opening until the vent cap lies flush against the outside wall surface

3 SECURING THE EXHAUST CAP

- Secure the vent cap to the wall by screwing it into place and/or caulking around the reveal

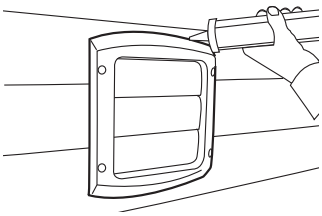

Safety Information

IMPORTANT: Vent the exhaust cap outdoors through a wall or window opening as close as possible to the dryer.

Warranty

WHAT IS COVERED

All merchandise is warranted to be free from defects in workmanship and material for one year from the date of purchase. This includes normal wear and performance failure on items. The manufacturer will replace or repair at their option.

WHAT IS NOT COVERED

This warranty only covers normal wear and performance failure. It does not cover any malfunction, performance failure, or defect arising from the misuse, abuse, neglect, or modification of the product. Any damage or malfunction inflicted upon the product by the user or other external sources, or any failure to comply with the warnings and instructions, is not covered.

For further assistance visit www.DundasJafine.com.