

## FIBER FRAMING STRIPS

### Window and Doors


#### Preparation:

Make sure plastic or vinyl sheeting is approx. 2" wider and taller than the area to be sealed.

#### Installation:

1. Cut framing strips to fit top, bottom and sides of window casement or door frame.
2. Roll plastic sheet 2 or 3 times around top strip.
3. Firmly nail in place.
4. Repeat third step across the bottom, then on both sides.

*NOTE:* Plastic should be pulled taut. If using vinyl, *do not stretch the sheet*, since it will shrink in colder temperatures.

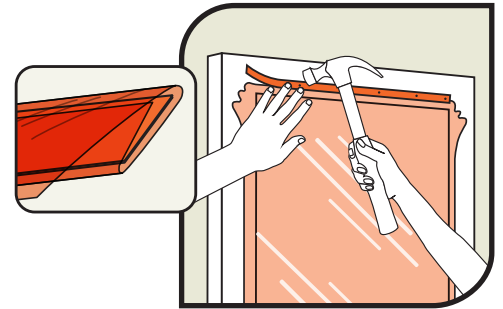

## Ventanas y Puertas

## TIRAS DE FIBRAS PARA ENMARCAR

#### Preparación:

Asegúrese que la hoja de plástico o vinilo sea aprox. 2 pulgadas más ancha y mas alta que el área a sellar.

#### Instalación:

1. Corte las tiras de enmarcar del tamaño del tope, repisa y lados del marco de la puerta o ventana.
2. Enrolle la hoja de plástico 2 o 3 veces alrededor de la tira para el tope.
3. Clave firmemente en su lugar.
4. Repita el paso anterior con la tira inferior, y en ambos lados.

*NOTA:* El plástico debe ser tensado. Si usa vinilo, no estire la hoja, ya que se encogerá a temperaturas bajas.



#### TOOLS NEEDED:

HERRAMIENTAS NECESARIAS:



Follow Us @FrostKing  
or [www.frostking.com](http://www.frostking.com)



Thermwell Products Co., Inc.  
Mahwah NJ 07430 | Sparks NV 89431

Need help or information  
about any Frost King product?  
**Call 1-877-FROST 20**  
3 7 6 7 8

For videos, instructions, hints and tips  
visit [www.frostking.com/instructions](http://www.frostking.com/instructions)