
TAPERED WEIGHT

INSTRUCTIONS

- Weigh car before attaching weight. Add or deduct weight per official race rules. We recommend making your car the maximum weight allowed.
- Secure Tapered Weight to bottom of car with included Screws **(Fig. 1)**. **OPTION:** Countersink Weight. Place Weights on bottom of car and trace outline. Score lines 1/4-inch apart within the area. Chisel out the area until there is enough room for the Weight to fit. Attach with included Screws.
- To modify Tapered Weight, remove a portion of the weight along the molded-in lines with pliers **(Fig. 1)**.

Fig. 1

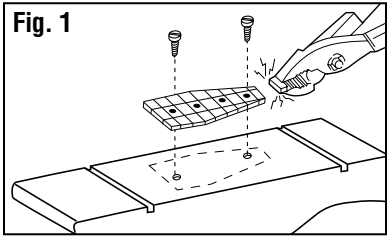

INSTRUCTIONS

- Pesez la voiture avant attache au poids. Ajoutez ou déduisez le poids par règles officielles de course. Rendez votre voiture le poids de maximum.
- Attachez Tapered Weight au fond de la voiture avec les vis **(Fig. 1)**. **OPTION:** Fraiser les poids. Placer le poids sur en-dessous de la voiture et tracez. Tracer des lignes 6 mm de largeur dans le secteur. Découper avec un ciseau pour un ajustement plus précis.
- Pour modifier Tapered Weight, enlevez une partie du poids le long du mouler-dans des lignes à l'aide de des pinces **(Fig. 1)**.

PINECAR® manufactured by **WOODLAND SCENICS®** • PO BOX 98, LINN CREEK, MO 65052 • I5 • pinecar.com