

TUNGSTEN PUTTY WEIGHT P3922

INSTRUCTIONS

- Pinch off desired amount of Putty Weight and knead until pliable.
- Place Putty into cavity on car (**Fig. 1**). Press Putty with the eraser end of a pencil to secure in cavity (**Fig. 2**). Twist pencil to release eraser from Putty Weight. **OPTION:** Seal cavity with a dowel or wood putty.
- Putty can also be secured to car with PineCar Super Glue (P381) or Formula Glue® (P384). Let glue dry thoroughly.
- If desired, paint Putty to blend with car design.

CONTENTS 1 oz Tungsten Putty Weight
CONTENUS 28.3 g Tungstène Mastic Poid



Pinch Off - Pincer



Knead - Pétrir



Fig. 1


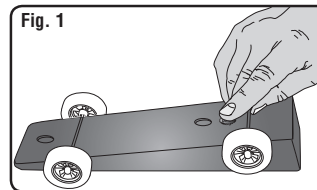


Fig. 2

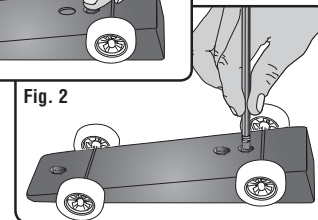

INSTRUCTIONS

- Pincer au large de la quantité désirée de poids de mastic et pétrir jusqu'à ce que pliable.
- Placez mastic dans la cavité sur la voiture (**Fig. 1**). Appuyez sur le mastic dans la cavité avec la fin de la gomme à effacer d'un crayon (**Fig. 2**). Tourner le crayon pour libérer la gomme de mastic de poids. **OPTION:** Joint cavité avec un goujon ou mastic à bois.
- Mastic peut également être assuré à la voiture à l'aide de PineCar Super Glue (P381) ou Formula Glue® (P384). Laissez la colle sécher.
- Si vous le souhaitez, peindre le mastic pour se fondre dans le design automobile.