

# TRIM-TEX


## DRYWALL PRODUCTS

### Shower Bead

Extra long 2 1/4" mud leg spans gap between drywall and flange, uses less mud than filling the gap. Features a tear away strip that protects the shower/tub flange from mud, leaving a clean crisp finished edge with no mess. Replaces paper tape, which can be a food source for mold around shower/bath enclosures.

### Installation Instructions

- Step 1:** Measure and cut the bead to length. Dry fit to test proper cut. Remove support leg tear-off strip if the bead does not lay flat.
- Step 2:** Spray the bead and corner with 1 coat each of Trim-Tex 847 Spray Adhesive and position the bead into place. For extra moisture protection and stability apply a bead of caulk around the perimeter of the shower/tub flange for the return leg to embed into.
- Step 3:** Once in position, pressure the leg using a Trim-Tex installation tool or the handle of your taping knife.
- Step 4:** Staple the mud leg into place every 6"-8" with 1/2" staples.
- Step 5:** Mud as usual. Be sure to use All-Purpose or Multi-Purpose Compound. Add Mud-Max to your drywall compound for extra durability.
- Step 6:** Remove the tear-off strip after mudding but before sanding. Caulk the small gap between the bead and tub flange as necessary to prevent moisture intrusion. Prime and paint as usual.

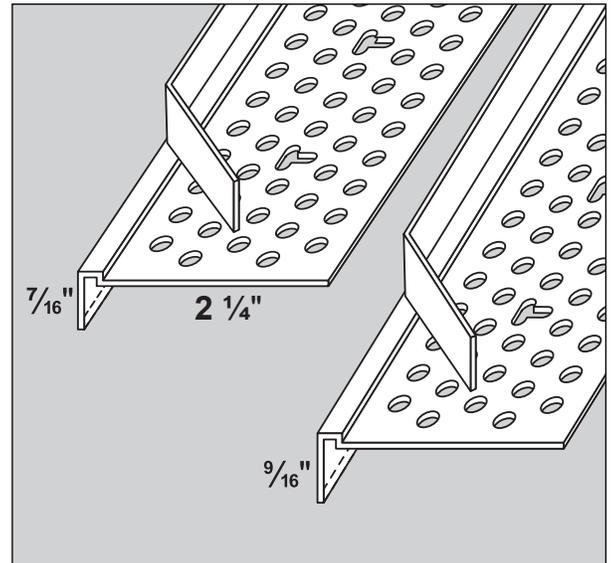

STOCK #	NAME	PCS/BOX
9358	SHOWER BEAD FOR 1/2" DRYWALL	25
9368	SHOWER BEAD FOR 5/8" DRYWALL	25

