




WeatherTech® WindshieldFone

Installation Video

Contents: WindshieldFone, 3" Short Arm, 5" Medium Arm, Rubber Bumper

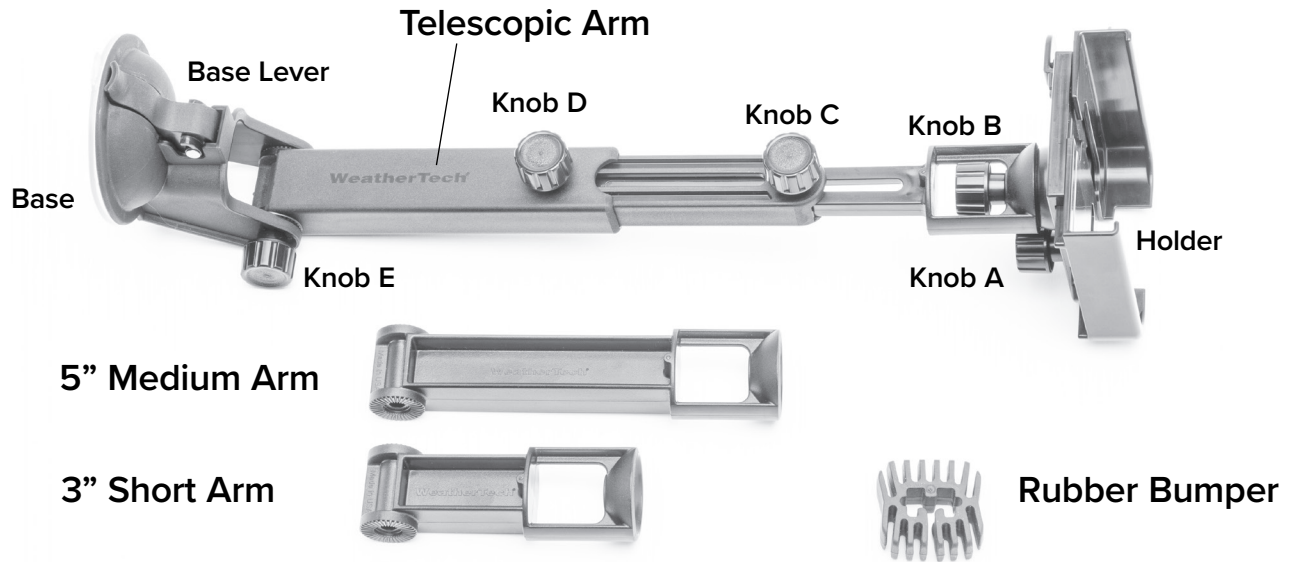

Note: We recommend reading all instructions prior to beginning.

Step 1: Choosing the Length



Determine a safe, convenient location to mount on your windshield. We recommend keeping it as low on the windshield as possible.

Note the length between your windshield and the front of your dashboard.



Start with the installed telescopic arm, and extend or retract as necessary to see if it fits your dash. If so, you're ready to mount. If the telescopic arm is too long, you can easily swap it out with either the included 3" Short or 5" Medium Arm.

The suction cup Base can be flipped to allow for easier mounting.

Step 2: Adjusting the Attached Telescopic Arm




Loosen Knobs C and D until you can adjust the telescopic arm to perfectly fit your dashboard. When the dash allows, the Holder can sit over the edge of it. Tighten Knobs C and D.




To increase stability, add the Rubber Bumper to the section of the telescopic arm that's closest to the edge of the dashboard.

Step 3: Swapping out for Shorter Arms

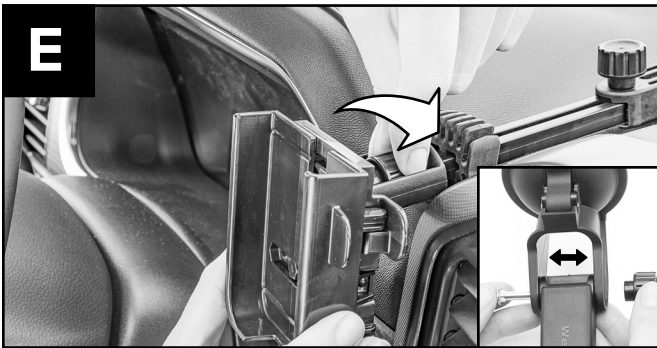

First, loosen and remove Knob B, and remove the WindshieldFone Holder. Then on the Base, loosen and remove Knob E while securing the bolt head on the opposite side. Remove bolt, then spread the base to remove the arm. Depending on placement, the base can also be flipped to ease mounting.

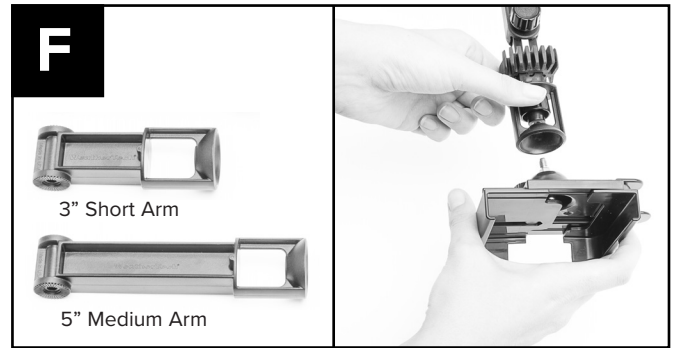

Choose your preferred 3" Short Arm or the 5" Medium Arm. Installation of both is easy:

Position the swivel section of the Arm against the screw on the rear of the WindshieldFone Holder, then add and tighten Knob B until secure.



Add the Base to the opposite end of the Arm at its hinge.




Slide the bolt into the hinge, and while holding the bolt head, add and tighten Knob E until secure.


Step 4: Mounting WindshieldFone




Clean the windshield surface where you intend to adhere the suction cup, then let dry completely. We recommend using rubbing alcohol to clean both the windshield and the suction cup.

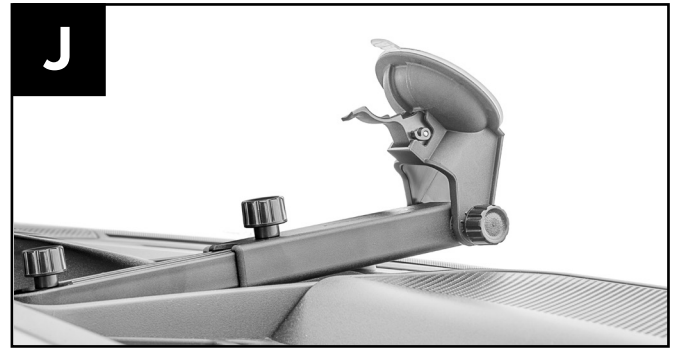

Ensure the Lever on the Base is in the release position and that Knobs C and D are facing up.

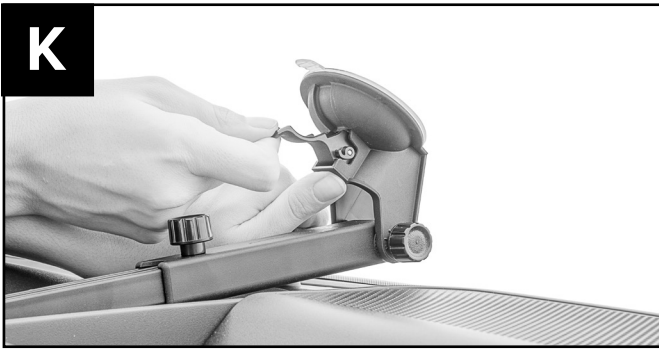

Firmly press the Suction Cup against the windshield.

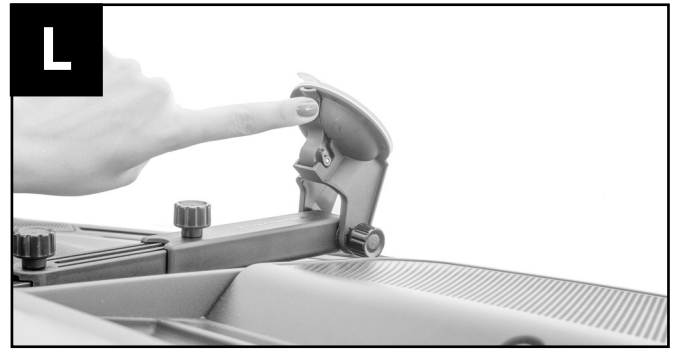


While maintaining pressure on the base of the mount, press the lever toward the windshield until it snaps securely into place.

Step 5: Adjusting to Your Phone Width




Loosen Knob A and fully open the phone holder. Place your phone into the Holder and adjust it to fit the width of your phone.

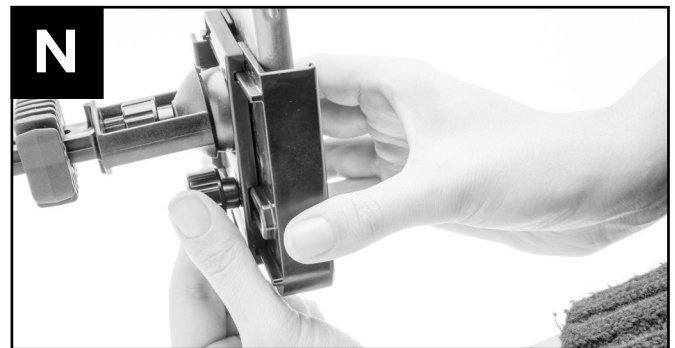

Tighten Knob A.

Step 6: Adjusting Your Viewing Angle

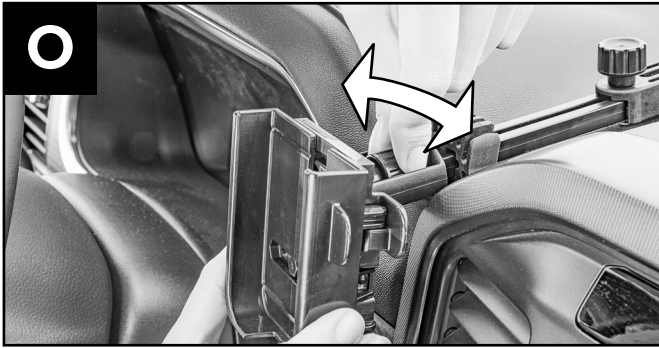

Loosen Knob B to rotate, swivel or tilt the Holder until you find the ideal viewing angle, and then tighten Knob B to secure. **Ensure all knobs are secured firmly prior to use.**

Step 7: Removing Your Phone



Place your thumb and forefinger on either side of the patent-pending Quick Lock & Release tabs and press with your thumb until your phone pops out.

Note: Please check state and local laws prior to use.

