


Approved by leading tankless water heater manufacturers



A CSW Industrials Company

Typical deposit buildup

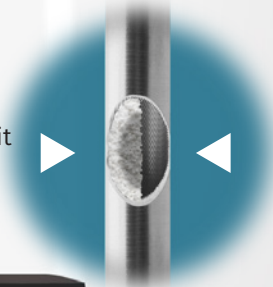

Calci-Free™ flushes deposits away



Cleans  
In 20  
Minutes



## TANKLESS WATER HEATER FLUSH KIT

Includes everything you need to Safely and Effectively remove scale and mineral deposits from tankless water heaters.

- Efficiency:** Cleans in only 20 minutes
- Easy to Use:** Simply mix the granules with water & circulate through the system for a complete flush
- No Mess:** Biodegradable granules instead of liquid form, eliminates splashes & spills





# Calci-Free™ Kit

## Complete tankless water heater flush kit

Code	Description	Qty.
68711	Flush kit	1

### CONTAINS

- One heavy duty, chemical resistant utility pump (submersible) with 3/4" GHT connection
- One 7' feeder hose w/ swivel fittings
- One 7' discharge hose
- One elevated pump strainer/grate
- One 1.2 lbs Calci-Free



### INSTRUCTIONS



1. Turn off power source (electricity or gas per manufacturer's instructions) to the tankless water heater. 2. Shut off main water supply valve to tankless water heater. 3. Close hot and cold water isolation valves. 4. Clean cold water inlet screen of any sediment or dirt. 5. Using the Calci-Free Flush Kit Bucket, add and mix full contents of Calci-Free into two gallons of water until completely dissolved. 6. Place strainer at the bottom of the bucket and then place pump on strainer. 7. Connect one end of dual-fitted hose to pump's discharge connection and the other end to the cold isolation valve on the tankless water heater. 8. Connect the second hose to the hot isolation valve on the tankless water heater and place non-fitted end of the hose directly into the bucket.



9. Open hot and cold isolation valves. 10. Turn on pump and allow solution to circulate for 20 minutes. Follow tankless manufacturer's service manual for specific cleaning instructions. 11. After cleaning is complete, turn off pump. 12. Close cold isolation valve and remove hose from valve. 13. Remove pump from the bucket. Dispose of used cleaning solution in accordance with local regulations. 14. Replace the end of the hose already connected to the hot water isolation valve into bucket. 15. Open main water supply valve to tankless water heater and allow cold water to circulate through water heater into bucket for 5 minutes (empty bucket as needed). 16. Close hot isolation valve and remove hose. 17. Clean cold water inlet screen of any sediment or dirt.

18. Reconnect power source (electricity & gas).

Scan QR Code for Calci-Free instructional video

**CAUTION: Not for use on aluminum**

