


A Member of the ABB Group



INSTALLATION INSTRUCTIONS FOR LUMINAIRE MOUNTS

DO NOT ATTEMPT INSTALLATION UNTIL YOU ARE FAMILIAR WITH ALL PRECAUTIONS AND PROCEDURES OUTLINED WITHIN THIS INSTRUCTION SHEET.








LUMINAIRE MUST BE GROUNDED AS REQUIRED PER PARAGRAPH 410.44 AND ARTICLE 250 OF THE NATIONAL ELECTRIC CODE AND/OR SECTION 10 AND RULE 30-500 OF CANADIAN ELECTRIC CODE. FAILURE TO PROPERLY GROUND THIS LUMINAIRE WILL CREATE AN ELECTRICAL SHOCK HAZARD WHICH CAN CAUSE SERIOUS INJURY OR DEATH.

1. PENDANT AND STANCHION TYPE MOUNTS

Screw the luminaire mount onto previously install conduit, a minimum of 3 threads must be engaged between the conduit and luminaire mount. Tighten the conduit locking screw (A) to 30 inch pounds (figure.1).

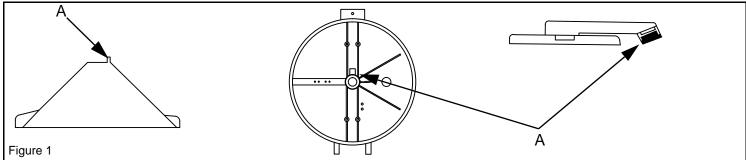

2. CEILING AND WALL TYPE MOUNTS

Install the luminaire mount to the appropriate mounting surface by means of the external mounting lugs (B).

The bolt positions are as follows:


a. Ceiling:

12-3/4" bolt circle for std - 3 or 9-5/8" bolt circle for mini - M3

b. Wall:

3-3/4" X 3-3/4" bolt pattern

Install conduits plug in any unused conduit entries with the supplied close-up plugs (C), minimum of 3 threads must be engaged between the conduit or close-up plug and luminaire mount.

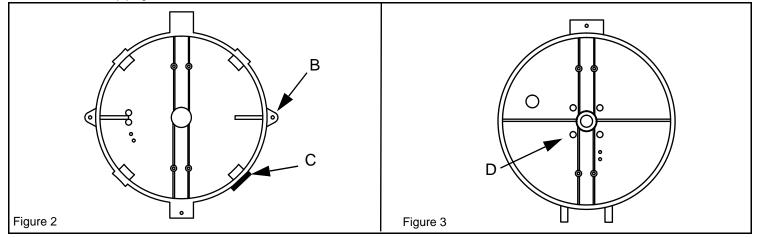

3. 4 INCH OUTLET BOX TYPE MOUNTS

Install the luminaire mount to previously installed 4 inch outlet box using supplied gasket and screws tighten mounting screws (d) to 30 inch- pounds.

Always inspect gasket joints before closing the luminaire, if gasket shows any indication of deterioration, replace the luminaire.