

PELOTON™ SINGLE POINT MOUNTING INSTALLATION

STEP 1

Remove indicated knock outs, both sides.

STEP 2


Attach SPM bracket to housing. Be sure that hooks engage housing.

STEP 3

Lock bracket in place using 4 screws.

STEP 4

Attach SPM end caps using supplied screws.

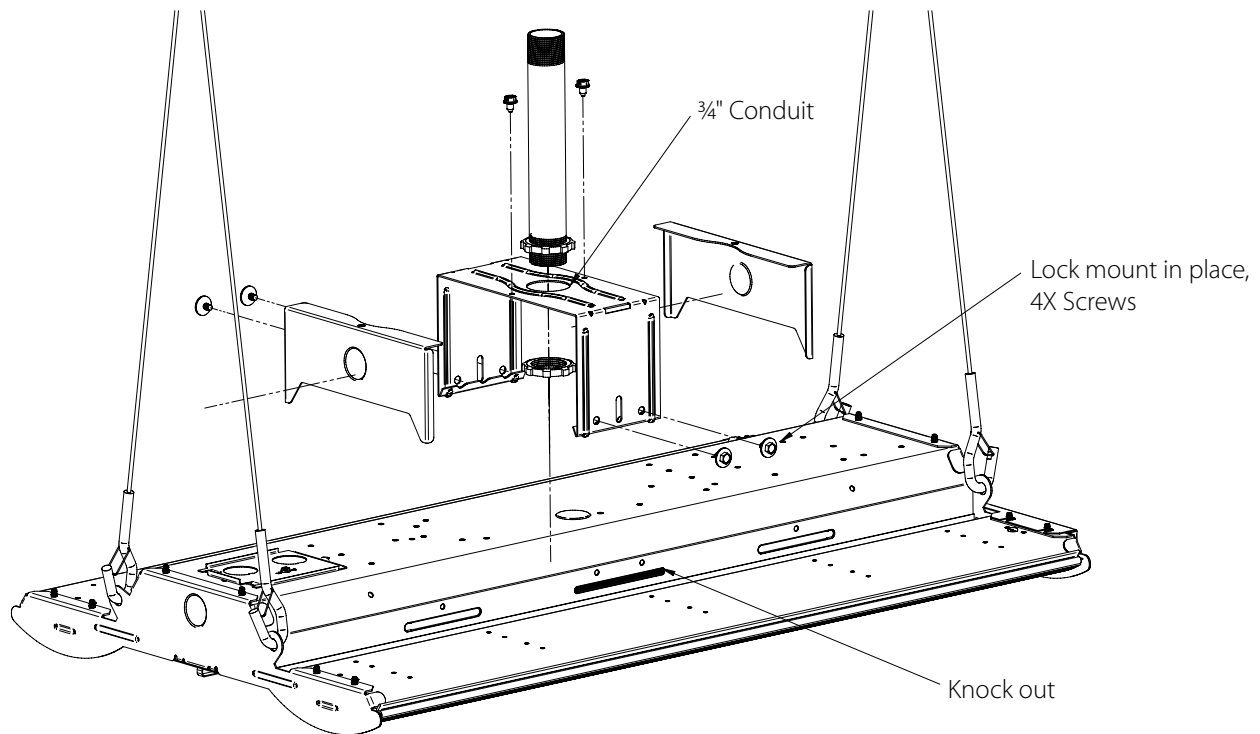

*SPM bracket includes $\frac{3}{4}$ " conduit feed.

*SPM kit includes PELQM aircraft cables.