

Operating Instructions 650SOP, K650SOP, and 750SOP Deadbreak Stand-Off Plugs

CONTENTS: Stand off plug with stainless steel mounting hardware, Lubricant, Instruction Sheets.

The Elastimold 650SOP, K650SOP, and 750SOP stand-off plugs are used to isolate and Elastimold 655LR, K655LR, or 755LR elbow connector, respectively.

THE STAND-OFF PLUG SHOULD ALWAYS BE MATED WITH EITHER AN INSULATED CAP (650SOP AND K650SOP), A BUSHING CONVERTER, OR AN ELBOW CONNECTOR WHEN NOT IN USE TO PREVENT CONTAMINATION OF THE INTERFACE.

DANGER

All apparatus must be de-energized during installation or removal of part(s). For loadbreak products follow operating instructions. All deadbreak connectors must be de-energized before operating. All 200A deadbreak connectors must be mechanically secured with bails when connected.

All apparatus must be installed and operated in accordance with individual user, local, and national work rules. These instructions do not attempt to provide for every possible contingency.

Do not touch or move energized products.

Excess distortion of the assembled product may result in its failure.

FOR MORE INFORMATION ON PARTS, INSTALLATION RATINGS AND COMPATIBILITY, CALL THE NEAREST ELASTIMOLD OFFICE.

Inspect parts for damage, rating and compatibility with mating parts.

This product should be installed only by competent personnel trained in good safety practices involving high voltage electrical equipment. These instructions are not intended as a substitute for adequate training or experience in such safety practices.

Failure to follow these instructions will result in damage to the product and serious or fatal injury.


If this product is supplied with a protective shipping cover(s), remove this shipping cover(s) and replace with the appropriate HV insulated cap(s) or connector(s) before submerging or energizing the circuit.

IMPORTANT

1. Check contents of package to ensure they are complete and undamaged.
2. Check all components to ensure proper fit with cable and/or mating products.
3. Read entire installation instructions before starting.
4. Have all required tools at hand and maintain cleanliness throughout the procedure.


STEP 1

Lubricate the interface with lubricant supplied or ELASTIMOLD approved lubricant. DO NOT SUBSTITUTE. Other lubricants may be harmful to this product or its mating products.

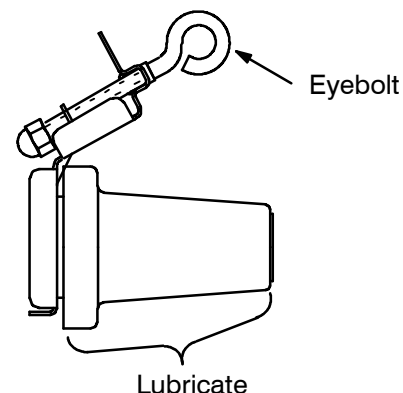

STEP 2

Attach hotstick to eyebolt of stand-off plug carriage assembly. Slide carriage assembly into parking stand and rotate eyebolt clockwise, until carriage assembly is snug against the apparatus surface. Remove hotstick from eyebolt.

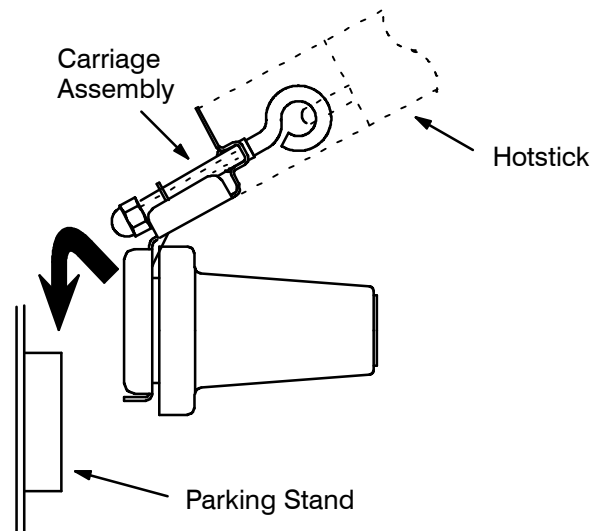

STEP 3

Continue according to overall operating procedure manual.

Thomas & Betts

8155 T&B Boulevard, Memphis, Tennessee 38125
(800) 888-0211 Fax: (800) 888-0690