





Wiremold® Electrical Systems conform with, and should be installed and properly grounded in compliance with requirements of the current National Electrical Code or codes administered by local authorities. All electrical products may represent a possible shock or fire hazard if improperly installed or used. Wiremold electrical products are UL Listed, made for interior use and should be installed by qualified electrical professionals in conformance with current local codes and/or the National Electrical Code.


WallSource™ New Construction Box INSTALLATION INSTRUCTIONS In Stud Construction

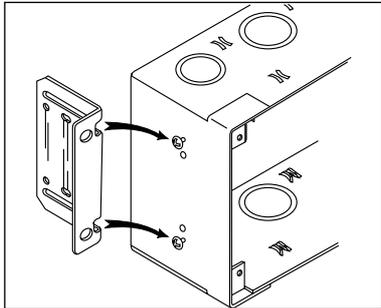


1. Install both mounting brackets, included with WSC42-6.

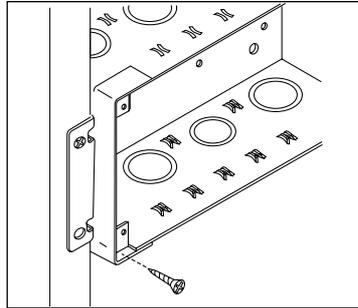


2. Attach to stud.

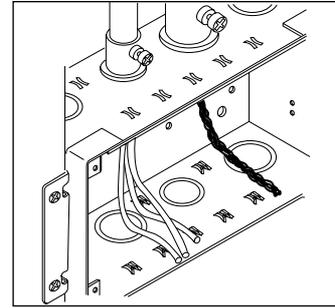


3. Pull wire and cable.

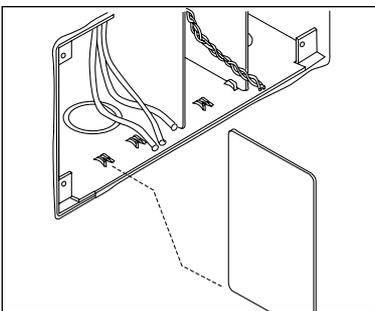


4. Install divider(s).

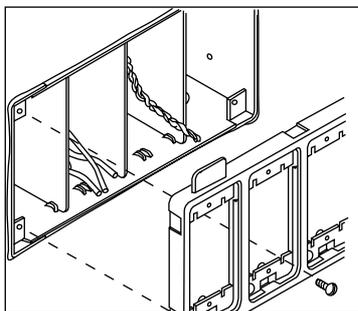

5. Install self-levelling WSC07-6 device mounting bracket.

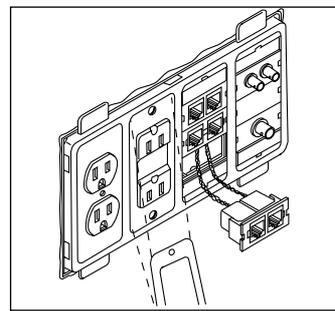


6. Mount devices.

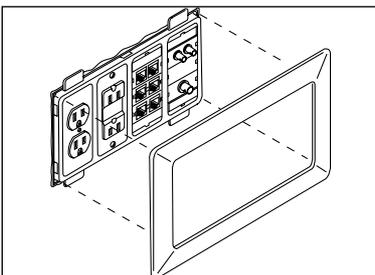


7. Snap on trim ring, included with WSC07-6.

For Retrofit Applications in Stud Construction:

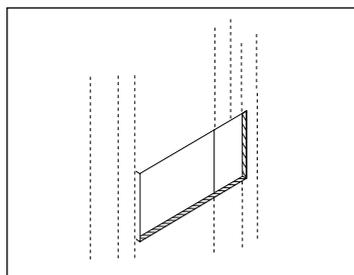

1. Cut opening in wall.
Install WSC42-6.

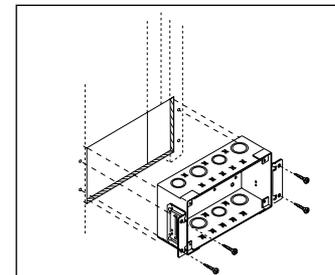

2. Attach brackets to studs.
Continue with Step 3.