

Installation Instructions: ECS-G1

Jacketed Cable Grounding and Sealing Kit

for Jacketed Drain Wire Shielded Cable

200 ECS-G1 - Cable O.D. Range 0.80"-1.50" (20-38mm)
600 ECS-G1 - Cable O.D. Range 1.28"-2.30" (32-58mm)

CONTENTS: Cold Shrink Tube, 3-Mastic, Ground Rod equivalent to #2 AWG conductor, Installation Instructions.

DANGER

All apparatus must be de-energized during installation or removal of part(s).

Do not touch or move energized products in the work area.

These instructions do not attempt to provide for every possible contingency.

Failure to follow these instructions will result in damage to the product and serious or fatal injury.

This product should be installed only by competent personnel trained in good safety practices involving high voltage electrical equipment. These instructions are not intended as a substitute for adequate training or experience in such safety practices.

FOR MORE INFORMATION ON PARTS, INSTALLATION RATINGS AND COMPATIBILITY, CALL THE NEAREST ELASTIMOLD® OFFICE.

All apparatus must be installed and operated in accordance with individual user, local and national work rules and electrical standards.

If this product is supplied with a protective shipping cover(s), remove this shipping cover(s) and replace with the appropriate HV insulated cap(s) or connector(s) before submerging or energizing the circuit.

Inspect parts for damage, rating and compatibility with mating parts.

Excess distortion of the assembled product may result in its failure.

Limited Warranty:

1. T&B warrants that its products will be free from defects in materials or workmanship for a period of two (2) years, except for tools which are warranted separately (see warranty accompanying those products). Fisher Pierce® products and Elastimold® Reclosers are warranted for three years; and Joslyn™ VBT and VBU capacitor switches are warranted for four years or 40,000 operations whichever occurs first. Upon prompt notification of a warranted defect, T&B will, at its option, repair or replace the defective product.
2. In no event shall T&B be liable for any consequential, indirect or special damages, nor will T&B be liable for transportation, labor, or other charges arising out of the removal or reinstallation of its products. Liability for breach of warranty is limited to the cost of repair or replacement of the warranted product only.
3. Misuse, misapplication or modification of T&B products immediately voids all warranties.


THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES AND REMEDIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE SPECIFICALLY DISCLAIMED.

IMPORTANT

1. Check contents of package to ensure they are complete and undamaged.
2. Check all components to ensure proper fit with cable and/or mating products.
3. Read entire installation instructions before starting.
4. Have all required tools at hand and maintain cleanliness throughout the procedure.

STEP 1

Wipe the outer jacket clean a distance of 30" (750mm). Remove the outer jacket for a distance of 4" (102mm) beyond the semi-con shield dimension recommended by the product manufacturer. Un-wrap the outer wires. **DO NOT CUT OFF.** Bend and fold back out of the way. Wrap a piece of vinyl tape around cable covering the wire ends.

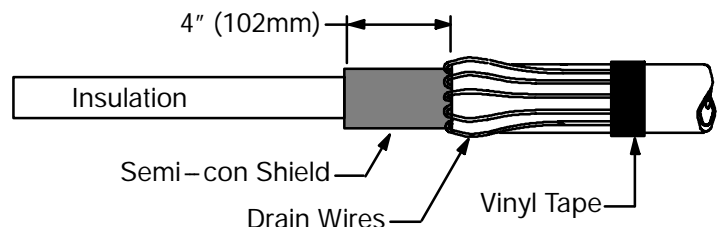


Thomas & Betts

A Member of the ABB Group

STEP 2

Slide cold shrink tube (loose end first) onto the cable a distance of 18" (458mm).

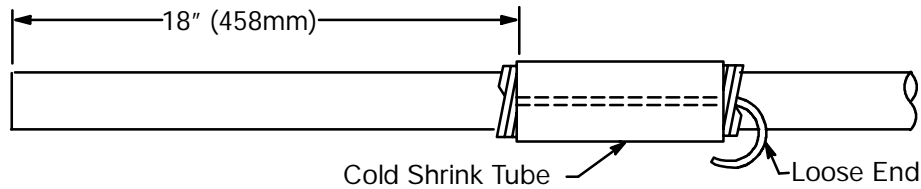


STEP 3

Install the connector on the cable per manufacturer' instructions..

STEP 4

Cut the twisted wires to length to fit into the connector of the ground rod and crimp. Apply one wrap of mastic as shown.

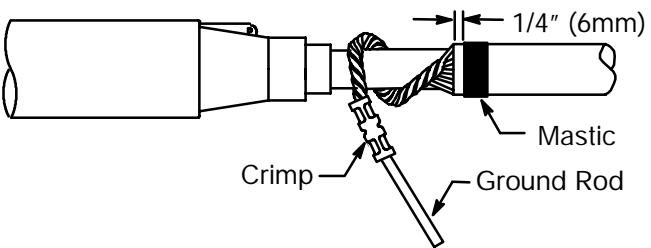


STEP 5

Place ground rod against the cable. Apply second piece of mastic over the ground rod as shown.

Over wrap mastic with two half-lapped layers of vinyl tape.


Wrap the third piece of mastic around the cable entrance of the connector being used. Over wrap mastic with two half-lapped layers of vinyl tape.

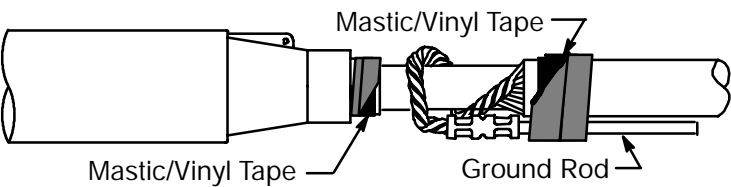

STEP 6


Pull loose end from back and unwind cord in clockwise direction until plastic core is flush with end of cold shrink tube. Slide cold shrink tube into position and continue to unwind cord in clockwise direction. Cold shrink tube will collapse at product end first.

IMPORTANT: Tube must overlap elbow or joint end at least 1" (25mm) or cable adapter to the shoulder for a proper seal.

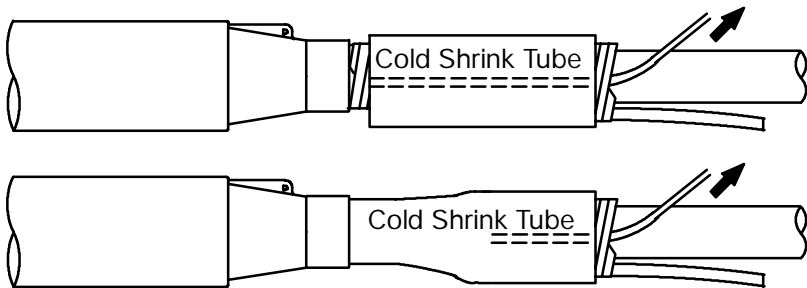

STEP 7

Using suitable connector (Not Supplied), ground assembly in accordance with standard utility practices.

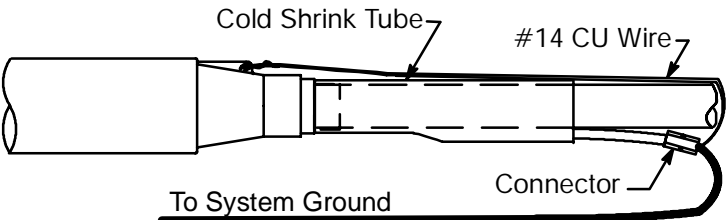

THOMAS & BETTS CORP. PROPRIETARY AND CONFIDENTIAL

BY ACCEPTANCE OF THIS DOCUMENT YOU AGREE THAT ALL RIGHTS TO THE DRAWINGS AND INFORMATION CONTAINED IN IT, AS WELL AS THE SUBJECT MATTER AND ALL PROPRIETARY AND NOVEL FEATURES DISCLOSED, ARE OWNED BY THOMAS & BETTS CORPORATION ("THE COMPANY" AND A MEMBER OF THE ABB GROUP) AND THAT DEVICES EMBODYING SUCH FEATURES OR INFORMATION DERIVED FROM THESE DRAWINGS WILL NOT BE MANUFACTURED BY OR FOR YOU OR DISCLOSED TO OTHERS WITHOUT THE PRIOR EXPRESS WRITTEN CONSENT OF THE COMPANY. THESE DRAWINGS ARE NOT TO BE COPIED OR REPRODUCED OR DISCLOSED TO OTHERS WITHOUT THE PRIOR EXPRESS WRITTEN CONSENT OF THE COMPANY. ALL DRAWINGS AND INFORMATION ARE TO BE RETURNED TO UPON DEMAND OR UPON COMPLETION OF PURPOSE FOR WHICH LENT. COPYRIGHT THOMAS & BETTS CORP. ALL RIGHTS RESERVED. ALL OTHER TRADEMARKS ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS.