

Mini-Com 48-Port High Density Shielded Modular Patch Panels

Part Numbers: CP48HDBL, CPA48HDBL


© Panduit Corp. 2013


INSTALLATION INSTRUCTIONS

PN561

Contents:

- 1 Panel
- 4 #12-24 mounting screws
- 4 M6 mounting screws
- 2 Trilobular #12-24 grounding screws
- 2 Trilobular M6 grounding screws

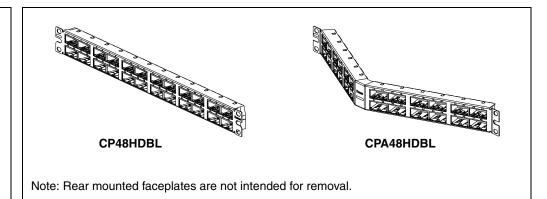


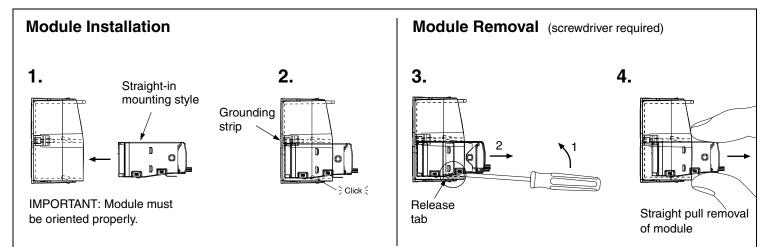



Use 1 to 2 included #12-24 or M6 trilobular grounding screws to properly ground the panel to the rack.

Trilobular grounding screw(s) can be installed in place of a mounting screw or in the slot in between on either side of the panel.

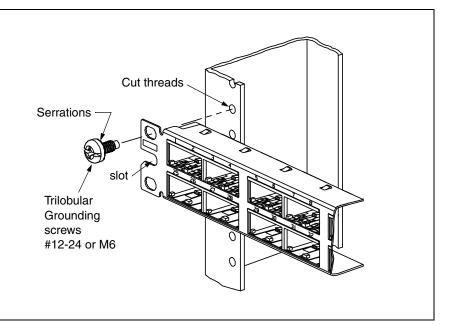

For Instructions in Local Languages and Technical Support:

www.panduit.com/resources/install_maintain.asp



E-mail: techsupport@panduit.com Phone: 866-405-6654