



Swapping rail pins for rails with tapped holes


- When Rails have tapped holes as opposed to the square cage nut holes, the Rail Pins will need to be swapped out with the provided smaller diameter Rail Pins prior to installation.

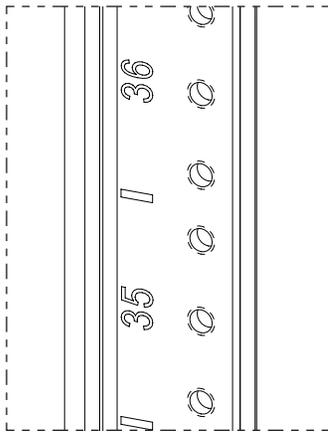

Rails with Tapped holes

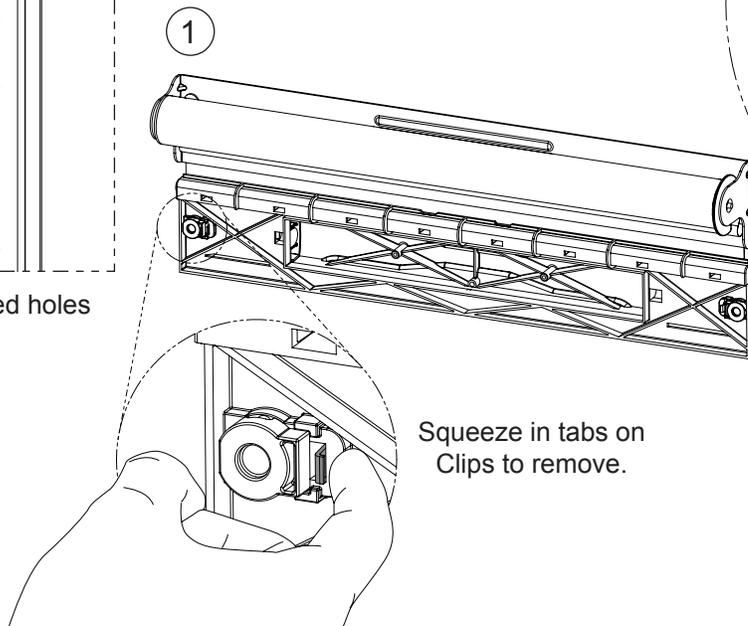


Squeeze in tabs on
Clips to remove.

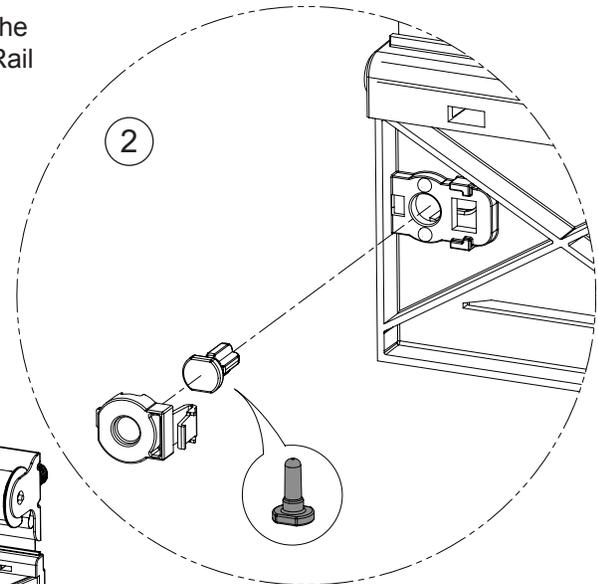


Replace the larger diameter pins
with the smaller diameter ones and
re-install Clips.
**LISTEN TO MAKE CERTAIN THE
CLIPS 'CLICK' BACK IN PLACE.**

Install Blanking Shade to Cabinet Rails

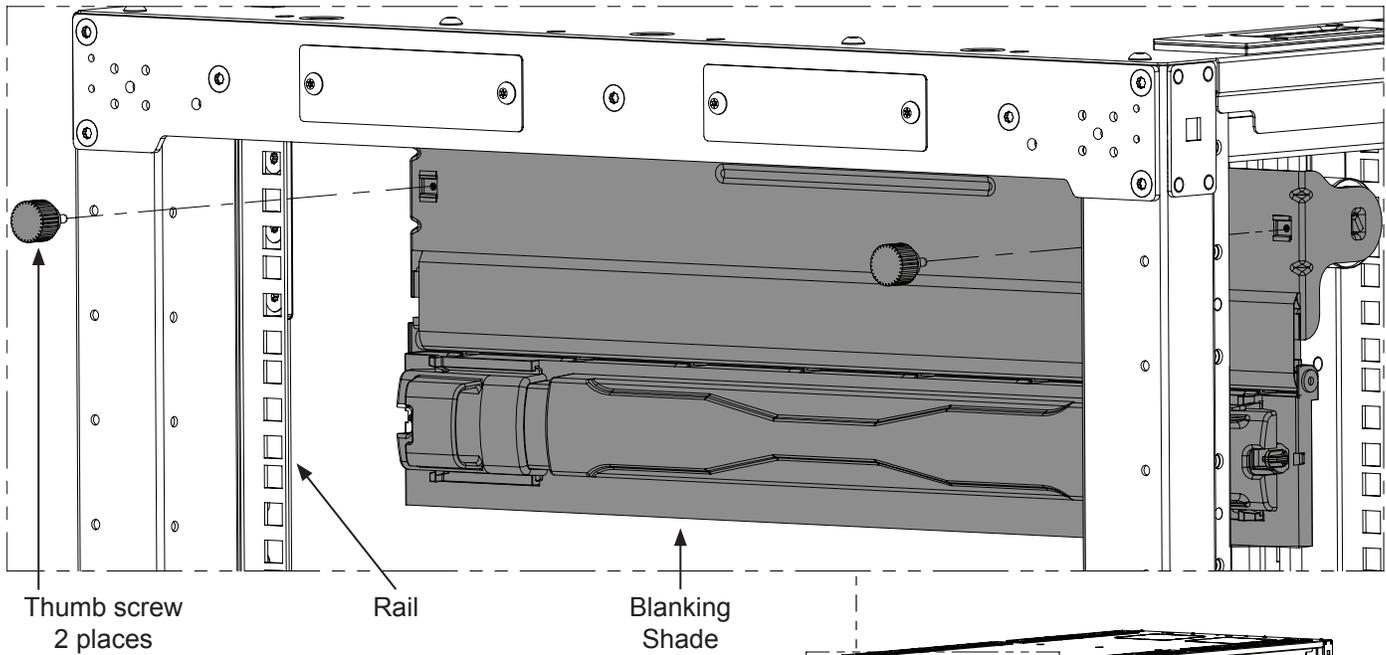


- Remove (2) thumb screws and position the Blanking Shade holes with the Cabinet rail holes at the desired RU height.
- Secure the Blanking Shade to the Cabinet rails by re-installing the (2) thumb screws through the rails and into the Blanking Shade.

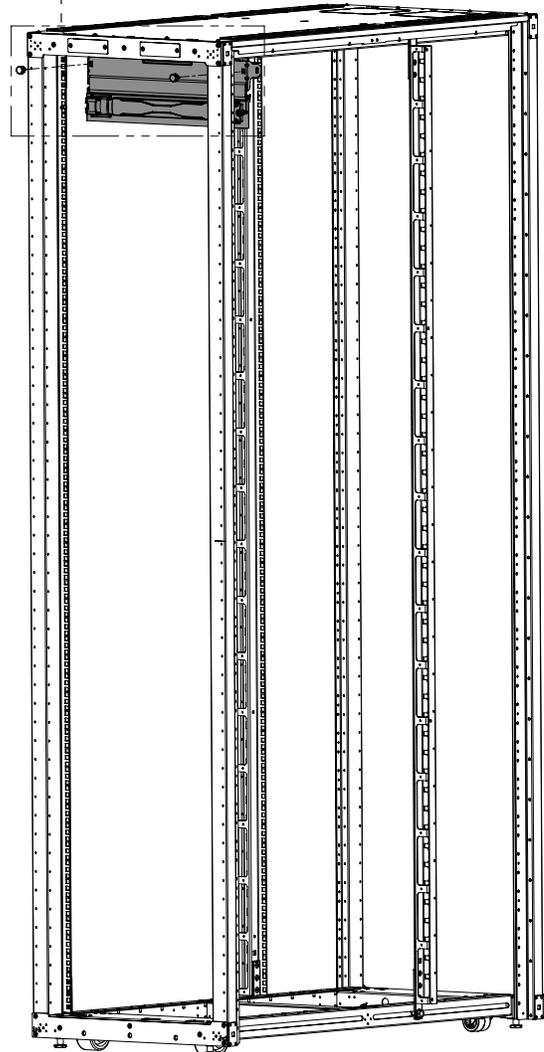


Adjust Shade to desired position


- Push the (2) spring loaded clips of the Blanking Shade inward and pull shade down to desired position.
- Ensure the pins of the Blanking Shade lock into the Rail holes.

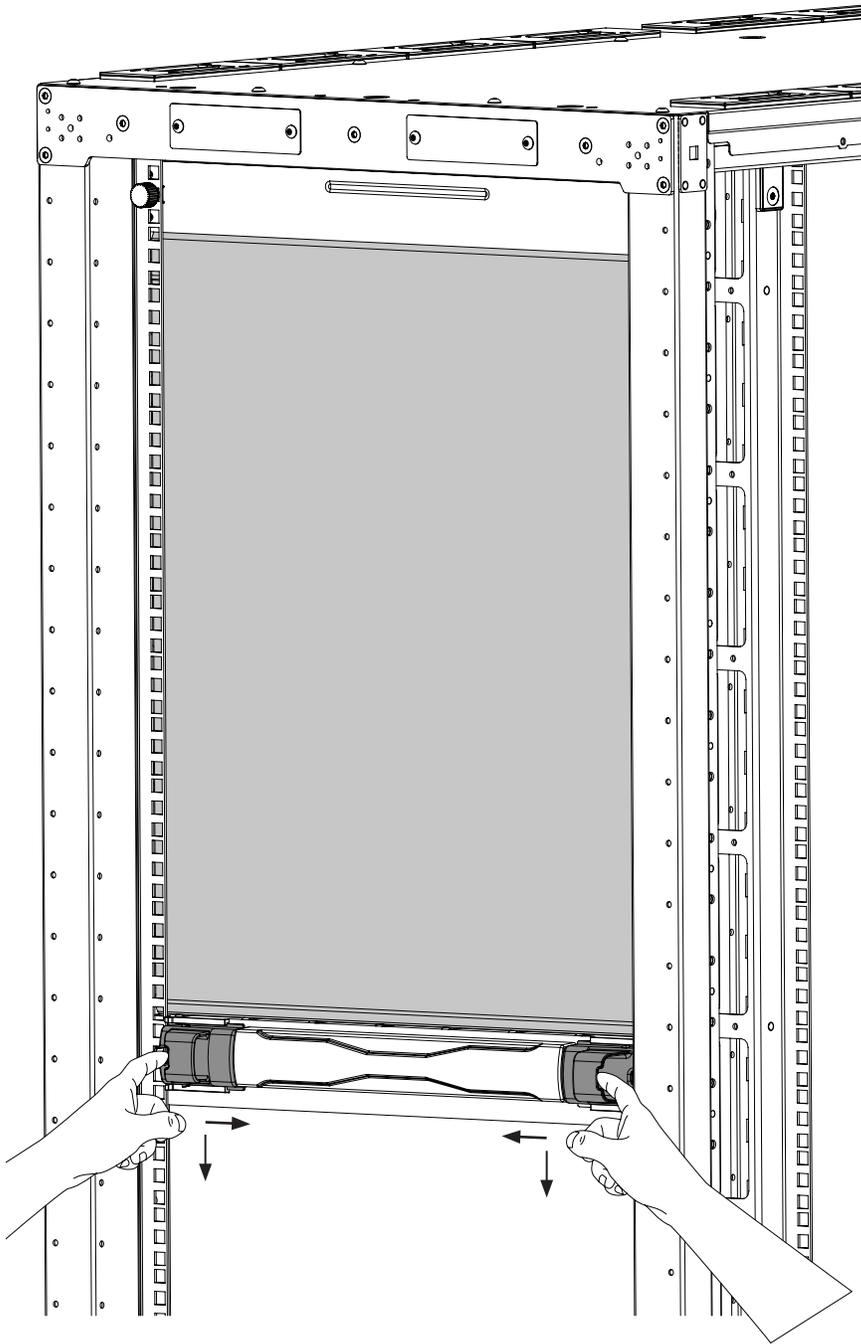


Shade can be drawn to a maximum of 51 RU spaces.

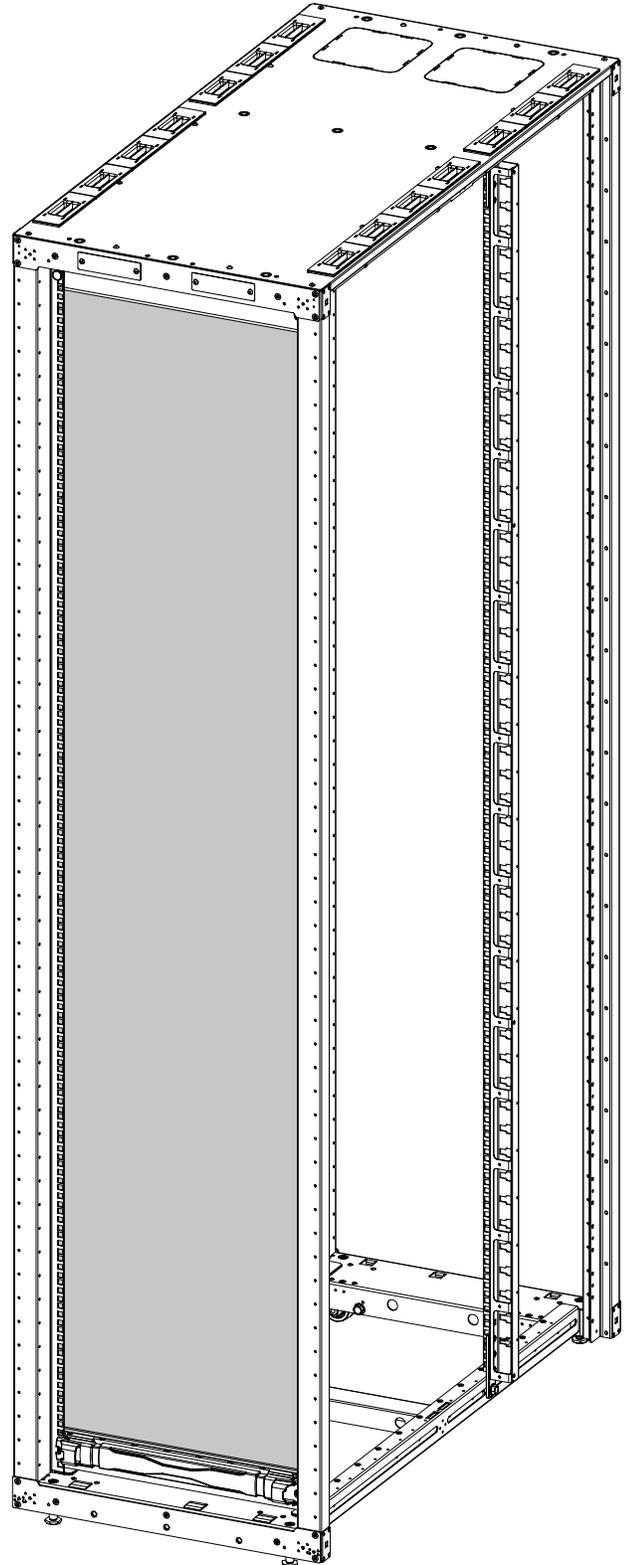


Pins of Blanking Shade must lock into Rail holes to lock Shade position.

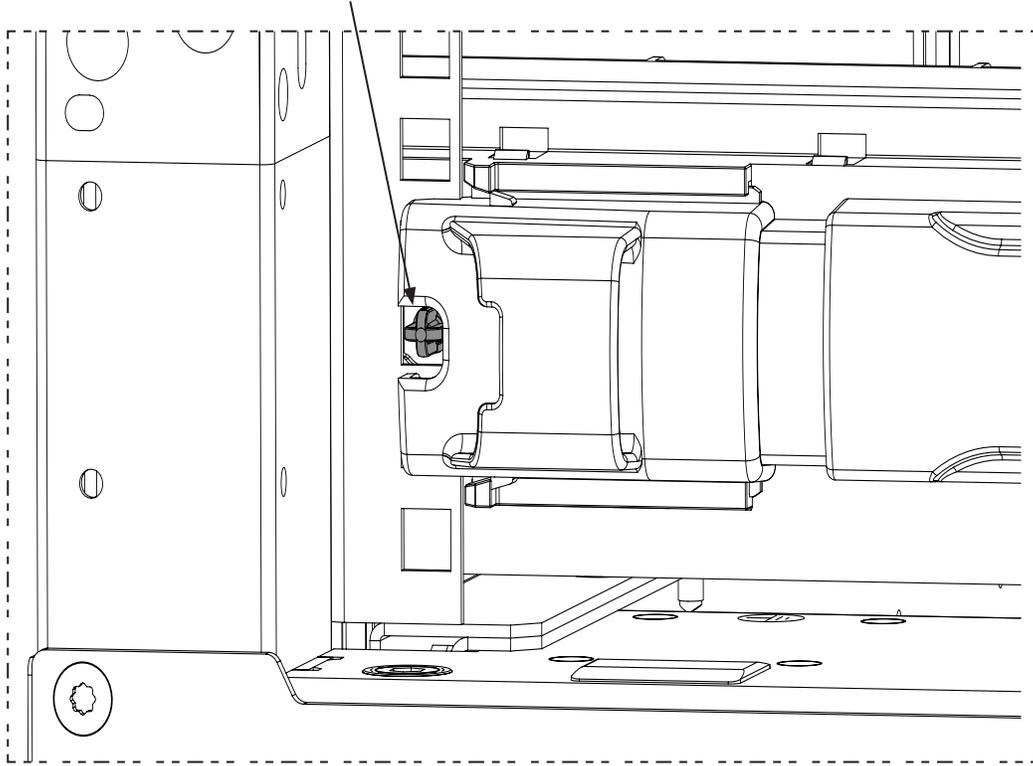


Install optional Blanking Shade Clips

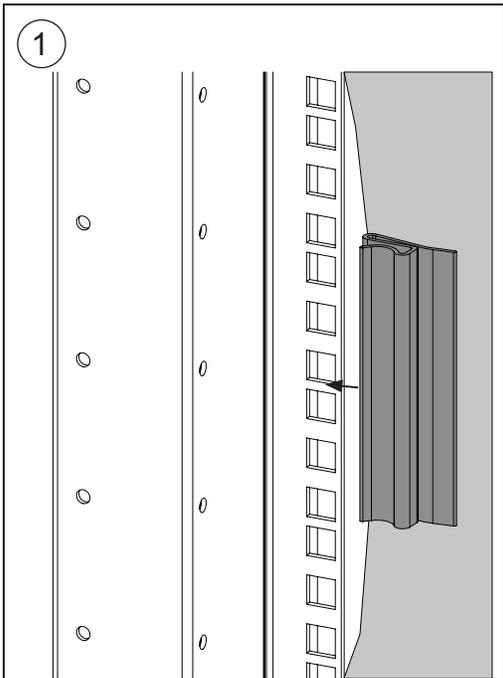

1 Install Blanking Shade Clip to Rail.

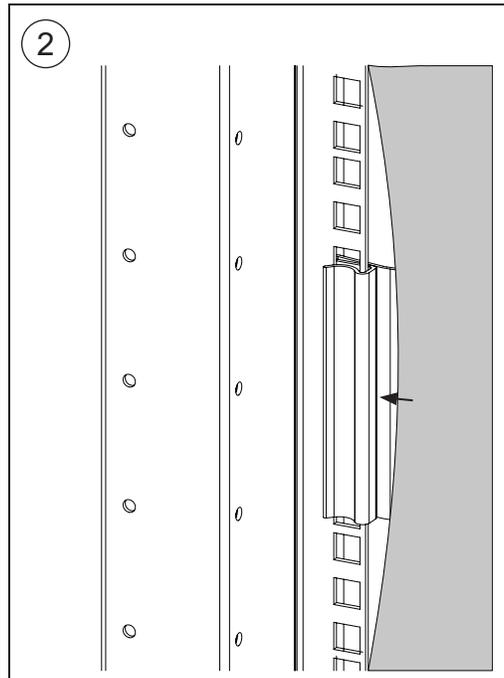

2 Install shade to the Blanking Shade Clip.

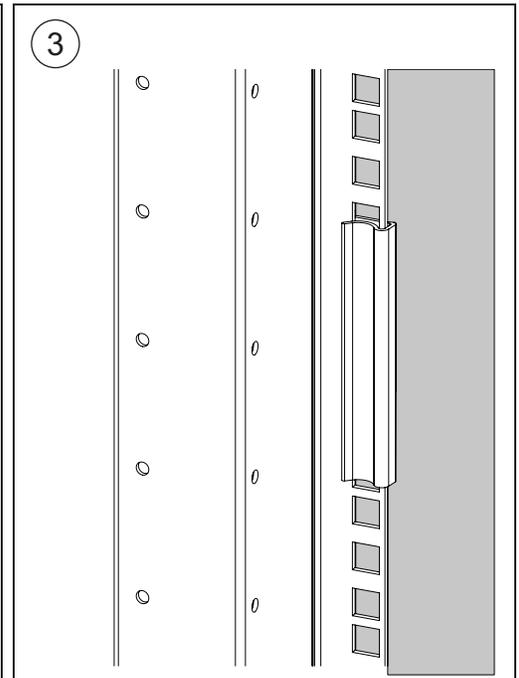

3 Repeat on opposite Rail.

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp

PANDUIT

www.panduit.com

E-mail:
techsupport@panduit.com

Phone:
866-405-6654