
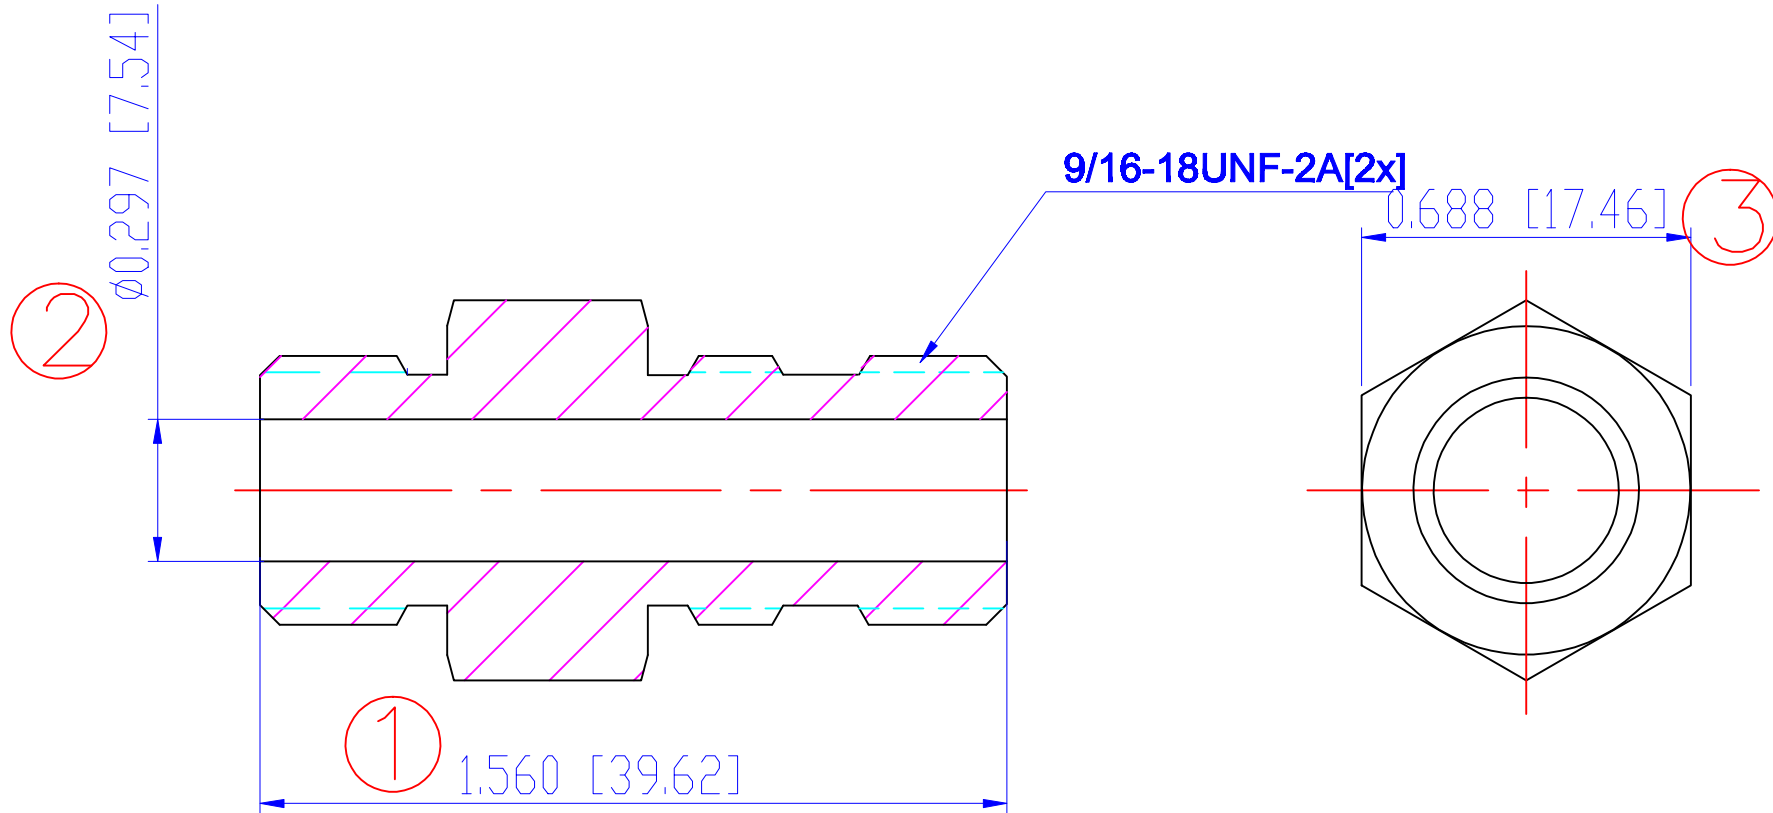


**INSTALL: 0306N-06,6#WASHER, AS906 O-RING AND AS906-O-RING**

**OTHERS:**



**NOTE:**  
**1. Move Burrs R0.005MAX**  
**2. Parts to be free of dirt and chips**

<p>"This drawing contains proprietary and confidential information of Midland Metal Mfg., Co. and shall not be reproduced, copied, loaned, or submitted to outside parties for examination without our consent"</p>				Date:		UNIT:	INCH	Material:	
				Drawn:		Scale:	1=1	Part Title:	9/16-18 9/16-18 Nipple
4				Checked:		PROJECT		PART NO.:	6403O6
3				Approved:		<p><b>MIDLAND METAL MFG. CO.</b>  <b>KANSAS CITY, MO</b></p>		DWG. NO.:	
2									
1									
NO.	PCA	Date	Revision	<p>TOLERANCES ARE:          DECIMALS.          .X:±0.03          .XX:±0.01          .XXX:±0.005          ANGLES:±1°          FRACTIONS ± 1/8</p>					