## ABA/ABU/ABW

# Adjustable and Standoff Post Bases

#### Additional standoff bases are on p. 321.

The AB series of retrofit adjustable post bases provide a 1" standoff for the post, are slotted for adjustability and can be installed with nails, Strong-Drive® SD Connector screws or bolts (ABU). Depending on the application needs, these adjustable standoff post bases are designed for versatility, cost-effectiveness and maximum uplift performance.

#### Features:

- The slot in the base enables flexible positioning around the anchor bolt, making precise post placement easier
- The 1" standoff helps prevent rot at the end of the post and meets code requirements for structural posts installed in basements or exposed to weather or water splash

Material: Varies (see table)

Finish: ZMAX® and some in stainless steel; see Corrosion Information, pp. 13–15

#### Installation:

- · Use all specified fasteners; see General Notes.
- See our Anchoring and Fastening Systems for Concrete and Masonry catalog, or visit strongtie.com for retrofit anchor options or reference technical bulletin T-ANCHORSPEC.
- Post bases do not provide adequate resistance to prevent members from rotating about the base and therefore are not recommended for non-top-supported installations (such as fences or unbraced carports).
- Place the base, cut washer(s) or load transfer plate(s) and nut(s) on the anchor bolt(s). Make any necessary adjustments to post placement and tighten the nut securely on the anchor bolt.
- See strongtie.com for information on hollow column installation.

#### ABW

Place the standoff base and then the post in the ABW and fasten on three vertical sides, using nails or Strong-Drive SD Connector screws

- Bend up the fourth side of the ABW and fasten using the correct fasteners

#### ABU

Place the standoff base and then the post in the ABU

 Fasten using nails or Strong-Drive SD Connector screws or bolts (ABU88Z, ABU1010Z, ABU1212Z – SDS optional)

#### ABA

Place the post in the ABA

- Fasten using nails or Strong-Drive SD Connector screws


Codes: See p. 12 for Code Reference Key Chart

### Allowable Loads - Beam Installation


Model	Nominal	Material (ga.)		Dimensions (in.)			F	asteners		/SP le Loads	SPF/HF Allowable Loads	
No.	Beam Size	Base	Strap	w	L	Н	Anchor Dia. (in.)	Nails	Uplift (160)	Down (100)	Uplift (160)	Down (100)
ABU46Z	Double 2x	12	12	3%16	5	7	5/8	(12) 0.162 x 3½	2,030	8,475	1,820	6,075
ABU46Z	4x	12	12	3%16	5	7	5/8	(12) 0.162 x 3½	2,155	9,890	1,850	7,090
ABU46RZ	Rough 4x	12	12	4	6	6¾	5/8	(12) 0.162 x 31/2	2,155	9,890	1,850	7,090
ABU66Z	Triple 2x	12	10	5½	5	61/16	5/8	(12) 0.162 x 3½	1,405	12,715	1,165	9,115
ABU66Z	6x	12	10	5½	5	61/16	5/8	(12) 0.162 x 3½	1,905	12,920	1,640	11,110
ABU66RZ	Rough 6x	12	10	6	6	5 13/16	5/8	(12) 0.162 x 3½	1,905	12,920	1,640	11,110

- Uplift loads have been increased for earthquake or wind loading with no further increase allowed. Reduce where other loads govern.
- 2. Downloads may not be increased for short-term loading.
- 3. Specifier is to design concrete and anchorage for uplift capacity.
- 4. Beam depth must be a minimum of 7".
- 5. Shims are required for double 2x and triple 2x installations as shown in the illustrations. Additional fastening of shim to beam is not required.



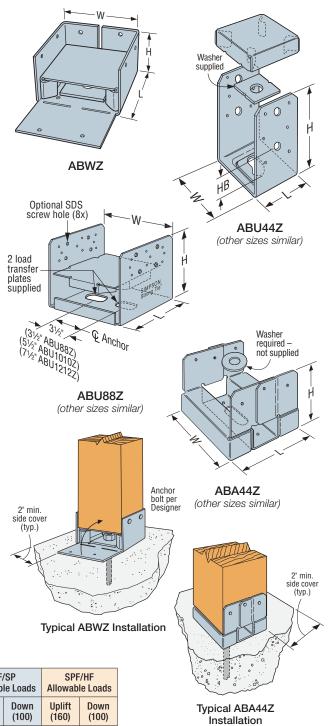

Strong-

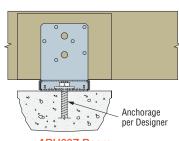

ABU66Z Beam Installation

## SIMPSON Strong-Tie

## Adjustable and Standoff Post Bases (cont.)

These products are available with additional corrosion protection. For more information, see p. 15.

For stainlesssteel fasteners, see p. 21. Many of these products are approved for installation with Strong-Drive® SD Connector screws. See pp. 335–337 for more information.

### Allowable Loads - Post Installation

	Model	Nominal Post Size	Material (ga.)		Dimensions (in.)				Fasteners				Allowable Loads (DF/SP)			Code
	No.		Base	Strap	w	L	Н	НВ	Anchor Dia. (in.)	Nails -	Bolts		Uplift		Down	Ref.
											Qty.	Dia.	Nails	Bolts	(100)	
	ABA44Z	4x4	16	16	3%6	3%	31/16		1/2	(6) 0.148 x 3	_	_	725	_	5,660	
	ABW44Z	4x4	16	16	3%6	3%16	21/4	_	1/2	(8) 0.148 x 3	_	_	1,005	_	7,180	
SS	ABU44Z	4x4	16	12	3%6	3	5½	13⁄4	5/8	(12) 0.162 x 3½	2	1/2	1,900	2,300	7,570	
	ABU44RZ	Rough 4x4	16	12	41/16	3	51/4	1½	5/8	(12) 0.162 x 3½	2	1/2	1,900	2,300	7,570	
	ABA44RZ	Rough 4x4	16	16	41/16	31/8	213/16	_	1/2	(6) 0.148 x 3	_	_	655	_	7,215	
	ABW44RZ	Rough 4x4	16	16	4	41/16	1 15/16	ı	1/2	(8) 0.148 x 3	_		835	_	7,180	
	ABW46Z	4x6	12	16	3%6	5%6	3	_	1/2	(10) 0.148 x 3	_	_	845	_	4,590	
	ABA46Z	4x6	14	14	3%6	5¾6	31/8		5/8	(8) 0.162 x 3½	_	_	870	_	10,500	
SS	ABU46Z	4x6	12	12	3%6	5	7	2%	5/8	(12) 0.162 x 3½	2	1/2	2,405	2,265	12,520	IBC, FL, LA
	ABU46RZ	Rough 4x6	12	12	41/16	5	6¾	2%	5/8	(12) 0.162 x 3½	2	1/2	2,405	2,265	12,520	
	ABW46RZ	Rough 4x6	12	16	4	6	213/16	_	1/2	(10) 0.148 x 3	_	_	780	_	4,590	
	ABA46RZ	Rough 4x6	14	14	41/16	5¾6	27/8		5/8	(8) 0.162 x 3½	_		870	_	10,690	
	ABU5-5Z	51% x 51%	12	10	51/4	5	61/16	13/4	5/8	(12) 0.162 x 3½	2	1/2	2,235	2,235	10,570	
	ABU5-6Z	5% x 6	12	10	61/8	5	61/16	13/4	5/8	(12) 0.162 x 3½	2	1/2	2,235	2,235	10,570	
	ABA66Z	6x6	14	14	5½	5%	31/8	_	5/8	(8) 0.162 x 3½	_	_	850	_	10,575	
	ABW66Z	6x6	12	14	5½	5%6	3	_	1/2	(12) 0.148 x 3	_	_	1,190	_	12,935	
SS	ABU66Z	6x6	12	10	5½	5	61/16	13/4	5/8	(12) 0.162 x 3½	2	1/2	2,475	2,190	18,205	
	ABU66RZ	Rough 6x6	12	10	61/16	5	5 13/16	1½	5/8	(12) 0.162 x 3½	2	1/2	2,475	2,190	18,205	
	ABA66RZ	Rough 6x6	14	14	6	5¾6	27/8		5/8	(8) 0.162 x 3½	_	_	850	_	11,465	
	ABW66RZ	Rough 6x6	12	14	6	6	213/16	_	1/2	(12) 0.148 x 3	_	_	1,065	_	12,935	
	ABW7-7Z	71/8 x 71/8	12	14	71/8	75/16	3	_	1/2	(12) 0.148 x 3	_	_	840	_	14,535	
SS	ABU88Z	8x8	14	12	7½	7	7	_	(2) 5/8	(18) 0.162 x 3½	_	_	2,570	_	23,140	IBC, FL
	ABU88RZ	Rough 8x8	14	12	8	7	7	_	(2) 5/8	(18) 0.162 x 3½	_	_	2,450	_	18,045	IBC, FL, LA
	ABU1010Z	10x10	14	14	9½	9	71/4	_	(2) 5/8	(22) 0.162 x 3½	_	_	2,270	_	32,020	
	ABU1010RZ	Rough 10x10	14	14	10	9	7	_	(2) 5/8	(22) 0.162 x 3½	_	_	1,830	_	31,650	
	ABU1212Z	12x12	12	12	11 ½	11	71/4		(2) 5/8	(22) 0.162 x 3½	_	_	3,000	_	28,070	
	ABU1212RZ	Rough 12x12	12	12	12	11	7	_	(2) 5/8	(22) 0.162 x 3½	_	_	3,000	_	28,070	

- 1. Uplift loads have been increased for earthquake or wind loading with no further increase allowed. Reduce where other loads govern.
- 2. Downloads may not be increased for short-term loading.

C-C-2019 @2019 SIMPSON STRONG-TIE COMPANY INC.

- 3. Specifier is to design concrete and anchorage for uplift capacity.
- 4. ABU products may be installed with either bolts or nails (not both) to achieve table loads. ABU88Z, ABU88RZ, ABU1010Z, ABU1010RZ, and ABU1212Z/RZ may be installed with (8) 1/4" x 3" Strong-Drive® SDS Heavy-Duty Connector screws (sold separately) for the same table load.
- 5. For higher downloads, pack grout solid under 1" standoff plate before installation. Base download on column or concrete, according to the code.
- 6. HB dimension is the distance from the bottom of the post up to the first bolt hole.
- 7. Structural composite lumber columns have sides that show either the wide face or the edges of the lumber strands/veneers. For SCL columns, the fasteners for these products should always be installed in the wide face.
- 8. Downloads shall be reduced where limited by capacity of the post.
- 9. Fasteners: Nail dimensions in the table are listed diameter by length. See pages pp. 21–22 for fastener information.