


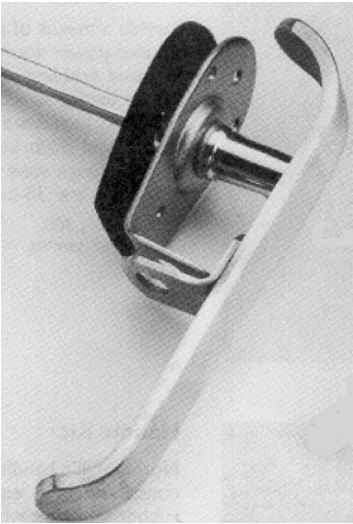

L36  
Padlocking Handle Kit

Hoffman Enclosures Inc.  
2100 Hoffman Way  
Anoka, MN 55303-1745  
(763) 422-2211  
[www.hoffmanonline.com](http://www.hoffmanonline.com)

Pentair Electronic Packaging  
170 Commerce Drive  
Warwick, RI 02886  
(401) 732-3770  
[www.pentair-ep.com](http://www.pentair-ep.com)

Mexico  
Pentair Enclosures, S. de R.L. de C.V.  
Federico T. de la Chica No. 8 Piso 4 A  
Circuito Comercial Plaza Satélite  
Ciudad Satélite,  
Naucalpan, México C.P. 53100  
011-52-55-5393-8263

Canada  
Hoffman-Schroff  
111 Grangeway Avenue, Suite 504  
Scarborough, Ontario M1H 3E9  
(416) 289-2770  
1-800-668-2500 (Canada only)

Germany  
Schroff GmbH  
Langenaber Str. 96-100  
75334 Straubenhardt  
49 (07082) 794-0 [www.schroff.de](http://www.schroff.de)

Great Britain  
Schroff UK Ltd.  
Maylands Avenue  
Hemel Hempstead, Herts HP2 7DE  
44 (01442) 240471 [www.schroff.co.uk](http://www.schroff.co.uk)

Sweden  
Schroff Scandinavia AB  
Box 2003  
12821 Skarpnäck  
46 08683 61 00 [www.schroff.se](http://www.schroff.se)

France  
Schroff Sas  
Z.I., 4 rue du Marais  
67660 Betschdorf  
33 03 88 90 64 90 [www.schroff.fr](http://www.schroff.fr)

Italy  
Schroff srl  
Viale Milano, 119  
21013 Gallarate (Varese)  
39 0331 79 40 03

Singapore  
Hoffman-Schroff Pte. Ltd.  
#01-68/71 German Centre  
25 International Business Park  
Singapore 609916  
65 5 62-78 90


Japan  
Schroff K.K.  
Nisso No. 13 Bldg. 4F  
2-5-1 Shinyokohama  
Kohoku-Ku, Yokohama shi  
Kanagawa 222-0033  
81 (045) 476-02 81

Finland  
Schroff Scandinavia AB  
Peräsimentie 8  
03100 Nummela  
358 09 222 68 00

Norway  
Schroff Scandinavia AB  
Bjøernerudveien 24  
1266 Oslo  
47 022 76 33 60

**WARNING**

To avoid electric shock, do not energize any circuits before all internal and external electrical and mechanical clearances are checked to assure that all assembled equipment functions safely and properly.

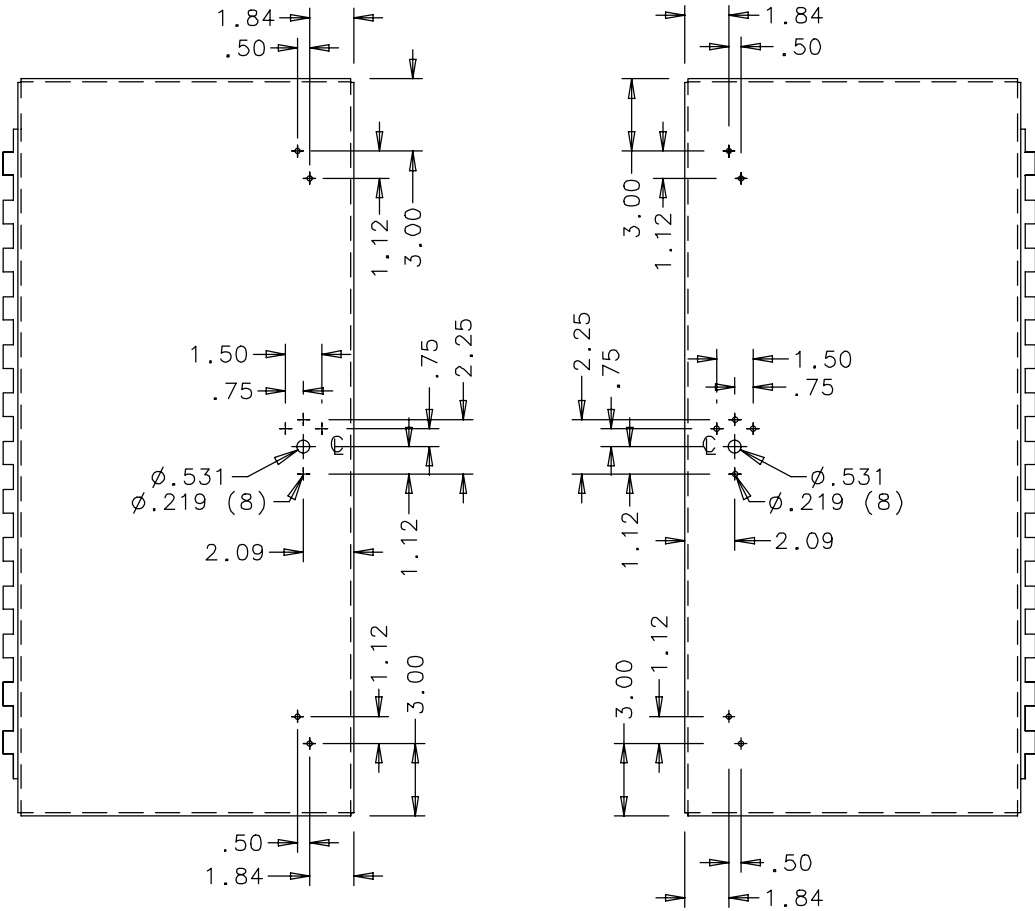


Door Hinged On Left

Door Hinged On Right

Installation Instruction For Single-Point Padlocking Handle Kit  
Catalog Number: AL36A

1. Locate and drill holes for the handle as shown. Do not drill holes for the rod guides.
2. Select latch the rod stop for correct handle rotation. Assemble the handle parts and the latch stop as shown.

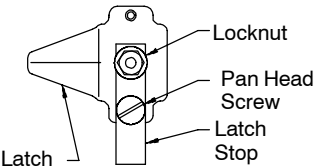

Installation Instruction For Three-Point Padlocking Handle Kit  
Catalog Numbers: AL36BR, AL36CR, AL36DR

1. Locate and drill the holes in the door from the outside edges using dimensions shown.
2. Select latch the rod stop for the correct handle rotation and install the latch kit as shown. Install the handle gasket on the outside of the door to obtain proper sealing. Latch rods are made to fit different size enclosures. If the latch rod(s) is too long, select the proper hole and cut the latch rods approximately 3/8 inch from the center of the desired hole as shown in detail "A". Be certain of the hole selection before cutting. Place roller pin in the hole shown and secure with the retaining ring. If the gasket compression is too great, simply move the roller one hole at a time until proper gasket compression is attained. Position spacers for the proper location of the latch. Three large washers are provided so the position of the latch can be adjusted by spacing it in or out as required.

