

Fuse Holders & Taps

Cooper Bussmann offers a complete line of fuse holders to install either blade-type or glass tube fuses. Choose water resistant and/or splash-proof versions for extra protection in special applications. Four types of connectors are available to meet the needs of technicians and do-it-yourselfers:

- **Wire Loop.** To install, simply cut the wire, strip ends and attach each end to the circuit. Requires the use of additional connectors.
- **Crimp-On.** Strip wire and insert into fuse holder. Crimp the connections tightly, and you're done. No additional hardware needed.

- **Self-Stripping.** Easy to install — simply locate fuse holder at a convenient spot along the wire. Snap fuse holder closed around wire to pierce insulation automatically.
- **Quick-Connect.** Attach fully insulated female push-on terminal onto the 1/4" quick-connect terminals.


When selecting a fuse holder, always match the device to the wire being fused. Using an undersized fuse holder will increase electrical resistance in the circuit and reduce performance. NOTE: Never install a fuse with a larger amp rating than specified for the holder.

Blade-Type Fuse Holders

In-Line Fuse Holders for ATM Fuses

Part No.	Blister Pack	Tri-Lingual Blister	Maximum Volts/Amps	Leadwire	Description
HHL	X		32V/20A	2x4"/#16	Holder with cover
HHM	X	X	32V/30A	2x4"/#12	Holder with cover
HHU	X		32V/30A	2x4"/#12	Water-resistant holder
ATM-FHID*		X	32V/20A	2x4"/#16	Illuminating holder


* For use with regular ATM fuses. For details on the easyD™ line of illuminating ATM blade fuses, see page 9.

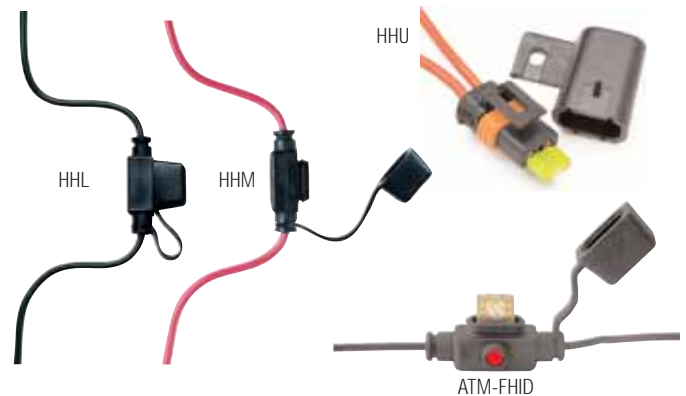

In-Line Fuse Holders for ATC Fuses

Part No.	Blister Pack	Tri-Lingual Blister	Maximum Volts/Amps	Leadwire	Description
HHC	X	X	32V/20A	2x4"/#16	Yellow water-resistant holder
HHD	X	X	32V/30A	2x4"/#12	Heavy-duty fuse holder
HHD-30	X		32V/30A	2x4"/#12	Holder with ATC-30A fuse
HHF	X		32V/20A	2x4"/#16	Holder with protective cover
HHG	X	X	32V/30A	2x4"/#12	Heavy-duty holder with cover
HHR	X		32V/30A	2x5"/#12	Heavy-duty water-resistant holder
HHS	X		32V/20A	#18 to #14	Self-stripping fuse holder
ATC-FHID*		X	32V/20A	2x6"/#16	Illuminating holder

* For use with regular ATC fuses. For details on the easyD™ line of illuminating ATC blade fuses, see page 9.

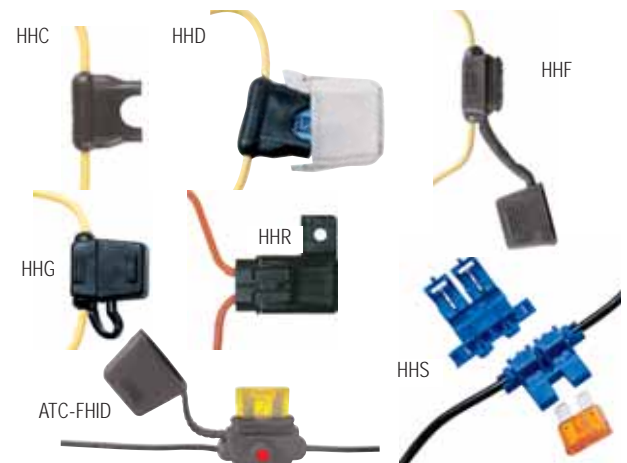

In-Line Fuse Holders for Maxi Fuses

Part No.	Volts/Amps	Leadwire	Description
HHX	32V/20-60A	2x5"/#6	Fuse holder with cover

