



## RS115-WCP

Switch Framed Toggle, Single Pole, Quiet Switch, 15A-120V AC, Residential Grade, Quickwire and Side-Wired, Terminal Clamps, Grounding Clip, Ground Screw, Color: White

Tried-and-true toggle designs, Leviton Residential Grade AC Quiet Switches cover all the bases; they install easily and are available in standard and illuminated versions. Their toggles and frames are constructed of impact-resistant thermoplastic, and they feature large head, hardened triple-drive screws for easy installation. Leviton's traditional switches are compatible with a wide range of Leviton plastic and metal wallplates.

### Technical Information

#### AC Horsepower Ratings

**HP Rating:** 1/2HP-120V

#### Electrical Specifications

**Voltage:** 120 VAC

**Amperage:** 15 A

**Max. Amperage:** 12 Amp

#### Material Specifications

**Actuator Material:** Thermoplastic

**Body Material:** Thermoplastic

#### Product Features

**Grounding:** Grounding

**Color:** White

**Warranty:** 2 Year Limited

**Strap Material:** Steel

**Feature:** Framed

**Termination:** Quickwire Push-In & Side

**Amperage:** 15 A

**Voltage:** 120 VAC

#### Standards and Certifications

**Standards and Certifications:** UL/CSA

**Color:** White

**UPC Code:** 07847746624

**Country Of Origin:** United States

### Features and Benefits

- The Leviton 15 Amp Single-Pole Quiet Switch controls lights from 1 location.
- Ideal for heavily-used areas like homes, offices, schools and commercial buildings, the switch features Quickwire push-in wiring and side wiring for fast installation.
- The included housing and screws provide durability.
- Controls light(s) from one location
- Robust housing and screws for increased durability
- Quickwire push-in and back and side wired for fast installation
- Self-grounding when installed in a properly grounded metal wall box

**ENGLISH**

**TO INSTALL:**

**WARNING:** TO BE INSTALLED AND/OR USED IN ACCORDANCE WITH APPROPRIATE ELECTRICAL CODES AND REGULATIONS.

**WARNING:** IF YOU ARE NOT SURE ABOUT ANY PART OF THESE INSTRUCTIONS, CONSULT AN ELECTRICIAN

**CAUTION:** USE THIS DEVICE WITH COPPER OR COPPER CLAD WIRE ONLY.

- WARNING:** TO AVOID FIRE, SHOCK, OR DEATH; TURN OFF POWER AT CIRCUIT BREAKER OR FUSE AND TEST THAT THE POWER IS OFF BEFORE WIRING!
- Remove insulation per strip gauge on device [about 5/8" (1.6 cm)].
- Connect wires per WIRING DIAGRAM as follows:

**To Side Wire:**


Loop wires clockwise 3/4 turn around terminal screws. GREEN or BARE (Ground) wire to GREEN screw, BLACK (Hot) wire to any terminal screw, other BLACK wire to remaining terminal screw. Firmly tighten screws over wire loops. Terminal screws accept up to #12 AWG copper or copper clad wire.

**To Quickwire™:**

Insert straight #14 AWG solid copper or copper clad wires into round Quickwire™ holes. Quickwire™ terminals accept #14 AWG solid copper or copper clad wires ONLY! For circuits with #12 AWG solid copper or copper clad wires, use terminal screws instead. To replace or rewire after Quickwiring, gently press the tip of a small screwdriver in the release slot and back the wire out gradually.

- Mount device using long mounting screws. Attach wallplate (not included).
- Restore power at circuit breaker or fuse. Installation is complete.

**WIRING DIAGRAM**  
SCHEMA DE CÂBLAGE  
DIAGRAMA DE CABLEADO

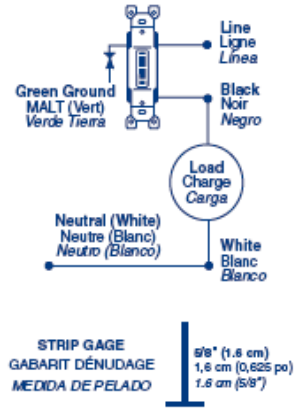

**FRANÇAIS**

**PROCÉDURE D'INSTALLATION :**

**AVERTISSEMENT :** INSTALLER OU UTILISER CONFORMÉMENT AUX CODES DE L'ÉLECTRICITÉ EN VIGUEUR.

**AVERTISSEMENT :** À DÉFAUT DE BIEN COMPRENDRE LES DIRECTIVES SUIVANTES, FAIRE APPEL À UN ÉLECTRICIEN.

**MISE EN GARDE :** N'UTILISER CE DISPOSITIF QU'AVEC DU FIL DE CUIVRE OU PLAQUÉ CUIVRE.

**1. AVERTISSEMENT :** POUR ÉVITER LES RISQUES D'INCENDIE, DE CHOC ÉLECTRIQUE OU DE BLESSURE MORTELLE, COUPER LE COURANT AU FUSIBLE OU AU DISJONCTEUR ET S'ASSURER QUE LE CIRCUIT SOIT BIEN COUPÉ AVANT DE PROCÉDER À L'INSTALLATION.

**2. Dénuder les fils conformément au gabarit apparaissant sur le dispositif [sur environ 1,6 cm. (5/8 po)].**

**3. Raccorder les fils conformément au SCHEMA DE CÂBLAGE, en procédant comme suit :**

**Câblage latéral :**

Enrouler les fils sur les bornes de trois quarts de tour vers la droite, le fil VERT ou DÉMUDÉ (Terre) à la borne VERTE, le fil NOIR (Acht) à n'importe quelle borne et l'autre fil NOIR à la borne restante. Serrer fermement les vis sur les fils. Les bornes acceptent les fils de cuivre ou plaqués cuivre d'un calibre pouvant atteindre 12 AWG.

**Câblage rapide Quickwire™ :**

Raldir et insérer les fils dans les orifices de câblage rapide. Les bornes Quickwire™ acceptent les fils en cuivre plein ou plaqués cuivre de calibre 14 AWG SEULEMENT! En présence de fils de cuivre ou plaqués cuivre d'un calibre de 12 AWG, se servir plutôt des raccords latéraux. Si la dispositif doit être remplacé ou recâblé, appuyer délicatement la pointe d'un petit tournevis sur la patte de dégagement et retirer graduellement les fils.

**4. Fixer le dispositif au moyen de longues vis de montage. Installer la plaque (non comprise).**

**5. Rétablir l'alimentation au fusible ou au disjoncteur. L'installation est terminée.**

**ESPAÑOL**

**PARA INSTALAR:**

**ADVERTENCIA:** PARA INSTALARSE Y/O USARSE DE ACUERDO CON LOS CODIGOS ELECTRICOS Y NORMAS APROPIADAS.

**ADVERTENCIA:** SI USTED NO ESTÁ SEGURO ACERCA DE ALGUNA DE LAS PARTES DE ESTAS INSTRUCCIONES, CONSULTE A UN ELECTRICISTA.

**PRECAUCIÓN:** USE ESTE PRODUCTO SÓLO CON CABLE DE COBRE O REVESTIDO DE COBRE.

**1. ADVERTENCIA:** PARA EVITAR DESCARGA ELECTRICA, FUEGO, O MUERTE, INTERRUMPA EL PASO DE ENERGIA MEDIANTE EL INTERRUPTOR DE CIRCUITO O FUSIBLE. ¡ASEGURESE DE QUE EL CIRCUITO NO ESTE ENERGIZADO ANTES DE INICIAR LA INSTALACION!

**2. Pèle los cables según la medida dibujada en el producto [aprox. 1.6 cm. (5/8)].**

**3. Conecte los cables según el Diagrama de Cableado como sigue:**

**Cableado Lateral**

Enrosque los alambres 3/4 de vuelta hacia la derecha alrededor de los tornillos terminales. Conecte el conductor VERDE O PELADO (A tierra) al tornillo VERDE, el NEGRO (Fase) a cualquier tornillo terminal, el otro conductor NEGRO al tornillo terminal que queda. Apriete los tornillos firmemente sobre el alambre enroscado. Los tornillos terminales aceptan cable de cobre o revestido de cobre hasta #12 AWG.

**Cableado Rápido (Quickwire™)**

Inserte los alambres de cobre o revestido de cobre # 14 AWG en los orificios redondos Quickwire™. Las terminales Quickwire™ SÓLO aceptan cable de cobre o revestido de cobre # 14 AWG. Para los circuitos con cable de cobre o revestido de cobre # 12 AWG, use los lados del producto. Si tiene que reemplazar o rehacer el cableado después de haber instalado terminales Quickwire, apoye suavemente la punta de un destornillador pequeño en la ranura de liberación y libere el cable gradualmente.

**4. Monte el producto usando los tornillos largos de montaje. Monte la placa de pared (no incluida).**

**5. Restablezca la corriente en el fusible o interruptor de circuito. La instalación está terminada.**

**SPECIFICATION SUBMITTAL**

JOB NAME: <input type="text"/>	CATALOG NUMBERS: <input type="text"/>
JOB NUMBER: <input type="text"/>	<input type="text"/>

**Leviton Manufacturing Co., Inc.**

201 North Service Road, Melville, NY 11747

Telephone: +1-800-323-8920 · FAX: +1-800-832-9538 · Tech Line (8:30AM-7:30PM E.S.T. Monday-Friday):

+1-800-824-3005

**Leviton Manufacturing of Canada, Ltd.**

165 Hymus Boulevard, Pointe Claire, Quebec H9R 1E9 · Telephone: +1-800-469-7890 ·

FAX: +1-800-824-3005 · www.leviton.com/canada

**Leviton S. de R.L. de C.V.**

Lago Tana 43, Mexico DF, Mexico CP 11290 · Tel.: (+52)55-5082-1040 · FAX: (+52)5386-

1797 · www.leviton.com.mx

Visit our Website at: [www.leviton.com](http://www.leviton.com)

© 2018 Leviton Manufacturing Co., Inc. All Rights Reserved. Subject to change without notice.

**Leviton has a global presence.**

If you would like to know where your local Leviton office is located please go to:

[www.leviton.com/international/contacts/](http://www.leviton.com/international/contacts/)

