



DC CEILING FAN

MODELS ICF72, ICF96

Made in Taiwan.

- INSTALLATION
- OPERATION
- MAINTENANCE
- WARRANTY INFORMATION



Need more help with your install?

Scan the QR code at left to watch our installation video, or visit the video directly by typing in the following link into your browser:

<https://youtu.be/b55PHe3E3rw>

Or call our Customer Service Line at 1-800-433-1626

CAUTION

**READ AND SAVE THESE INSTRUCTIONS FOR
SAFE INSTALLATION AND OPERATION.**

CONGRATULATIONS ON YOUR PURCHASE

Congratulations on purchasing the latest in energy saving ceiling fans. This fan runs on DC (direct current) power which gives it the benefit of being super energy efficient whilst still maintaining high volume air-movement and silent operation.

Energy Saving – The DC motor is the latest technology in fan design. Its highly efficient motor saves up to 65% more energy than ceiling fans with traditional AC motors.

Silent Operation – This DC fan motor is programmed with a stabilized current which efficiently reduces motor noise.


Low Operating Temperature – The DC power is managed effectively which brings down the motor operating temperature to less than 50degs. This results in a much cooler motor than a standard AC fan and increases the longevity of the motor.


6 Speed Remote Control – While regular AC ceiling fans usually come with only 3 speeds, this DC fan comes complete with a 6 speed remote, which gives greater choice of comfort levels.

SAFETY PRECAUTIONS

- 1) This appliance is NOT intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2) Children should be supervised to ensure that they do not play with the appliance.
- 3) An all-pole disconnection switch must be incorporated in the fixed wiring in accordance with the wiring rules.
- 4) Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.
- 5) The structure to which the fan is to be mounted must be capable of supporting a weight of 35 lbs.
- 6) The fan should be mounted so that the blades are at least 7 ½ feet above the floor.
- 7) The ceiling fan must be positioned in a location protected from water, wind, dust and salt. Exposure to these elements will void the warranty. Mounting the fan in a situation where it is subject to water or moisture is dangerous.
- 8) Only an authorized electrician should execute the installation.




- 9)  **WARNING:** To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device.

- 10)  **WARNING:** To Reduce The Risk Of Personal Injury, Do Not Bend The Blade Brackets When Installing The Brackets, Balancing The Blades, Or Cleaning The Fan. Do Not Insert Foreign Objects In Between Rotating Fan Blades.

- 11) Installation shall be in accordance with the National Electrical Code, ANSI/NFPA 70 and local codes.
- 12) To reduce the risk of electric shock, ensure electricity has been turned off at the circuit breaker or fuse box before beginning.
- 13) To avoid personal injury or damage to the fan and other items, be cautious when working around or cleaning the fan. Do not use water or detergents when cleaning the fan or fan blades. A dry dust cloth or lightly dampened cloth will be suitable for most cleaning.

BEFORE INSTALLATION

Unpack your fan and check contents. You should have the following:

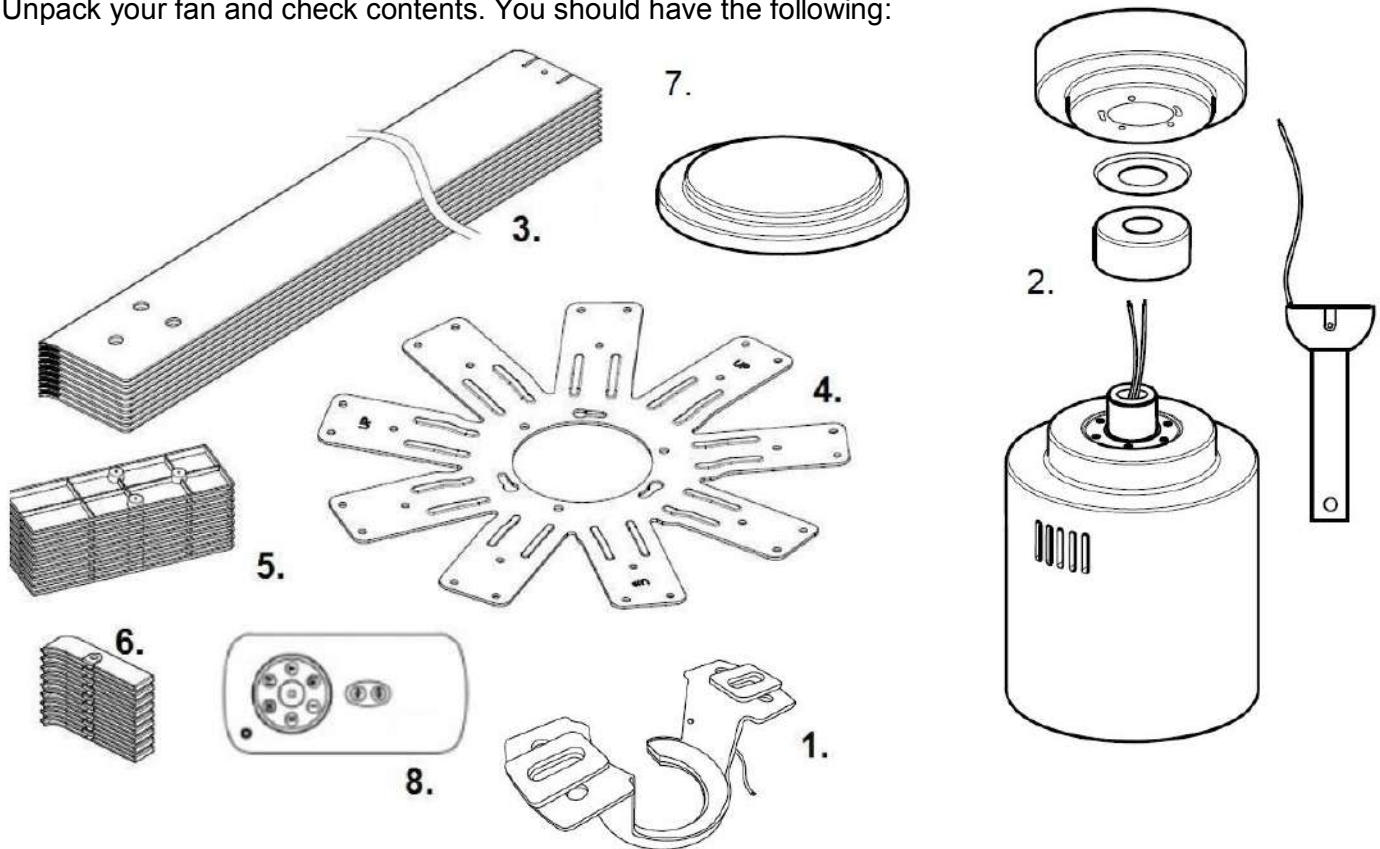

- | | | | |
|----------|--|-----------|--|
| 1 | Mounting bracket x 1 | 9 | Extra motor screws with spring washers x 7
1/4"-20 x 5/16" (<i>not shown</i>) |
| 2 | Fan assembly with canopy, canopy cover,
down rod and coupling cover x 1 | 10 | Blade screws with washers x 28
#10-24 x 1/4" (<i>not shown</i>) |
| 3 | Blades x 9 | 11 | Blade bracket kit screws x 10
#10-24 x 5/32" (<i>not shown</i>) |
| 4 | Blade holder x 1 | 12 | Wooden screws x 2
#10 x 1-1/2" (<i>not shown</i>) |
| 5 | Blade bracket kit x 9 | 13 | Balancing kits x 1 set (<i>not shown</i>) |
| 6 | Blade decorative kit x 9 | 14 | Screws for remote holder x 2
#4 x 1/2" (<i>not shown</i>) |
| 7 | Bottom cover x 1 | 15 | Down rod attachment screws x 2
#10-24 x 7/16" and retainer pin x 1 (<i>not shown</i>) |
| 8 | Remote transmitter with holder and
12V A23 battery x 1 set | 16 | Safety cable kit x 1 (<i>not shown</i>) |
| | | 17 | Wire nuts x 3 (<i>not shown</i>) |

INSTALLING THE FAN


TOOLS REQUIRED:

- Phillips / flat head screwdriver
- Pair of pliers
- Adjustable spanner
- Step ladder
- Wire cutter
- Wiring, supply cable as required by local provincial and national wiring codes and regulations.

INSTALLING THE MOUNTING BRACKET

The ceiling fan must be installed in a location so that the blades are 1 ft. spacing from the tip of the blade to the nearest objects or walls.

Secure the hanging bracket to the ceiling joist or structure that is capable of carrying a load of at least 35lbs., with two long screws provided. Ensure at least 1 ½ in. of the screw is threaded into the support.

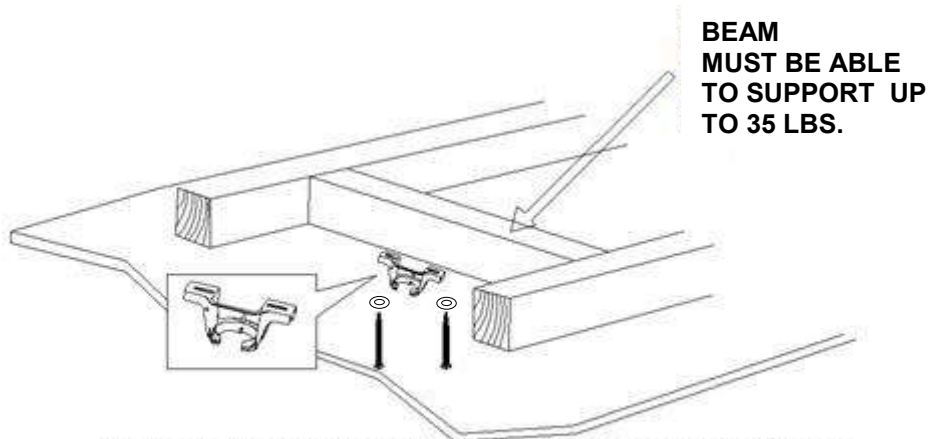

NOTE: THIS PICTURE IS FOR REPRESENTATION ONLY AND DOES NOT REPRESENT THE ACTUAL BRACKET.

Fig. 1

NOTE: The bracket screws provided are for use with wooden structures only. For structures other than wood, the appropriate screw type MUST be used.

ANGLED CEILING INSTALLATION

This fan hanging system supports a maximum 20 degree angled ceiling installation.



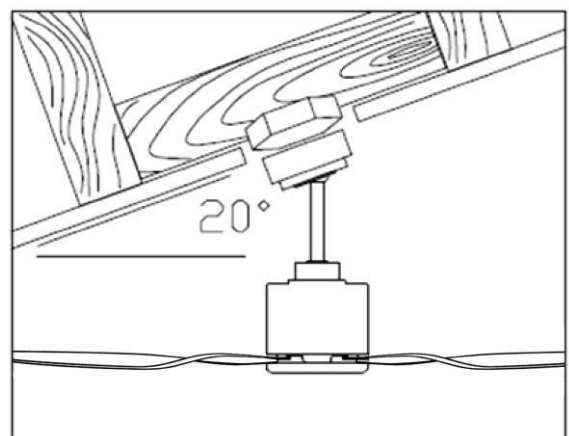




Fig. 2

DOWNROD AND HANGER ASSEMBLY

- Prior to assembly slide canopy (1A) and coupling cover (3A) onto downrod (2A). Canopy will be facing ceiling to cup over mounting bracket and Coupling Cover will face down to cover motor screws.

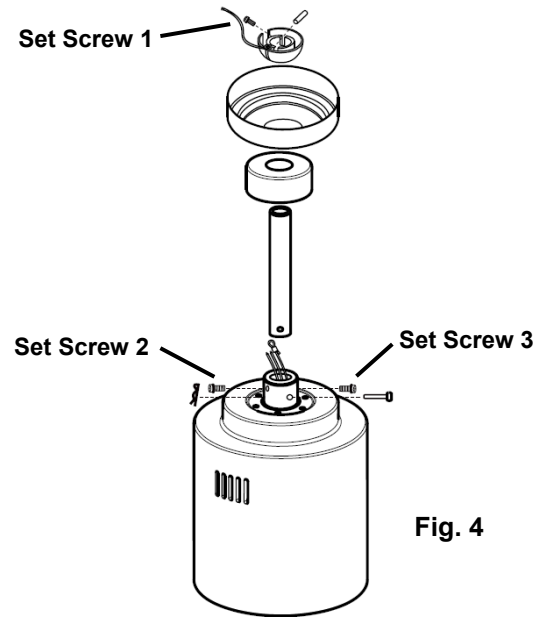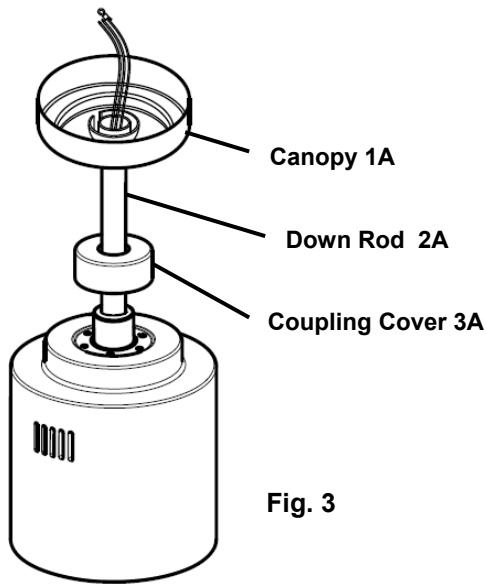

- Run the black and white wires and safety cable through the center of the downrod (2a). Use the gold keeper pin (Photo 7) to connect the motor to the downrod. Ensure the three set screws, shown above, are installed and tight. These screws prevent the torque of the motor from rotating the fan housing and causing a knocking sound during the fan startup process. **If you fail to tighten these screws the fan will seem to be out of balance.** These screws **MUST BE TIGHT.**

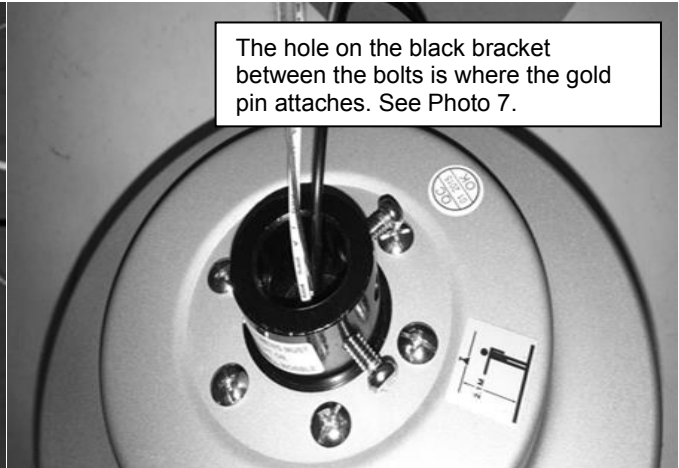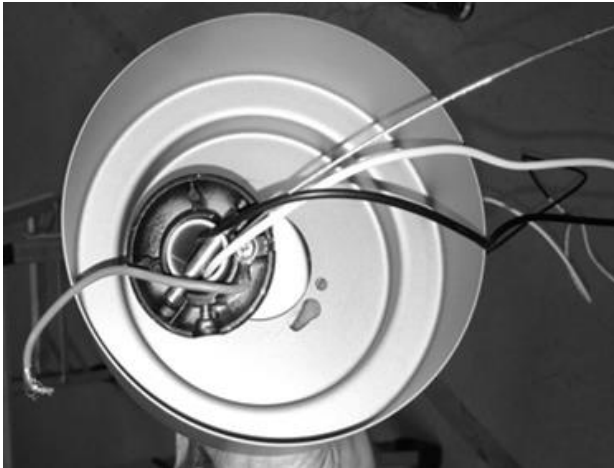

-
- Adjust the safety cable to the desired length. It is recommended to attach a safety cable near the mounting bracket to a secure mounting point to allow the canopy to cover the safety cable as well as the hanger.



Photo 8: Safety cable attached near hanger



Photo 9: Complete hanger assembly

HANGING THE FAN MOTOR ASSEMBLY

- Lift the fan assembly onto mounting bracket. Fig. 11
- The hanger bracket has two screws on the bottom with key holes that are designed to hold the cover. See Photo 10. When the holes are lined up, tighten the screws to keep the cover in place. Access to the screws are hidden by a plastic cover that snaps in or out. When the screws are tight, slide the plastic hide strip back up the downrod and snap back into place.



Photo 10:Key holes on the bottom of the canopy.

- Ensure the notch of the ball joint is positioned on the stopper of the mounting bracket to prevent the fan from rotating when in operation. Fig. 12



Fig. 11

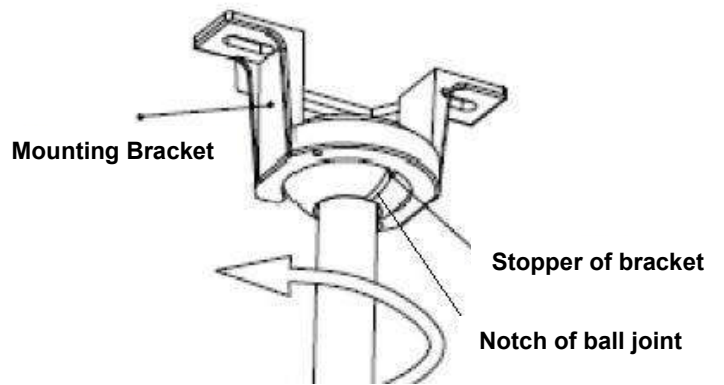


Fig. 12

PREPARE AND COMPLETE THE ELECTRICAL WIRING — WIRING DIAGRAM (FIG. 6)

WARNING: FOR YOUR SAFETY ALL ELECTRICAL CONNECTIONS MUST BE UNDERTAKEN BY A LICENSED ELECTRICIAN.

NOTE: AN ADDITIONAL WALL SWITCH MUST BE INCLUDED IN THE FIXED WIRING.

NOTE: IF THERE ARE TWO OR MORE DC CEILING FANS INSTALLED IN THE ONE LOCATION, AN ISOLATION SWITCH IS REQUIRED FOR EACH CEILING FAN. THIS IS REQUIRED WHEN PROGRAMMING THE REMOTE AND RECEIVER TO PAIR TOGETHER.


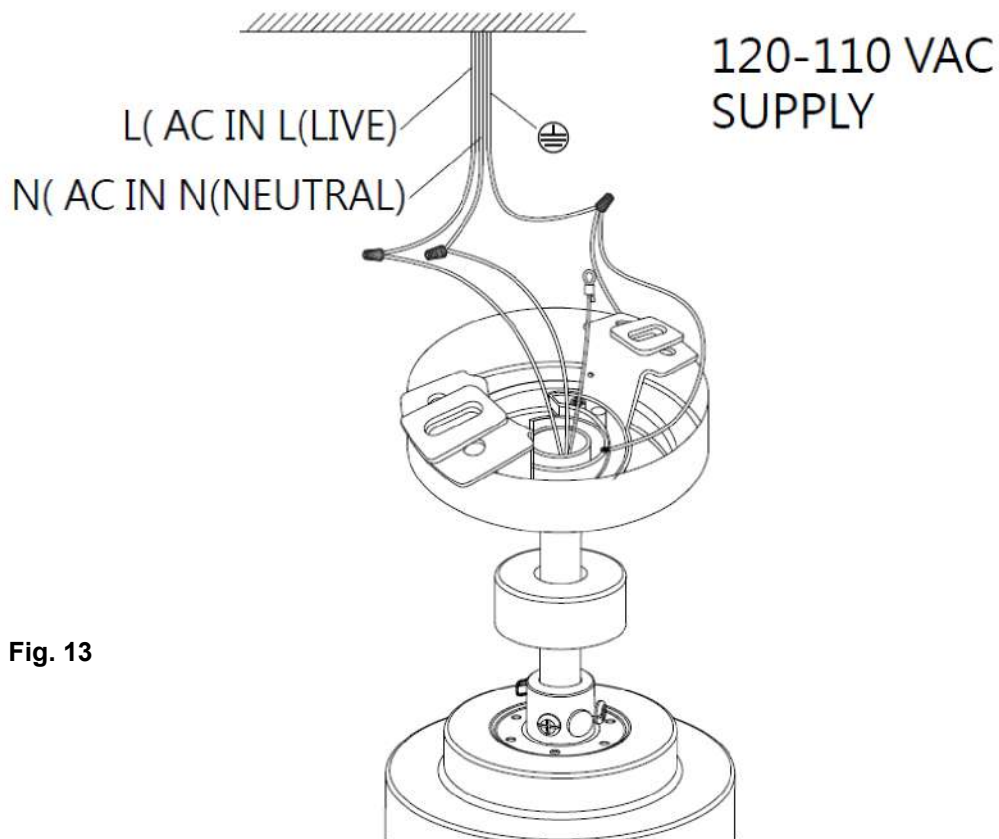


Fig. 13

INSTALL COUPLING COVER

- Loosen 2 screws from the bottom of the mounting bracket.
- Slide the canopy up to the mounting bracket and place the key hole on the canopy over the screw on the mounting bracket, turn canopy until it locks in place at the narrow section of the key holes, secure it by tightening the two set screws. Avoid damaging the electrical wiring prepared previously.
- Finally attach the Coupling Cover to canopy and secure it by pushing the lugs into the holes.

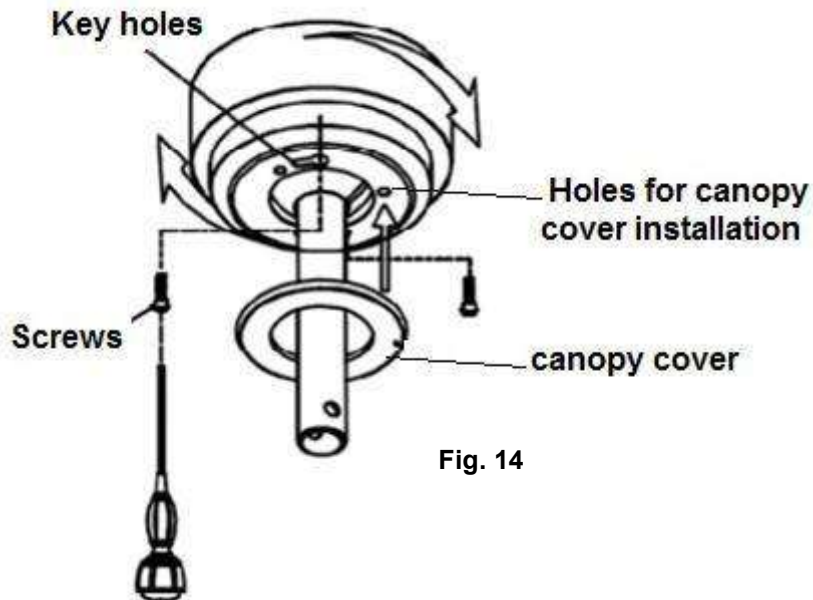

BLADE INSTALLATION

- Attach the blade holder to the motor by lining up the position label (1, Fig. 15) and secure it by tightening 6 screws (Fig. 16)
- Insert the blade screws through the blade assembly in the following order—blade holder, blade and blade bracket kit. Then secure the blade to the blade holder by tightening the 3 screws (Fig. 17).
- Push the blade decorative kit into the end of the blade and secure it by tightening the screw.
- Repeat to install the other blades to the blade holder.
- Finally install the bottom cover to the shaft of the motor by rotating it clockwise (Fig.18).

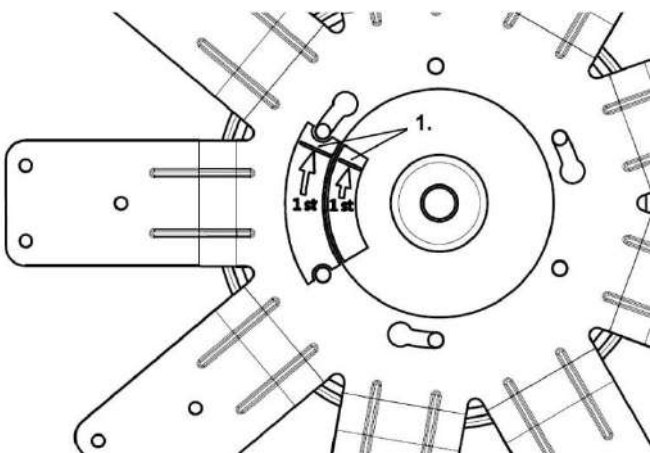


Fig. 15

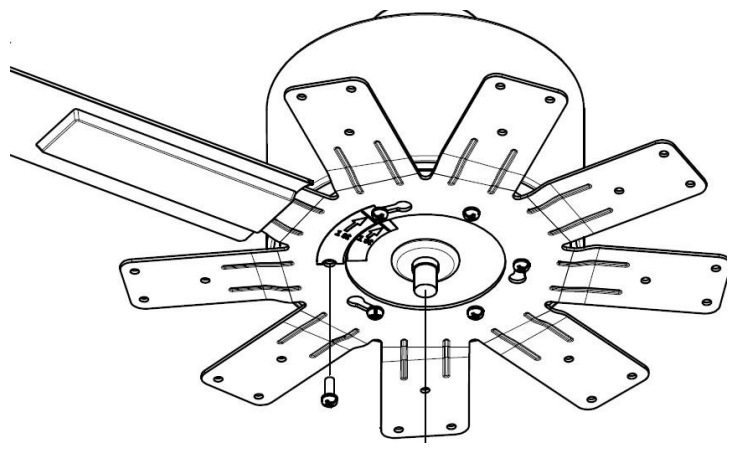


Fig. 16

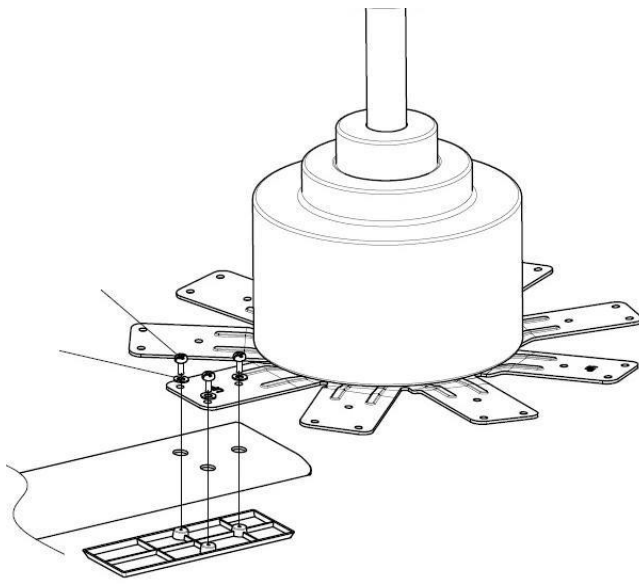


Fig. 17

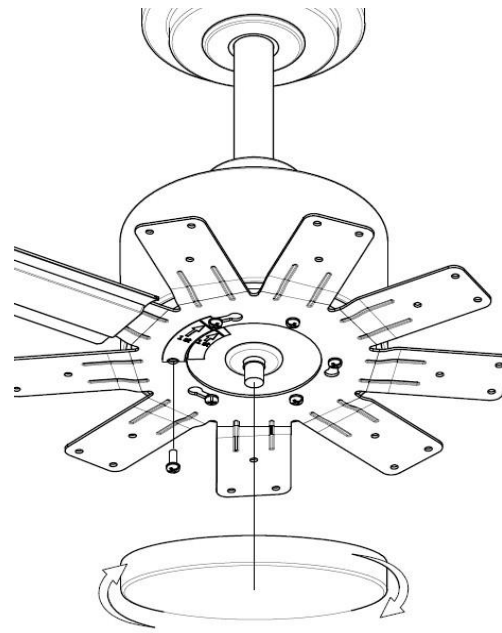


Fig. 18

USING YOUR CEILING FAN

Remote Control Buttons

① - FAN SPEED CONTROL BUTTON:

There are 6 available speeds. ① button is for the lowest speed, and ⑥ button is for the fastest speed.

NOTE: WHEN YOU TURN ON THE FAN FOR THE FIRST TIME OR SWITCH THE MAIN POWER TO THE CONTROLLER, YOU NEED TO START THE FAN ON HIGH “⑥” SPEED FIRST AND THEN CHOOSE A LOWER SPEED.

5-10 SECONDS IS REQUIRED TO ALLOW THE DC FAN TO RESPOND TO THE REMOTE’S SPEEDS OR FAN DIRECTION SELECTIONS, AS DC FANS INCORPORATE A SENSOR CONTROL WHICH CONTROLS THE POWER TO THE MOTOR.

② - FAN OFF BUTTON:

Press the button to turn the fan off.

③ - REVERSE FUNCTION BUTTON:

Press the button to activate the reverse running function. The fan must be operating to activate the reverse function.

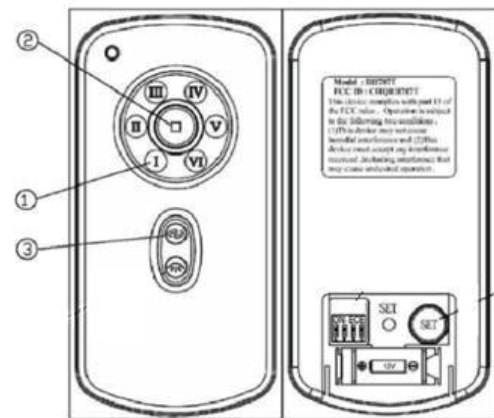


Fig. 19

THE RECEIVER PROVIDES THE FOLLOWING LEVEL OF PROTECTION AGAINST:

- ◆ Lock position: the receiver has a built in safety feature to protect against obstruction during operation. The motor will be locked from operation and will disconnect from power after 30 seconds of interruption. Please remove obstacles before re-starting. To reset, simply turn off the power supply to the fan motor and re-start.
- ◆ Over 80W protection: When the receiver detects power consumption which is greater than 80W, the receiver power will be stopped and operation will immediately discontinue. Turn the receiver power on after 5 seconds to restart the fan.

RE-PAIRING THE FAN RECEIVER & REMOTE PAIRING

Should the remote and receiver lose control after installation or during use, the pairing of the remote and the receiver must be re-paired. Below are the operating symptoms and method to re-pair the pairing of the DC ceiling fan remote and receiver.

Issues:

- ◆ Loss of control - Fan is only running at high speed after installation
- ◆ Loss of control - No reverse function after installation
- ◆ Loss of control - Remote cannot communicate with the receiver

Solution:

If the fan runs at the highest speed continuously, it means the wiring of the installation is correct. When the fan operates on high speed only, or fails to operate in reverse function or any other command/s, it is recommended to re-pair the communication pairing of the remote and receiver. Please follow the steps below:

- A. Remove the battery cover on the remote. Make sure the battery is installed correctly and the red LED light indicator will be flashing. This means the remote function is okay.



Fig. 20



Fig. 21

- B. Turn off the main power supply to the receiver for more than 30 seconds and turn on the main supply to receiver again. Press and hold the SET button on the remote for 6 seconds within 60 seconds of turning the power on to the receiver.



Fig. 22

- C. Press the buttons on the remote to run the fan. In general, performing point A, B, and C should re-pair the remote and receiver and will allow full control of the fan. If not, please do the next step.
- D. The DIP switches on the fans are set up at the factory. The DIP switch can be changed to any location in 16 options. (Eg. up-up-down-down).



Fig. 23



Fig. 24

- E. Please repeat the (A)-(C) steps to check the function.

If the issues still persist after following point (A) to (D) and there is still no control, then please contact the local retailer for a new remote or transmitter.

NOTE: For your safety, a new receiver must be installed by a licensed electrician.

NOTE: While re-pairing the DC ceiling fan remote and receiver is in process, the fan operates at highest speed with REVERSE mode automatically for 90 seconds, and then operates with FORWARD mode for 90 seconds. During the pairing process, do not press any key on the remote.

PAIRING REMOTES FOR MULTIPLE FAN INSTALLATION

Pairing Transmitter and Receiver – when 2 or more DC ceiling fans are installed in one location

When two or more fans are located near each other, you may want to have the receiver/transmitter for each fan set to a different code, so that the operation of one fan does not affect the operation of the other fans.

The DIP switches for the transmitter (remote hand piece) are located in the battery compartment of the transmitter. Configuring the DIP switches will allow a unique transmission code assigned to each fan ceiling.

NOTE: Ensure that you have installed a wall switch in the fixed wiring for each fan, when using DIP code function.

NOTE: Ensure power to the Receiver is **ON** prior to pairing the transmitter with the receiver.

Transmitter/Receiver pairing for ceiling fan 1:

- ◆ Turn off both ceiling fans 1 and 2 via the mains supply to the receiver.
- ◆ Slide the cover of the battery compartment of the transmitter to access the DIP switches. This will be transmitter 1.
- ◆ Change the position of the DIP switches in the remote transmitter 1, so that it will be different to transmitter 2. Fig. 25
- ◆ Install the 12VDC battery in the compartment. Please make sure the polarity of the battery is correct.
- ◆ Turn on the power to receiver 1. Keep the power OFF to receiver 2. (Each ceiling fan must have its own isolation switch, so that only the ceiling fan that needs to be paired with the transmitter will be ON).
- ◆ Press and hold the SET button of **transmitter 1** for 6 seconds within 60 seconds of switching the power to the receiver of ceiling fan 1.
- ◆ Now the transmitter should be paired with the receiver of ceiling fan 1. Turn ON/OFF or change the speed of ceiling fan 1 by the transmitter to check the operation.

Setting DC Ceiling fan 2:

- ◆ Turn off both ceiling fans 1 and 2 via the mains supply to the receiver.
- ◆ Slide the cover of the battery compartment of the transmitter to access the DIP switches. This will be transmitter 2.
- ◆ Change the position of the DIP switches in the remote transmitter 2, so that it will be different to transmitter 1. Fig. 25
- ◆ Install the 12VDC battery in the compartment. Please make sure the polarity of the battery is correct.
- ◆ Turn on the power to receiver 2. Keep the power OFF to receiver 1. (Each ceiling fan must have its own isolation switch, so that only the ceiling fan that needs to be paired with the transmitter will be ON).
- ◆ Press and hold the SET button of **transmitter 2** for 6 seconds within 60 seconds of switching the power to the receiver of ceiling fan 2.
- ◆ Now the transmitter should be paired with the receiver of ceiling fan 2. Turn ON/OFF or change the speed of the ceiling fan 2 by the transmitter to check operation.

Note: The pairing of Transmitter and Receiver is not required if only one ceiling fan is installed. When more than two ceiling fans are installed near each other, please refer to the instruction above.

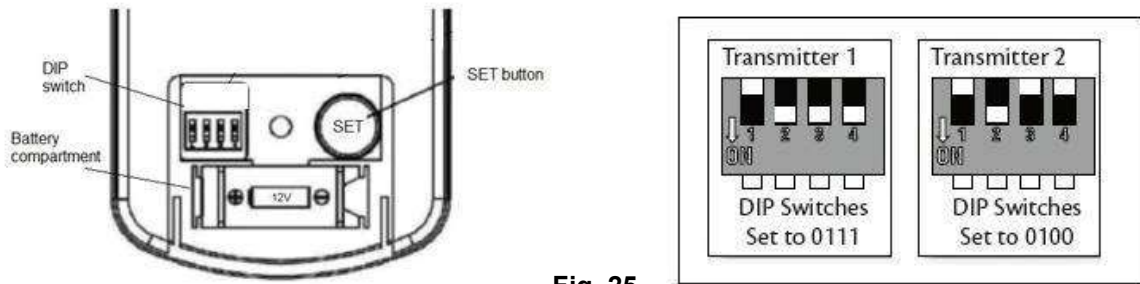


Fig. 25

BALANCING / WOBBLING TROUBLESHOOTING

Please note that not all ceiling fans are the same, even in the same model—some may move more or less than others. Movement of a couple of centimeters is quite acceptable and does not suggest that the fan will fall down.

Even though all blades are weighted and grouped by weight, it is impossible to eliminate wobble altogether. This should not be considered a fault. Ceiling fans tend to move during operation due to the fact that they are not generally rigidly mounted.

You may do the following action to reduce the wobbling:

- 1) Check all the blade mounting screws are tightened and securely.
- 2) Wobbling problems may result from inconsistent blade level. To check blade level, measure the distance from each blade tip to the ceiling.

Note: If measurements are inconsistent:

- Check that the blade mount screws are not over tightened or loose, which can cause the blade tip to not sit level;
- An out of shape blade can cause wobbling, check by removing the blade and lay it on a flat surface. A good flat blade will lay flat on the surface.

- 3) Blade tracking may be checked simply by use of a household ruler as shown in the below figure. Place the ruler vertically against the ceiling and even with the outside leading edge of a blade. Note the distance of the edge of a blade is the same as the others. Turn the blade slowly by hand to check the remaining blades. If a blade is not in alignment, the blade is either out of shape/warped or the blade screws are not evenly tightened or loose.

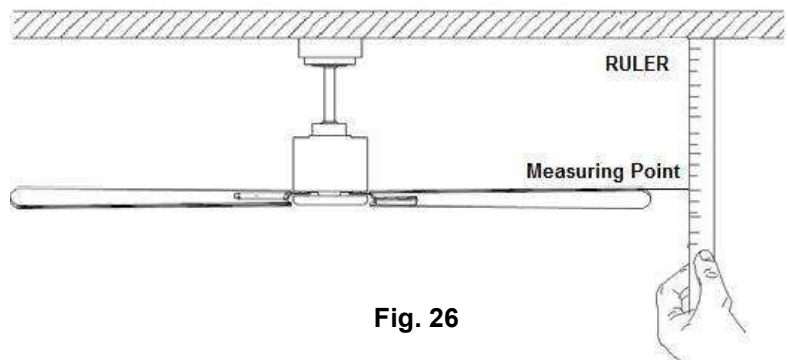


Fig. 26

BALANCING KIT

1. A balancing kit is provided to balance the ceiling fan on initial installation. Please refer to the instruction on how to use the balancing kit, that is included.
2. The balancing kit can be used to assist re-balancing if the ceiling fan becomes un-balanced overtime. Do not discard the balancing kit, retain for future use.

FAN CARE AND WARRANTY INFORMATION

- ◆ Periodic cleaning of your ceiling fan is the only maintenance required. Use a soft brush or lint free cloth to avoid scratching the paint/plated finish. Please make sure the fan is not operating when cleaning.
- ◆ Do not use water when cleaning your ceiling fan. It could damage the motor or the blades and create the possibility of an electrical shock.

WARRANTY SERVICE

The manufacturer's warranty covers actual faults that may develop, but NOT minor complaints, e.g. noise from motor run—ALL ELECTRIC MOTORS ARE AUDIBLE TO SOME EXTENT.

WOBBLE

- ◆ Ceiling fans tend to move during operation due to the fact that they are not generally rigidly mounted—if they were, they could generate excessive ceiling vibration and stress on their mountings.
- ◆ Movement of a couple of centimetres is quite acceptable and does not suggest the fan will fall down.
- ◆ Ceiling fans are mounted very securely on steel brackets with rubber cushioning or with ball-joints to allow free movement.
- ◆ Please note that not all ceiling fans are the same, even in the same model—some may move more or less than others.

NORMAL WEAR AND TEAR

Threaded components working slightly loose or blade carriers even slightly bent due to vigorous cleaning or bumping can cause extra wobble and noise. THIS IS NOT COVERED UNDER WARRANTY- but a little care and maintenance can reduce or prevent this problem.

BUMP-IN-THE-NIGHT

This is outside the manufacturer's warranty. If a fan has a fault, it will be noticeable at all times. Naturally, when everything is quiet at night, you will be more inclined to hear small noises which may not be noticeable at other times. Even slight power fluctuations and power mains frequency signals superimposed in your electricity supply may cause a change in fan motor noise, this is normal.

FAN LIGHT

Except for actual faults in manufacture, which are extremely rare, FAN LIGHTS AND GLOBES ARE NOT COVERED UNDER YOUR FAN WARRANTY. Noises and vibration etc. are often more accentuated when a fan light is fitted. For instance a fan light glass that has not been tightened or worked loose can cause a rattle. Again, care and maintenance will reduce this.

TROUBLESHOOTING CHECKLIST

Always check the “Troubleshooting Checklist” included in this booklet before calling for service.

For your safety, ensure the ceiling fan is OFF before carrying out any troubleshooting.

TROUBLE	PROBABLE CAUSES	SUGGESTED REMEDY
1. Fan will not start (Warning: The ceiling fan must be switched OFF and the assistance of a licensed electrician may be required.)	A. Fuse or circuit breaker blown.	Check main and branch circuit fuses or circuit breakers.
	B. Loose power connections to the fan. (Normally occurs during installation.)	Check power connection to the fan. This must be performed by a licensed electrician.
	C. No response from the remote transmitter.	- Battery is low. Replace batteries. - Check if correct remote transmitter is paired with the receiver.
	D. Switch the fan ON via the mains switch.	Check if there is power to the fan.
2. Fan Wobbles. (Refer to Wobble section of the manual for further information.)	A. Fan blades are not horizontal to the ceiling.	Refer to “wobbling fixing” section of manual. - The blade may require adjustment at the blade mounting screws. - The blade is out of shape, thus causing wobbling. A new blade set will be required to be replaced. Contact retailer for further details.
	B. Blade screws are loose.	Make sure all screws are securely fastened.
	C. Blades are out of shape.	Remove blade and lay on a flat surface to check if blades are out of shape. Contact retailer for further details.
3. Fan sound is noisy.	A. Top canopy is touching the ceiling.	Lower canopy from ceiling to ensure minimum 1/10 th in. clearance.
	B. Loose fan blade screws.	Re-tighten all screws on the fan blades but never over-tighten.
	C. Ceiling fan not secured against ceiling.	Re-tighten all screws in the hanging bracket or plate.
	D. Incorrect speed controller.	Change the controller to the one supplied. (Must be performed by a licensed electrician.)
4. Motor jogs during startup	A. Downrod set screws are loose.	Ensure all set screws on downrod are tight (3) total. Refer to pg. 4
5. Light will not turn ON. (Optional light kit ONLY.)	The globe/lamp has failed.	Replace globe/lamp.

WARNING: THE CEILING FAN MUST BE SWITCHED OFF BEFORE TROUBLE SHOOTING IS PERFORMED.

NOTES TO INSTALLERS

- ◆ Some fans wobble more than others—even in the same model.
- ◆ Fan lights can rattle but are not covered under warranty.
- ◆ Fan wall controllers make a slight buzzing noise and get warm especially on a lower setting. These occurrences are not covered by the manufacturer’s warranty.

TECHNICAL INFORMATION

DC FAN models	Rated Voltage	Rated power (motor)	Battery for remote
ICF72 – 72 in. ceiling fan	110VAC	35W	1 x 12V 23AE
ICF96 – 96 in. ceiling fan	110VAC	35W	1 x 12V 23AE

WARRANTY CONDITIONS

Ventamatic, Ltd. extends this warranty to the original retail purchaser of its model or, if this unit is purchased and installed by a building contractor, then to the original owner of the home. No subsequent purchaser of the unit or of a home in which it is installed is entitled to any of the benefits of this warranty.

This product is warranted against defects in materials and workmanship for a period of one (1) year from the date of original retail purchase. No other parts or components are warranted. There is no warranty for defects caused by abuse, faulty installation, or the like. Repairs or replacement parts supplied under this warranty are warranted only for the period of this warranty; that is, one (1) year from the date of the original retail purchase of the unit.

In the event of a defect or malfunction, we will replace or repair the defective part or component only and return the new or repaired part to you freight prepaid. You must bear all other expenses incurred in obtaining repairs, including labor required for field repair or replacement, and the cost of shipping the defective part to us. You must also bear the cost of repair to or replacement of any part or component and the shipping charges incurred for the repair or replacement and return to you of any part or component not covered by this warranty, including parts or components damaged by you.

The company reserves the right to demand and receive written evidence of the date of purchase before undertaking to perform its obligations under this warranty. You should, therefore, retain your sales slip and attach a copy of it to the warranty claim.

In order to obtain the repair or replacement of this unit, you must select one of the following methods:

A. Return to factory.

Return postage prepaid only the part or component which you believe to be defective to the following address:

Ventamatic, Ltd
100 Washington Street
Mineral Wells, TX 76067

Complete and enclose a written claim and attach a copy of your sales slip or other proof of purchase.

B. Return to place of purchase.

It is suggested that you first contact the dealer to ascertain if they will honor the warranty.

There is no informal dispute settling mechanism available in the event of a controversy involving this warranty.

Any and all implied warranties which may exist terminate upon the expiration of this warranty one (1) year from the date of the original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you.

Ventamatic, Ltd. is not liable to you for incidental or consequential damages arising out of a defect or malfunction of a unit or its installation or out of any alleged breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.