


Auxiliary Input Adapter for 17xx Power and Energy Loggers

Instructions

Introduction

The Auxiliary Input Adapter (or Product) is an accessory for the 17xx Power and Energy Loggers. It allows connection of up to two sensors for analog measurements. These measurements include temperature, pressure, and level with an output voltage of 0 V dc to 10 V dc or a current loop of 4 mA to 20 mA (with additional shunt). Alternately, up to two dc voltage inputs in the range of 1 V dc to 1000 V dc can be used for other applications such as solar energy systems.

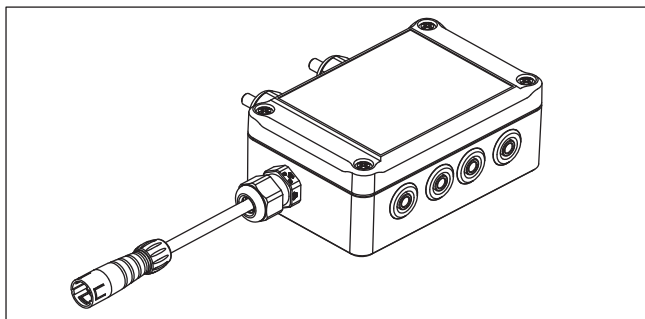

How to Contact Fluke

To contact Fluke, call one of the following telephone numbers:

- Technical Support USA: 1-800-44-FLUKE (1-800-443-5853)
- Calibration/Repair USA: 1-888-99-FLUKE (1-888-993-5853)
- Canada: 1-800-36-FLUKE (1-800-363-5853)
- Europe: +31 402-675-200
- Japan: +81-3-6714-3114
- Singapore: +65-6799-5566

Anywhere in the world: +1-425-446-5500

Or, visit Fluke's website at www.fluke.com.

To register your product, visit <http://register.fluke.com>.

To view, print, or download the latest manual supplement, visit <http://us.fluke.com/usen/support/manuals>.

Safety Information

A **Warning** identifies conditions and procedures that are dangerous to the user. A **Caution** identifies conditions and procedures that can cause damage to the Product or the equipment under test.

Warnings

To prevent possible electrical shock, fire, or personal injury:

- Read all safety information before you use the Product.
- Carefully read all instructions.
- Use the Product only as specified, or the protection supplied by the Product can be compromised.
- Do not touch voltages >30 V ac rms, 42 V ac peak, or 60 V dc.

- **Comply with local and national safety codes. Use personal protective equipment (approved rubber gloves, face protection, and flame-resistant clothes) to prevent shock and arc blast injury where hazardous live conductors are exposed.**
- **Do not use the Product around explosive gas, vapor, or in damp or wet environments.**
- **Limit operation to the specified measurement category, voltage, or amperage ratings.**
- **Do not use test leads if they are damaged. Examine the test leads for damaged insulation, exposed metal, or if the wear indicator shows. Check test lead continuity.**
- **Remove the input signals before you clean the Product.**
- **Use only cables with correct voltage ratings.**
- **Do not exceed the Measurement Category (CAT) rating of the lowest rated individual component of a Product, probe, or accessory.**
- **Do not use the Product if it is damaged.**
- **Disable the Product if it is damaged.**
- **Disconnect test leads before opening the housing.**


Symbols

Symbol	Description
	WARNING. RISK OF DANGER.
	WARNING. HAZARDOUS VOLTAGE. Risk of electric shock.
	Consult user documentation.
	Double Insulated
	Earth
CAT II	Measurement Category II is applicable to test and measuring circuits connected directly to utilization points (socket outlets and similar points) of the low-voltage MAINS installation.
CAT III	Measurement Category III is applicable to test and measuring circuits connected to the distribution part of the building's low-voltage MAINS installation.
CAT IV	Measurement Category IV is applicable to test and measuring circuits connected at the source of the building's low-voltage MAINS installation.
	Conforms to European Union directives.
	Certified by CSA Group to North American safety standards.
	Conforms to relevant Australian Safety and EMC standards.
	This product complies with the WEEE Directive marking requirements. The affixed label indicates that you must not discard this electrical/electronic product in domestic household waste. Product Category: With reference to the equipment types in the WEEE Directive Annex I, this product is classed as category 9 "Monitoring and Control Instrumentation" product. Do not dispose of this product as unsorted municipal waste.

Direct Input 0 V DC to 10 V DC Configuration

To connect the Adapter:

1. Make sure that all 4 mm safety test leads are disconnected.
2. Loosen the 4 captive screws **2** and remove the lid **1** to open the housing.

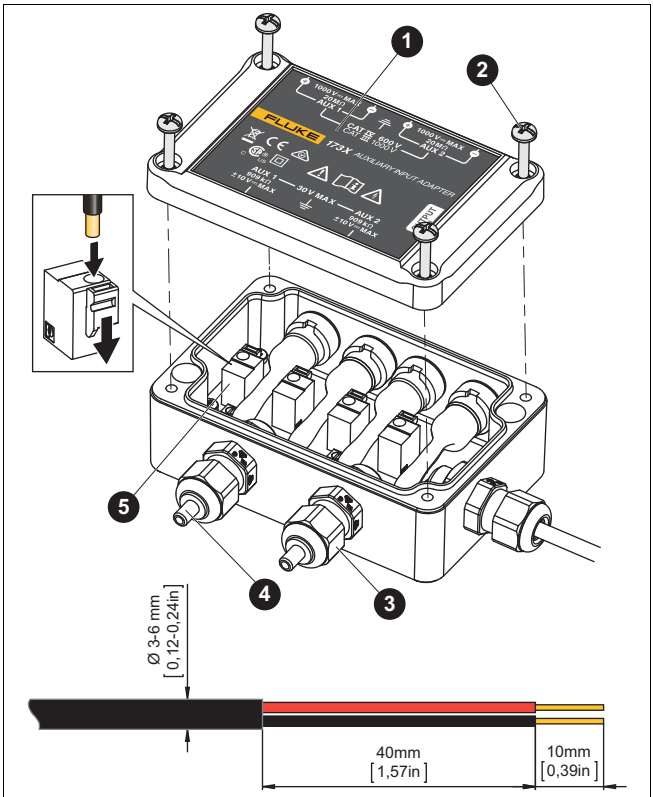

3. Cut and strip the cable.
4. Open the grommet strain relief **3** and remove the dummy plug **4**.

Note

The dummy plug or a cable must be installed to achieve the ingress protection of IP50.

5. Insert the sensor cable through the strain relief ❸.
The cable diameter must be in the range of 3 mm to 6 mm to ensure proper strain relief.
6. Tighten the strain relief.
7. To connect the wires to the terminals ❺, press the opening lever.
8. Correctly orient the lid ❶ and close the housing.
9. Tighten the captive screws ❷.

Note

Pay attention to the correct orientation of the lid.

10. Connect the 4-pin connector (not shown) to the Logger.
11. Configure the AUX channel on the Logger to show the correct readings and unit of measurement for the attached sensor. For more information, see the documentation for the Logger and the Sensor.

Voltage Divider Input

1 V DC to 1000 V DC Configuration

To connect the Adapter:

1. Use correctly rated 4 mm test leads on the safety socket inputs.

Note

Do not connect a signal at the direct input and voltage divider input at the same time. The measured value will be incorrect.

2. Connect the 4-pin connector to the Logger.
3. Configure the AUX channel on the Logger to show the correct readings, select an available custom configuration (Custom 1 to Custom 5), and use these settings:
 - Sensor: 0-10 V
 - Unit: V
 - Minimum: 0 V
 - Maximum: 1000 V

How to Clean

Clean the Product with a soft cloth, mild soap, and water.



To avoid damage, do not clean with abrasives or solvents.

Specifications

General

Calibration Cycle	2 years
Warranty	1 year
Dimensions	119 mm x 86 mm x 38 mm (4.69 in x 3.39 in x 1.5 in)
Weight	280 g (0.6 lb)
Output Cable Length	1.9 m (6.2 ft)

Electrical

Direct input	
Voltage	0 V dc to ± 10 V dc
Input Impedance	909 k Ω (see block diagram for details)
Cable Diameter	3 mm to 6 mm
Connection	Spring-loaded terminal for solid or braided wires minimum: 0.2 mm ² (AWG 24) maximum: 1.5 mm ² (AWG 16)
Voltage Divider Input	
Voltage	0 V dc to ± 1000 V dc
Input Impedance	20 M Ω (see block diagram for details)
Connector	4 mm safety socket

Accuracy

Input	Range	Intrinsic Accuracy Aux Adapter + Instrument (% of Reading + % of Range)
Direct Input	±10 V	see instrument specification
Voltage divider input	±1000 V	±(0.5% + 0.002%)
Note: Environmental Reference Conditions: 23 °C ±5 °C, instrument operating for at least 30 minutes, no external electrical/magnetic field, RH <65 %.		

Temperature Coefficient

- Direct Input See specification for Logger
- Voltage Divider Input 150 ppm/°C (for temperatures <18 °C and >28 °C)

Safety

Direct Input

- Maximum Voltage between Direct Input Terminals and Earth Ground 30 V

Voltage Divider Input

- Maximum Voltage between 4 mm Safety Socket and Earth Ground 1000 V
- IEC61010-1 Pollution Degree 2
- IEC61010-2-030 CAT III 1000 V


Environmental

- IP Rating IEC 60529:IP50
- Temperature
 - Operating -10 °C to +50 °C (14 °F to 122 °F)
 - Storage -20 °C to +60 °C (-4 °F to +140 °F)
- Operating Humidity <10 °C (<50 °F) non condensing
 - 10 °C to 30 °C (50 °F to 86 °F) ≤95 %
 - 30 °C to 40 °C (86 °F to 104 °F) ≤75 %
 - 40 °C to 50 °C (104 °F to 122 °F) ≤45 %

Altitude

- Operating ≤2000 m (>2000 m to ≤4000 m, derate to CAT IV 300 V / CAT III 600 V / CAT II 1000 V)
- Storage 12 000 m

Block Diagram

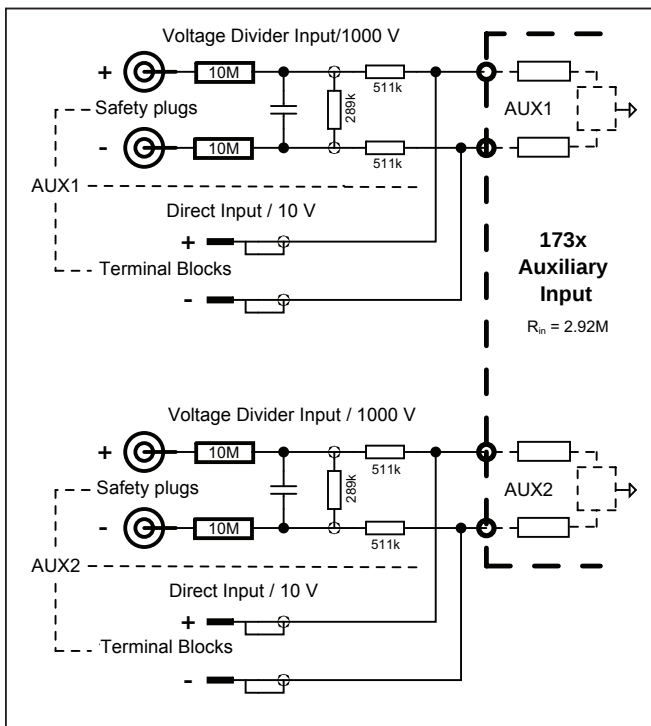

LIMITED WARRANTY AND LIMITATION OF LIABILITY

This Fluke product will be free from defects in material and workmanship for one year from the date of purchase. This warranty does not cover fuses, disposable batteries, or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Fluke's behalf. To obtain service during the warranty period, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that Service Center with a description of the problem.

THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. FLUKE IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

Fluke Corporation
P.O. Box 9090
Everett, WA 98206-9090
U.S.A.

Fluke Europe B.V.
P.O. Box 1186
5602 BD Eindhoven
The Netherlands