

Installation Instructions 3701A3 Loadbreak Bushing Insert

CONTENTS: Loadbreak Bushing Insert, Lubricant (Do Not Substitute), Installation Instructions.

The 3701A3 is designed to provide the apparatus interface for Elastimold 35KV class (21.1kV phase-to-ground and 36.6kV phase-to-phase) loadbreak connectors. This bushing provides a venting ring for improved switching performance and is identified by a white button installed on one grounding eye.

DANGER

All apparatus must be de-energized during installation or removal of part(s). For loadbreak products follow operating instructions.

All apparatus must be installed and operated in accordance with individual user, local, and national work rules. These instructions do not attempt to provide for every possible contingency.

Do not touch or move energized products by hand.

Excess distortion of the assembled product may result in its failure.

Contact with solvents, transformer oil, motor oil and similar substances will degrade jacket conductivity and insulation level if not immediately wiped off.

Inspect parts for damage, rating and compatibility with mating parts.

This product should be installed only by competent personnel trained in good safety practices involving high voltage electrical equipment. These instructions are not intended as a substitute for adequate training or experience in such safety practices.

Failure to follow these instructions will result in damage to the product and serious or fatal injury.

If this product is supplied with a protective shipping cover(s), remove this shipping cover(s) and replace with the appropriate HV insulated cap(s) or connector(s) before submerging or energizing the circuit.


FOR MORE INFORMATION ON PARTS, INSTALLATION RATINGS AND COMPATIBILITY, CALL THE NEAREST ELASTIMOLD OFFICE.

IMPORTANT

1. Check contents of package to insure they are complete and undamaged.
2. Check all components to insure proper fit with cable and/or mating products.
3. Read entire installation instructions before starting.
4. Have all required tools at hand and maintain cleanliness throughout the procedure.


STEP 1

Inspect the apparatus bushing well to ensure it is dry and free from all contaminants. Remove the protective shipping cap from the bushing insert. Lubricate the bushing well interface area of the bushing insert with the supplied lubricant or ELASTIMOLD approved lubricant. **DO NOT SUBSTITUTE.** Other lubricants may be harmful to this product and its mating products.

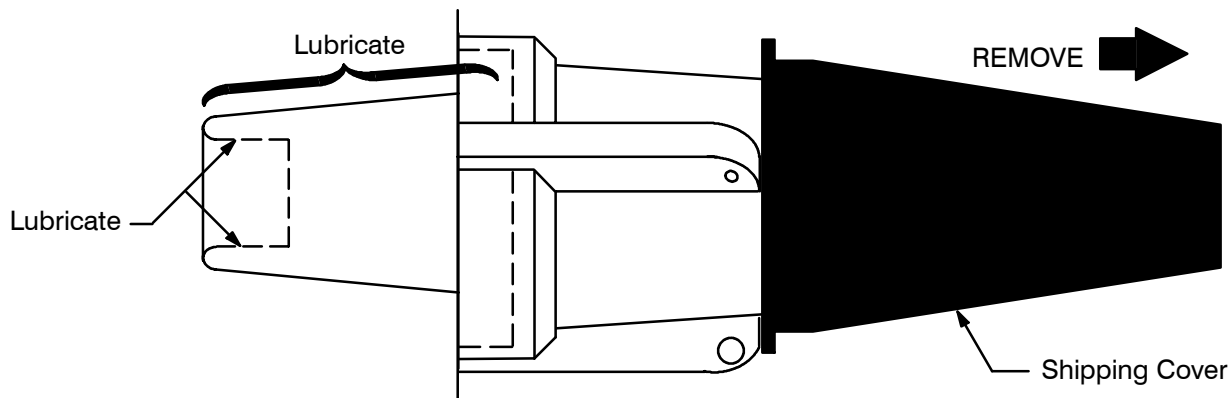**ELASTIMOLD**

STEP 2

Place the lubricated portion of the bushing insert in the apparatus bushing well. Hand tighten the bushing insert in a clockwise direction until it bottoms.

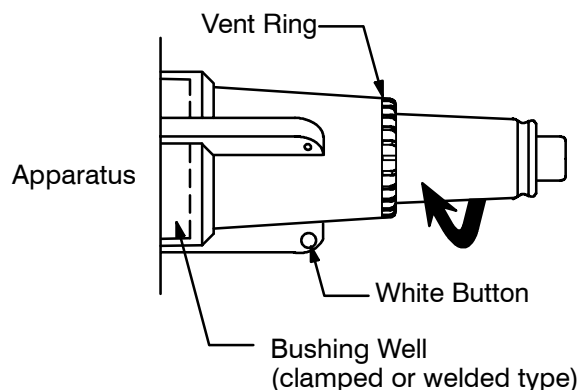


STEP 3

Push a length of copper wire, No. 14 AWG (2,5mm²) or equivalent, through one of the grounding tabs on the bushing insert. Make a small loop and twist tight, taking care not to damage the grounding tab. Connect free end of electrostatic grounding wire to the system ground using a suitable connector.


The electrostatic grounding wire should be installed in such a manner so as not to contact the bushing interface or adjacent bushing interfaces or interfere with the placement of accessories on nearby parking stands.

This step provides assurance that the insulation shield on the bushing insert is grounded.

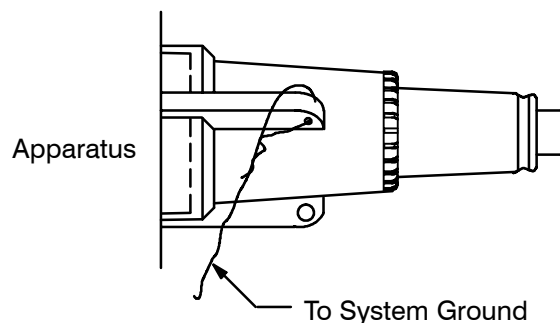

STEP 4

Thoroughly wipe the bushing interface clean of any contaminants and lubricate with the supplied lubricant. Install the mating products to the bushing insert following the instructions supplied with the mating products. **Complete assembly of an elbow is indicated by alignment of the end of the elbow cuff with the ground tab of the bushing insert. If the bushing insert is not to be immediately mated with an elbow connector, insulated cap or grounding elbow connector, replace the shipping cover. Do not energize or submerge the apparatus with the shipping cap on the bushing insert.** This is a protective cap only which is not insulated or water tight and only intended to keep the bushing surfaces clean during handling and installation.

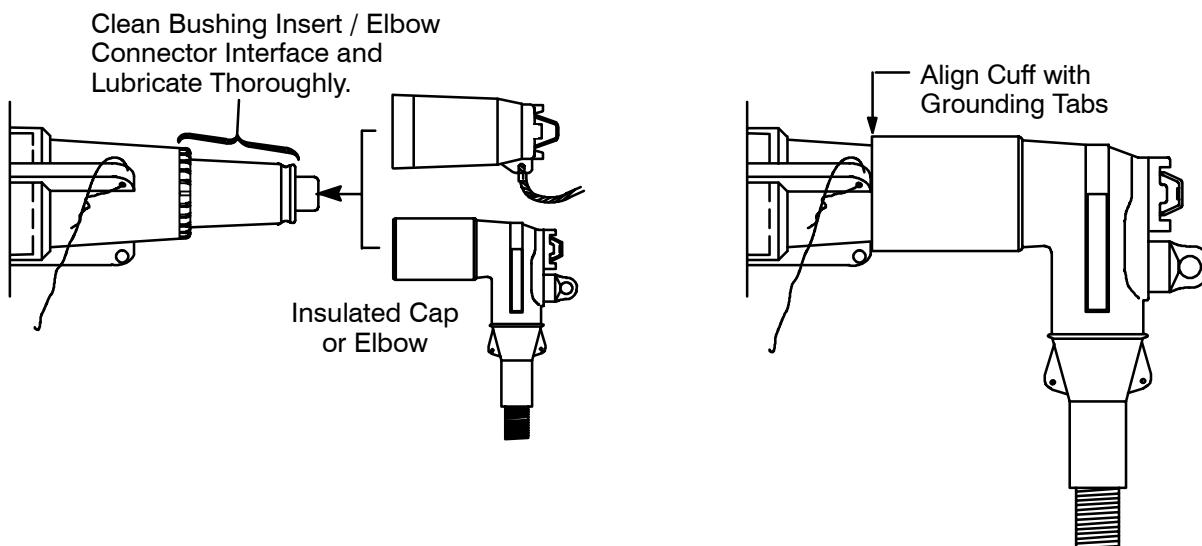

ELASTIMOLD

Esna Park Drive, Hackettstown, New Jersey 07840 USA
(908)852-1122 FAX: (908)813-2147
A Unit of Thomas & Betts Corporation